

Relaxdays 10024270_49

Relaxdays Retro Articulated Desk Lamp - Instruction Manual

Model: 10024270_49

1. PRODUCT OVERVIEW

The Relaxdays Retro Articulated Desk Lamp provides essential illumination for various environments. Its flexible articulated arm and adjustable inclination angles make it suitable for focused lighting on a desk, as a reading lamp, or as a bedside light. The industrial design, featuring flexible steel springs and a metal lampshade, evokes classic architect and task lamps.

Key features include:

- **3 Articulations:** Mobile desk lamp with a pivoting articulated arm for bright light during work.
- **Versatile Use:** Functions as a reading lamp, work lamp, or bedside lamp.
- **Retro Industrial Design:** Classic architect lamp style with flexible steel springs and a metal lampshade.
- **Optimal Illumination:** Various adjustments ensure optimal lighting coverage.
- **Integrated Switch:** Power cable includes an inline switch for convenience.





Image 1.1: The Relaxdays Retro Articulated Desk Lamp in white, showcasing its classic design.

2. SAFETY INSTRUCTIONS

Please read and understand these safety instructions before using the lamp. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the lamp is placed on a stable, flat surface to prevent tipping.
- Do not exceed the maximum wattage specified for the bulb (E27, max. 40W).
- Always unplug the lamp from the power outlet before cleaning or changing the bulb.

- Keep the lamp away from water or other liquids. Do not use in damp environments.
- Do not cover the lampshade or bulb with flammable materials.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This lamp is for indoor use only.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and in good condition. The package should contain:

- 1 x Relaxdays Retro Articulated Desk Lamp

Note: Light bulbs are not included and must be purchased separately. Decorative items shown in product images are also not included.

4. SETUP AND ASSEMBLY

The Relaxdays Retro Articulated Desk Lamp comes largely pre-assembled. Follow these steps for initial setup:

1. **Placement:** Choose a stable and flat surface for the lamp, such as a desk or bedside table. Ensure there is enough space for the articulated arm to move freely.
2. **Bulb Installation:** Unscrew the lampshade to access the E27 socket. Carefully screw in an E27 bulb (maximum 40W) into the socket. Do not overtighten.
3. **Power Connection:** Plug the power cable into a suitable 220-240V electrical outlet.



Image 4.1: Detail of the E27 bulb socket, showing where to install the light bulb.



Image 4.2: The power cable features an inline switch and a standard European plug.

5. OPERATING INSTRUCTIONS

Using your Relaxdays Desk Lamp is straightforward:

1. **Turning On/Off:** Locate the inline switch on the power cable. Press the switch to turn the lamp on or off.
2. **Adjusting Position:** The lamp features three articulated joints and a 360° rotatable lampshade and arm. Gently adjust the arm and shade to direct the light as needed. The height is adjustable from approximately 27 cm to 60 cm.



Image 5.1: The lampshade can be rotated 360 degrees for flexible light direction.



Image 5.2: The lamp's height is adjustable, ranging from 27 cm to 60 cm, with a base diameter of 15 cm.

6. MAINTENANCE

To ensure the longevity and proper functioning of your lamp, follow these maintenance guidelines:

- **Cleaning:** Disconnect the lamp from the power supply before cleaning. Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the finish.
- **Bulb Replacement:** Always ensure the lamp is unplugged and the bulb has cooled down before attempting to replace it.
- **Inspection:** Periodically check the power cord and plug for any signs of damage. If damage is found, discontinue use and contact a qualified electrician for repair or replacement.

7. TROUBLESHOOTING

If you encounter issues with your lamp, refer to the following common problems and solutions:

- **Lamp does not turn on:**

- Check if the lamp is properly plugged into a working power outlet.
- Ensure the inline switch is in the 'ON' position.
- Verify that the light bulb is correctly installed and not burnt out. Replace the bulb if necessary.
- Check the power cord for any visible damage.

- **Light flickers:**

- Ensure the bulb is screwed in tightly.
- Try a different bulb to rule out a faulty bulb.

If the problem persists after trying these steps, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Relaxdays
Model Number	10024270_49
Dimensions (H x W x D)	Approx. 50 x 27 x 15 cm
Adjustable Height	Approx. 27-60 cm
Lampshade Dimensions (H x Ø)	Approx. 12 x 12 cm
Weight	1.12 kg
Material	Metal
Color	White
Bulb Base	E27
Max. Wattage	40 W
Voltage	220-240 V
Cable Length	Approx. 1.30 m
IP Rating	IP00
Switch Type	Toggle (Inline)

9. DISPOSAL INFORMATION

This section provides important information for private households regarding the disposal of electrical and/or electronic equipment.

9.1. Notes on the Disposal of Electrical and Electronic Equipment and the Meaning of the Symbol in Annex 3 of the ElektroG:

Owners of used equipment must dispose of it separately from unsorted municipal waste. Electrical and electronic waste must not be disposed of as unsorted municipal waste and should not be placed in household bins. Instead, such waste must be collected separately and disposed of, for example, through local collection and return systems. Owners of used devices are also required to separate used batteries and accumulators that are not enclosed by their old device before handing them over to a collection point. This does not apply if the waste is separated from other used equipment in accordance with § 14, paragraph 5, sentences 2 and 3, ElektroG as part of the option by public waste management authorities for the purpose of preparing for reuse. The symbol in Annex 3 of the ElektroG allows owners to identify old devices that must be collected separately from unsorted municipal waste. The symbol for separate collection of electrical and electronic equipment depicts a crossed-out wheeled bin.

9.2. Notes on Equipment Return Options:

Owners of waste equipment can hand it over within the framework of the return or collection options for waste equipment established by the public service and available to ensure proper waste disposal. If applicable, it is also possible to hand over electrical and electronic devices for the purpose of reusing the devices. Further information on this can be found at the respective collection or return point. An online directory of collection and return points can be viewed at the following link: <https://www.ear-system.de/ear-verzeichnis/sammel-und-ruecknahmestellen>

9.3. Note on Our WEEE Registration Number:

We are registered with the Foundation for Electrical Equipment Registers, Benno-Strauß-Str. 1, 90763 Fürth as a manufacturer of electrical and/or electronic equipment under the following registration number (WEEE Reg. No.): DE 17638816.

10. WARRANTY AND SUPPORT

For warranty claims or technical support, please refer to your purchase documentation or contact the retailer where the product was purchased. Please retain your proof of purchase for any warranty-related inquiries.