

**Walker Edison W70CSGDDW**

# Walker Edison Portsmouth Classic 2 Glass Door TV Stand User Manual

Model: W70CSGDDW

Brand: Walker Edison

## 1. INTRODUCTION

This manual provides essential information for the assembly, operation, maintenance, and troubleshooting of your Walker Edison Portsmouth Classic 2 Glass Door TV Stand. Please read through this manual carefully before beginning assembly or use to ensure proper setup and longevity of your product.



*Figure 1: Walker Edison Portsmouth Classic 2 Glass Door TV Stand*

The Walker Edison Portsmouth Classic 2 Glass Door TV Stand is designed to accommodate TVs up to 80 inches, featuring a traditional farmhouse style with modern functionality. It includes two window pane glass doors, three adjustable shelves, and an open center cubby for versatile storage and display.



*Figure 2: TV Stand in a typical living room setup*

## 2. SAFETY INFORMATION

---

**WARNING: Proposition 65 Warning: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)**

Always ensure the TV stand is placed on a stable, level surface. Do not exceed the maximum weight limit of 250 pounds. Keep small parts and packaging materials away from children during assembly. Always follow assembly instructions carefully to prevent injury or damage to the product.

## 3. INCLUDED COMPONENTS

---

The following components are typically included with your TV stand:

- Frame components (Engineered Wood)
- Hardware pack (screws, dowels, cam bolts, etc.)
- Legs

- Glass doors with hinges
- Adjustable shelves
- Assembly instructions (detailed step-by-step guide)

## 4. SETUP AND ASSEMBLY

---

Assembly is required for this TV stand. It is recommended to have two people for assembly to ensure stability and ease of construction. Lay out all pieces before starting and ensure good lighting. Follow the clear, step-by-step instructions provided in the included installation manual.

For detailed assembly instructions, please refer to the official Installation Manual PDF [Download Installation Manual \(PDF\)](#)

**Helpful Tip:** Some users have found that applying a small amount of wood glue to the wooden dowels during assembly can enhance the overall sturdiness of the unit, especially if a television will be placed on top.



*Figure 3: Product Dimensions*

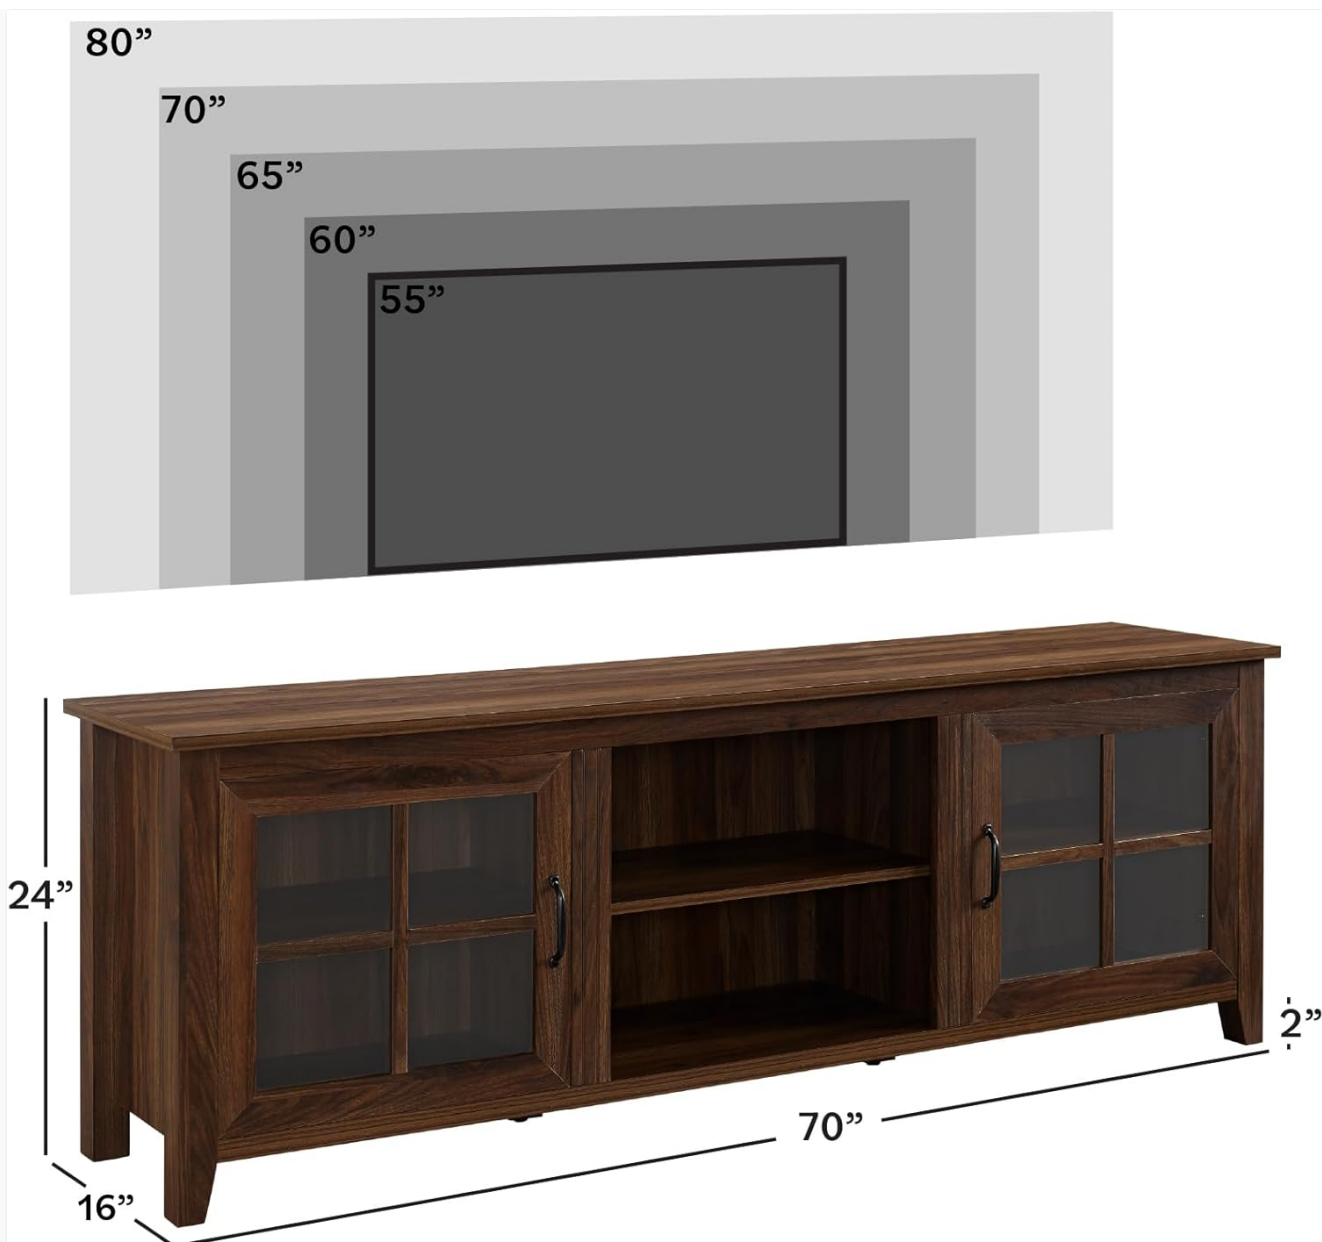


Figure 4: TV Size Compatibility

## Assembly Overview Video

*Video 1: A brief overview of the Walker Edison Classic 2-Glass Door 70 Inch TV Stand, highlighting its features and design.*

## 5. OPERATING YOUR TV STAND

---

### Adjustable Shelves

The TV stand features three adjustable shelves behind the glass doors, allowing you to customize the storage space to fit your media components, books, or decorative items. To adjust a shelf, simply remove it from its current position and reinsert it into the desired shelf pin holes.

### Cord Management

Integrated cut-outs on the back panel of the TV stand provide convenient cord management. These openings allow you to easily route and organize cables from your electronic devices, keeping your entertainment area tidy and clutter-free.





## Simple Cord Management

Easily organize messy wires with cut-outs for overall cord management.



Figure 5: Cord Management Features

## 6. CARE AND MAINTENANCE

To maintain the appearance and longevity of your TV stand, wipe it with a dry cloth regularly. Avoid using harsh chemicals or abrasive cleaners, as these can damage the wood finish. For spills, wipe immediately with a soft, damp cloth and then dry thoroughly.

## 7. TROUBLESHOOTING

### Door Alignment Issues

If the glass doors do not sit correctly or appear misaligned after assembly, adjustments can be made using the hinges. The hinges have slotted holes for vertical adjustment of the main attachment points. Additionally, there are typically two adjustment screws on each hinge that allow for further fine-tuning of the door's position (in/out and side-to-side). Refer to the detailed hinge adjustment section in your assembly manual for specific instructions.

## 8. SPECIFICATIONS

Attribute	Detail
Brand	Walker Edison
Model Number	W70CSGDDW
Color	Dark Walnut
Product Dimensions	16"D x 70"W x 24"H
Item Weight	91 Pounds
Weight Limit	250 Pounds
Material	Engineered Wood
Door Style	Flat Panel with Glass

Number of Shelves	6 (3 adjustable)
Assembly Required	Yes
Special Feature	Space Saving, Cord Management

## 9. WARRANTY INFORMATION

---

This product comes with a 30-day limited manufacturer warranty. Please retain your proof of purchase for warranty claims. For any issues covered under warranty, contact Walker Edison customer support within 30 days of delivery.

## 10. CUSTOMER SUPPORT

---

Should you have any questions, require assistance with assembly, or need replacement parts, please contact Walker Edison customer support:

**Phone:** 1-801-433-3008

**Email:** [service@walkeredison.com](mailto:service@walkeredison.com)

Replacement parts are available. Please contact Walker Edison within 30 days of delivery for any part-related inquiries.

# QUESTIONS?

We can help you.



# 1-801-433-3008

or email **[service@walkeredison.com](mailto:service@walkeredison.com)**

Replacement parts now available.  
Please contact Walker Edison within 30 days of delivery.

*Figure 6: Customer Support Contact Information*

© 2025 Walker Edison. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.