

manuals.plus /

› [Logitech](#) /

› [Logitech C920S HD Pro Webcam User Manual](#)

Logitech C920S

Logitech C920S HD Pro Webcam User Manual

Model: C920S

INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your Logitech C920S HD Pro Webcam. The C920S is designed to deliver high-quality video and audio for video calls, streaming, and recording, featuring Full HD 1080p resolution, autofocus, light correction, and dual stereo microphones. It also includes a privacy shutter for enhanced security.

SETUP

- Unpack the Webcam:** Carefully remove the webcam and any accessories from the packaging.
- Attach the Privacy Shutter:** The C920S comes with a privacy shutter. Align the shutter with the webcam lens and gently clip it into place. This allows you to cover the lens when not in use.
- Mount the Webcam:** The webcam features a universal clip that securely fits on laptops, monitors, or can be placed on a flat surface. Adjust the clip to ensure stability and proper camera angle.
- Connect to Computer:** Plug the webcam's USB-A cable into an available USB-A port on your computer. The webcam is compatible with Windows 8 or later, macOS 10.10 or later, and ChromeOS.
- Software Installation:** Your operating system should automatically detect and install the necessary drivers. For advanced settings and features, download and install the Logitech Capture software from the official Logitech website.



- 1. Control what you show with privacy shutter
- 2. Full HD video chatting and recording
- 3. Premium autofocus adjusts smoothly
- 4. Universal clip fits laptops or monitor
- 5. Automatic low light correction
- 6. Capture natural stereo audio

Image: Logitech C920S Webcam with key features highlighted, including the privacy shutter and universal clip.




COMPATIBILITY



Image: Compatibility icons for various operating systems and video conferencing platforms.


OPERATING INSTRUCTIONS

 - **Video Calls and Recording:** The C920S supports Full HD 1080p video at 30 frames per second. Ensure your video conferencing or recording software is configured to use the Logitech C920S as the primary camera and microphone.
- **Autofocus and Light Correction:** The webcam features HD autofocus and automatic light correction to ensure clear and sharp video quality, even in dim or harsh lighting conditions.
- **Stereo Audio:** Two integrated microphones capture natural stereo audio. Position the webcam appropriately to optimize sound capture during calls or recordings.
- **Using the Privacy Shutter:** To ensure privacy, slide the physical privacy shutter over the lens when the webcam is not in active use. Slide it back to uncover the lens when you need to use the camera.
- **Logitech Capture Software:** Utilize the Logitech Capture application for advanced control over your webcam settings. This software allows you to customize recordings, adjust camera parameters (such as exposure, white balance, and zoom), and manage multiple camera sources.

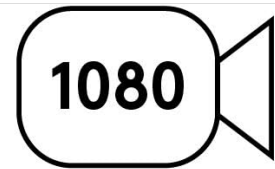

FULL HD 1080P VIDEO CALLS

 Image: The Logitech C920S Webcam, highlighting its Full HD 1080p video capability.

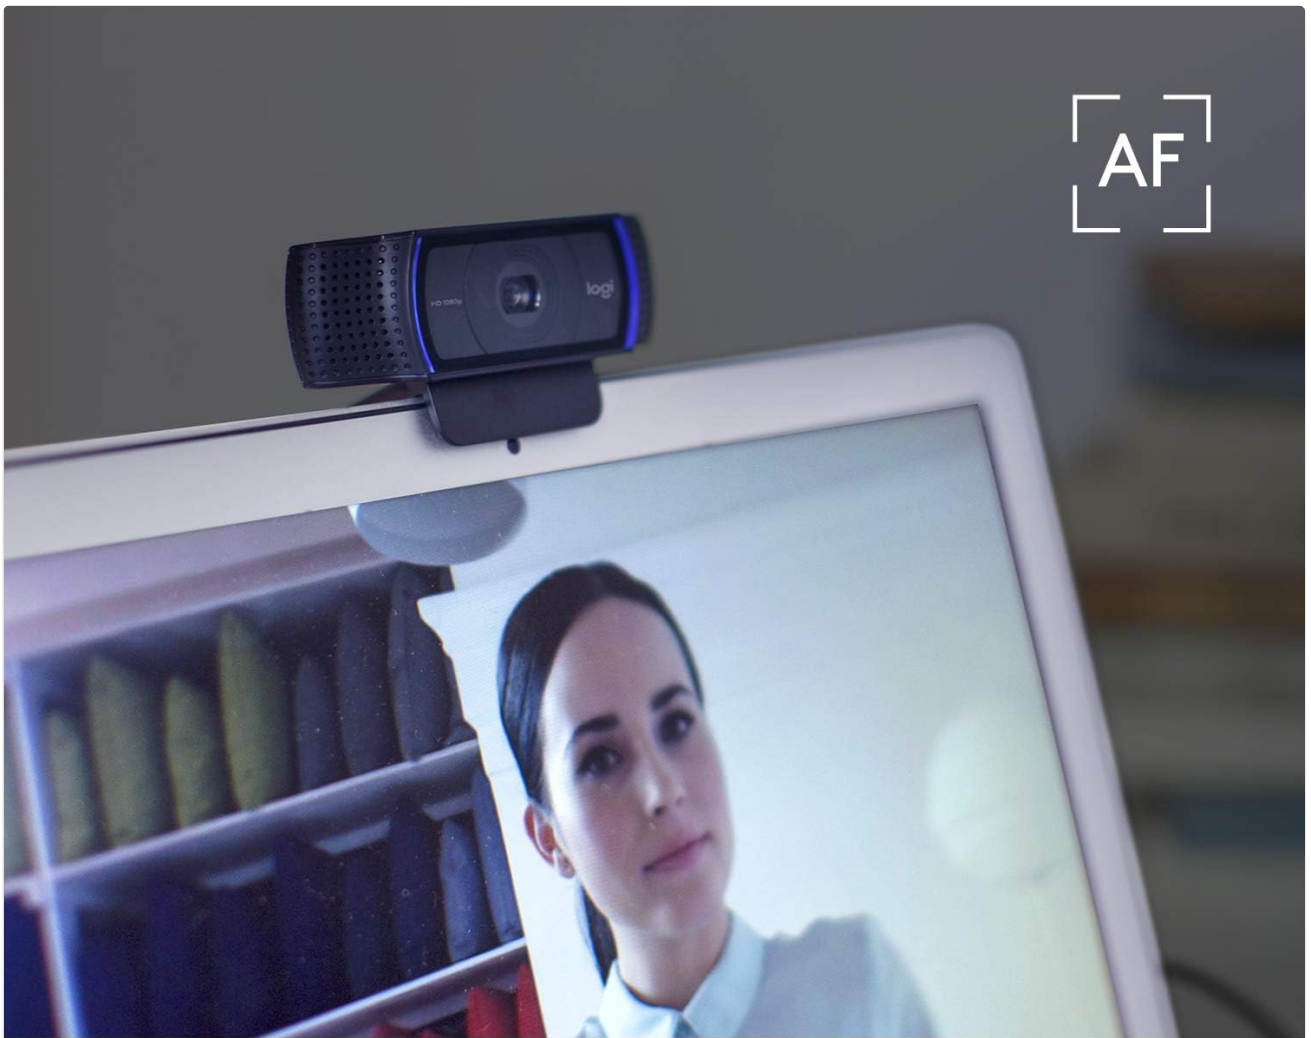

HD AUTOFOCUS & LIGHT CORRECTION

Image: The Logitech C920S Webcam, illustrating its HD Autofocus and Light Correction features.



STEREO AUDIO WITH DUAL MIC

Image: The Logitech C920S Webcam, demonstrating its stereo audio capability with dual microphones.

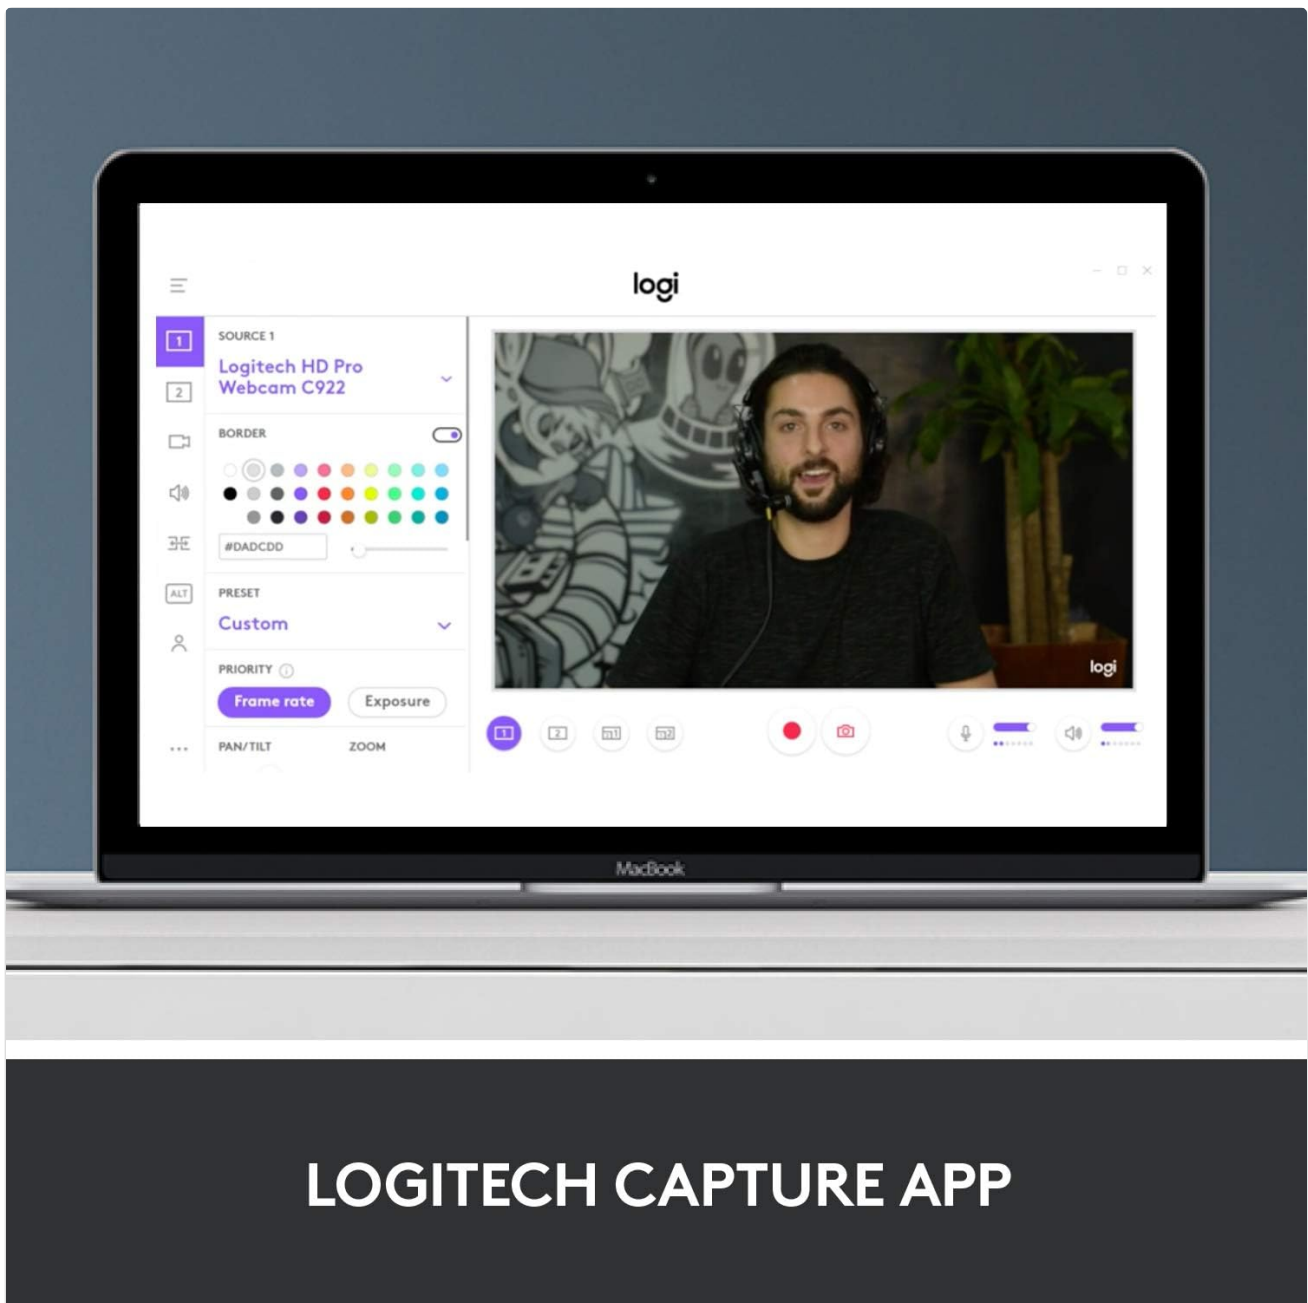 


Image: Screenshot of the Logitech Capture App, showing various camera settings and controls.

Your browser does not support the video tag.

Video: An official overview of the Logitech C920S Pro HD Webcam with Privacy Shutter, demonstrating its features and functionality.

MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for optics to gently wipe the webcam lens. Avoid using abrasive materials or harsh chemicals, which can scratch or damage the lens.
- **Cleaning the Body:** Wipe the exterior of the webcam with a soft, damp cloth. Do not immerse the webcam in water or any cleaning solutions.
- **Storage:** When not in use, especially during transport, ensure the privacy shutter is closed to protect the lens from dust and scratches. Store the webcam in a clean, dry environment.

TROUBLESHOOTING

Webcam Not Detected:

Ensure the USB cable is securely plugged into both the webcam and your computer. Try a different USB port or restart your computer. Verify that the webcam drivers are installed correctly in your operating system's device manager.

Poor Video Quality:

Check your lighting conditions; the webcam performs best with adequate front lighting. Ensure the lens is clean and free of obstructions. Adjust settings within the Logitech Capture software or your video application (e.g., exposure, white balance, autofocus). Confirm you are using the correct resolution setting (1080p or 720p).

No Audio or Poor Audio Quality:


Verify that the Logitech C920S microphone is selected as the input device in your computer's sound settings and within your video conferencing application. Ensure the microphone is not muted. Check for any physical obstructions blocking the microphone ports on the webcam.

Privacy Shutter Issues:

Ensure the privacy shutter is correctly clipped onto the webcam. If it feels loose, re-attach it firmly. The shutter is designed for manual operation.

SPECIFICATIONS

Brand	Logitech
Model Name	C920S
Model Number	C920S-A
Video Capture Resolution	1080p/30 fps, 720p/30 fps
Photo Sensor Technology	CMOS
Lens Type	Glass
Focus Type	Auto Focus
Audio	Dual Stereo Microphones
Connectivity Technology	USB
Operating System Compatibility	Windows 8 or later, macOS 10.10 or later, ChromeOS
Item Dimensions (D x W x H)	1"D x 3.7"W x 1.2"H
Item Weight	0.36 Pounds
Cable Length	1.5 meters (5 feet)

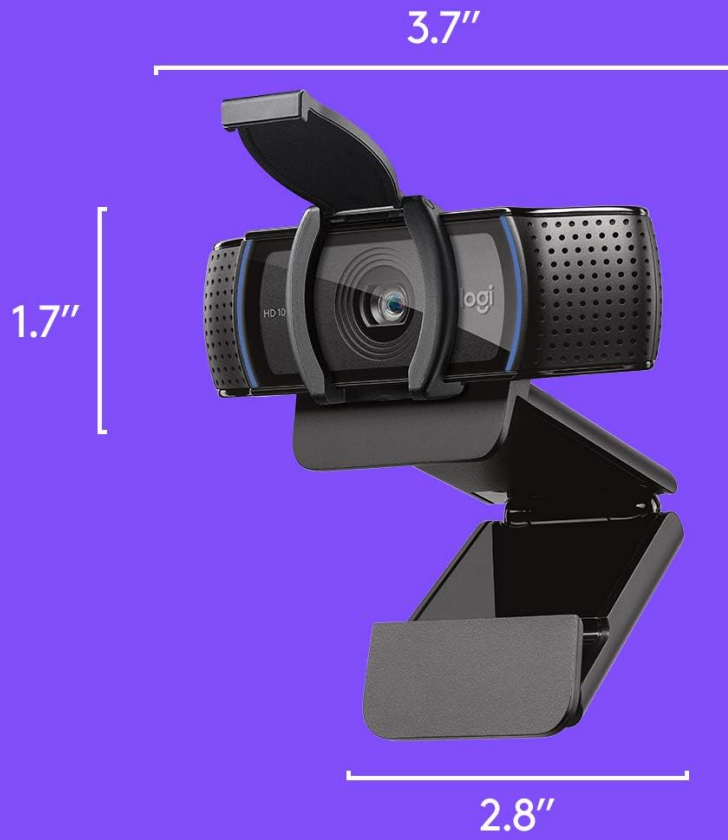

Weight: 0.6lb (277g)

DIMENSIONS

Image: Detailed dimensions and weight of the Logitech C920S Webcam.



Cable Length: 1.5 m



Image: Overview of the C920S Pro HD Webcam, highlighting its resolution, privacy shutter, and cable length.

WARRANTY INFORMATION

The Logitech C920S HD Pro Webcam comes with a **1 Year Limited Hardware Warranty**. For detailed terms and conditions, please refer to the warranty documentation included with your product or visit the official Logitech support website.

SUPPORT

For further assistance, technical support, or to download the latest software and drivers, please visit the official Logitech support website. You can also find FAQs and community forums for additional help.

Official Logitech Support: www.logitech.com/support

