

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal FV9848E0 Steam Iron User Manual

Tefal FV9848E0 (28fdd)

Tefal FV9848E0 Steam Iron User Manual

Model: FV9848E0 (28fdd)

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Tefal FV9848E0 Steam Iron. Please read these instructions carefully before using the appliance and retain them for future reference. This appliance is designed for domestic use only.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the voltage indicated on the rating plate corresponds to your mains voltage.
- Do not leave the iron unattended while it is switched on or connected to the mains supply.
- Keep the iron and its cord out of reach of children and persons with reduced physical, sensory or mental capabilities.
- Never immerse the iron, power cord, or plug in water or any other liquid.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged. Contact an authorized service center.
- Place the iron on a stable, heat-resistant surface when resting.
- Exercise caution when filling or emptying the water tank, as hot water or steam may be present.
- Unplug the iron from the electrical outlet before filling with water, cleaning, or when not in use.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Tefal FV9848E0 Steam Iron:



This image displays the Tefal FV9848E0 steam iron, featuring a sleek black and blue design. The transparent water tank is visible, along with the ergonomic handle and the soleplate. The power cord extends from the rear.

1. Water filling inlet
2. Spray nozzle
3. Steam control lever
4. Temperature control dial
5. Water tank
6. Soleplate
7. Power cord
8. Self-clean button (if applicable)

4. SETUP AND FIRST USE

4.1 Before First Use

- Remove any stickers or protective film from the soleplate.
- It is normal for a slight odor or smoke to be produced during the first few minutes of use. This will disappear quickly.
- To clean the soleplate, iron an old piece of fabric (e.g., a towel) for a few minutes.

4.2 Filling the Water Tank

1. Ensure the iron is unplugged from the power outlet.
2. Set the steam control lever to the "Dry Ironing" position (no steam).
3. Open the water filling inlet cover.

4. Fill the water tank with clean tap water up to the "MAX" level indicator. Do not overfill.
5. Close the water filling inlet cover securely.

Note: For optimal performance and to prevent limescale buildup, it is recommended to use demineralized or distilled water, especially in areas with hard water. Do not use perfumed water, water from tumble dryers, or chemically descaled water.

5. OPERATING THE IRON

5.1 Temperature Setting

1. Plug the iron into a suitable power outlet.
2. Turn the temperature control dial to the desired setting according to the fabric type. Refer to the garment's care label.
3. The indicator light will illuminate, indicating the iron is heating up. It will turn off when the set temperature is reached.

5.2 Dry Ironing

For dry ironing, ensure the steam control lever is set to the "Dry Ironing" position (no steam). Iron the fabric as usual.

5.3 Steam Ironing

Steam ironing is suitable for most fabrics, except very delicate ones. Ensure the water tank is filled and the iron has reached the appropriate temperature (usually indicated by 2 or 3 dots on the temperature dial).

1. Once the iron has reached the desired temperature, move the steam control lever to the desired steam setting.
2. Begin ironing. The iron will automatically produce steam.

5.4 Vertical Steaming

The iron can be used for vertical steaming of hanging garments or curtains. Hold the iron vertically a few centimeters away from the fabric and press the steam boost button (if available) intermittently.

5.5 Spray Function

Press the spray button to moisten stubborn creases. Ensure the water tank contains water.

6. MAINTENANCE AND STORAGE

6.1 Cleaning the Iron

- Always unplug the iron and allow it to cool completely before cleaning.
- Wipe the exterior of the iron with a damp cloth. Do not use abrasive cleaners or solvents.
- Clean the soleplate with a damp cloth and a non-abrasive cleaner if necessary. Avoid scratching the soleplate.

6.2 Descaling (Self-Clean Function)

To maintain optimal steam performance and prevent limescale buildup, use the self-clean function regularly (e.g., once a month, depending on water hardness).

1. Fill the water tank to the MAX level.
2. Set the steam control to "Dry Ironing" and the temperature dial to maximum.

- 3. Plug in the iron and wait for the indicator light to go out.
- 4. Unplug the iron.
- 5. Hold the iron horizontally over a sink. Press and hold the self-clean button (if available) or rapidly move the steam control lever to the maximum steam position. Hot water and steam will be expelled from the soleplate, carrying limescale particles.
- 6. Shake the iron gently until the water tank is empty.
- 7. Plug the iron back in and let it heat up to dry the soleplate.
- 8. Unplug and let it cool completely before storing.

6.3 Storage

- Ensure the iron is completely cool and empty the water tank before storing.
- Wrap the power cord neatly around the cord wrap area (if available).
- Store the iron upright on its heel rest in a safe, dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet faulty; temperature dial set to minimum.	Check power connection; try another outlet; set temperature dial to desired heat.
No steam or insufficient steam.	Water tank empty; temperature too low; steam control set to "Dry Ironing"; limescale buildup.	Fill water tank; set higher temperature; move steam control to steam position; perform descaling.
Water drips from the soleplate.	Temperature too low for steam; steam function used too early; overfilled water tank.	Wait for the iron to reach the correct temperature before using steam; do not overfill the tank.
White flakes coming from soleplate.	Limescale buildup.	Perform the descaling (self-clean) procedure.

8. SPECIFICATIONS

Feature	Detail
Brand	Tefal
Model Number	FV9848E0 (28fdd)
Power	3200 Watts
Voltage	310 Volts
Dimensions (L x W x H)	34.5 x 20 x 10 cm
Item Weight	2.11 Kilograms
Base Material	Stainless Steel

Feature	Detail
Special Feature	Steam Function
Recommended Uses	General ironing, even on delicate fabrics

9. WARRANTY AND SUPPORT

Your Tefal FV9848E0 Steam Iron is covered by a manufacturer's warranty. Please refer to the warranty card provided with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical assistance, spare parts, or to locate an authorized service center, please visit the official Tefal website or contact their customer support. Keep your proof of purchase for warranty claims.

Tefal Official Website: www.tefal.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question