

Walker Edison W70CSGDRO

Walker Edison Portsmouth Classic TV Stand

MODEL: W70CSGDRO

[Introduction](#) [Setup](#) [Operation](#) [Maintenance](#) [Specifications](#) [Support & Warranty](#)

1. Introduction

The Walker Edison Portsmouth Classic TV Stand provides a functional and aesthetically pleasing solution for media storage. Featuring clear tempered glass doors, this stand allows for the display of various items while offering protection. It includes three adjustable shelves, providing flexible storage options for media devices, books, or decorative pieces. Designed to accommodate televisions up to 80 inches, this 70-inch entertainment center is constructed for durability and includes cord management features for organized cable routing.



Figure 1: Front view of the Walker Edison Portsmouth Classic TV Stand in Rustic Oak.

2. Setup and Assembly

This TV stand requires assembly. Please follow the detailed instructions provided in the official installation manual for proper setup. Ensure all components are present before beginning assembly.

- **Unpacking:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.

- **Component Check:** Verify that all hardware and furniture pieces listed in the manual are included.
- **Assembly:** Follow the step-by-step diagrams and instructions in the manual. It is recommended to have two people for assembly to ensure stability and ease of construction.
- **Placement:** Choose a stable, level surface for the TV stand. Ensure adequate space for ventilation around electronic devices.

For detailed assembly instructions, please refer to the [Installation Manual \(PDF\)](#).



Figure 2: Key dimensions of the TV stand: 70 inches long, 24 inches high, and 16 inches deep.

3. Operation and Usage

The Portsmouth Classic TV Stand is designed for convenient and organized media storage.

- **Television Placement:** The top surface is designed to safely support televisions up to 80 inches in size and up to 150 pounds. Ensure the TV's base fits within the stand's dimensions.
- **Adjustable Shelves:** The three interior shelves can be adjusted to different heights to accommodate various media components, gaming consoles, or decorative items. To adjust, remove the shelf, reposition the shelf pins to the desired height, and reinsert the shelf.
- **Glass Doors:** The two glass-paneled doors provide enclosed storage while allowing for visibility of displayed items. The spring-loaded hinges ensure smooth opening and closing.
- **Cord Management:** Utilize the integrated cord management ports located on the back panel to route and organize cables from your electronic devices, maintaining a tidy appearance and preventing tangles.



Figure 3: The TV stand in a living room setting, showcasing its capacity for a large television.



Simple Cord Management

Easily organize messy wires with cut-outs for overall cord management.



Figure 4: Integrated cord management cut-outs help organize cables.

4. Maintenance

To maintain the appearance and longevity of your TV stand, follow these simple care instructions:

- **Cleaning:** Wipe the surfaces with a dry, soft cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Immediately blot any spills with a clean, dry cloth to prevent moisture damage.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the finish.
- **Heat and Moisture:** Do not place hot items directly on the surface. Use coasters or protective pads. Avoid placing the stand in areas with excessive humidity.



Figure 5: Detail of the rustic oak finish, which should be cleaned with a dry cloth.

5. Troubleshooting

If you encounter any issues with your TV stand, please refer to the following common solutions:

- **Wobbly Stand:** Ensure all cam locks and screws are tightened securely. Re-check the assembly steps in the manual to confirm correct installation.
- **Doors Not Aligning:** Adjust the hinges on the glass doors. Most hinges allow for minor adjustments to ensure proper alignment and closure. Refer to the assembly manual for specific hinge adjustment instructions.
- **Missing Parts:** If any parts were missing upon delivery, please contact customer support immediately with your product model number and a description of the missing components.

6. Specifications

Feature	Detail
Brand	Walker Edison
Model Number	W70CSGDRO
Color	Rustic Oak
Product Dimensions	15.75"D x 70"W x 24"H
Item Weight	91 Pounds
Material	Engineered Wood, Glass
Recommended Uses	Storage
Special Feature	Space Saving
Mounting Type	Floor Mount
Room Type	Living Room
Door Style	Shaker
Weight Limit (Top)	150 Pounds
Number of Shelves	3
Assembly Required	Yes
GTIN / UPC	00842158165244 / 842158165244

7. Support & Warranty

For any questions, assistance, or to order replacement parts, please contact Walker Edison customer support.

- **Phone:** 1-801-433-3008
- **Email:** service@walkeredison.com

Warranty Information: This product is covered by a 30-day limited manufacturer warranty. Please retain your proof of purchase for warranty claims. Replacement parts are available; contact Walker Edison within 30 days of delivery for assistance.

QUESTIONS?

We can help you.



1-801-433-3008

or email **service@walkeredison.com**

Replacement parts now available.

Please contact Walker Edison within 30 days of delivery.

Figure 6: Contact information for Walker Edison customer support.

© 2025 Walker Edison. All rights reserved.