

[Manuals.plus](#) /

> [uehba](#) /

> uehba BN59-01259E Replacement Remote Control for Samsung Smart TVs User Manual

## uehba BN59-01259E

# uehba BN59-01259E Replacement Remote Control User Manual

Model: BN59-01259E

## INTRODUCTION

This manual provides instructions for the uehba BN59-01259E Replacement Remote Control. This remote is designed to be compatible with a wide range of Samsung Smart TVs, offering a direct replacement experience without the need for complex programming. Please read this manual thoroughly to ensure proper use and maintenance of your remote control.

## SETUP

### Battery Installation

The remote control requires two (2) AA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open the compartment.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





**Image:** The open battery compartment of the remote control, indicating the correct orientation for inserting two AA batteries.

### Initial Use

This replacement remote control is designed for immediate use with compatible Samsung TVs. No programming or pairing is typically required. Once batteries are installed, the remote should function directly with your television.



## Universal Replacement Remote Control Compatible for All Samsung Smart Frame Curved QLED TVs

**Image:** A user holding the remote control, with a Samsung TV visible in the background, emphasizing the 'no programming needed' feature.

### OPERATING INSTRUCTIONS

---

Familiarize yourself with the buttons and their functions:



**Image:** A detailed diagram of the remote control, highlighting and labeling the function of each button for easy identification.

- **Power Button (⏻):** Turns the TV on or off.
- **123 Button:** Accesses the virtual numeric keypad on the TV screen.
- **EXTRA Button:** Provides access to additional TV functions or information.
- **Directional Pad (Up/Down/Left/Right) & Select:** Navigates menus and confirms selections.
- **Return Button (↶):** Returns to the previous screen or menu.
- **Smart Hub Button (⌂):** Opens the Smart Hub, providing access to apps and smart TV features.
- **Play/Pause Button (⏮):** Controls media playback (play, pause).
- **Volume (VOL) Button:** Press up or down to adjust the volume. Press the button itself to mute/unmute the sound. Holding the button for 1 second or more may activate Accessibility Shortcuts.
- **Channel (CH) Button:** Press up or down to change channels. Press the button itself to display the Guide Screen.

## Compatibility

This remote control is compatible with various Samsung TV models, including but not limited to:

- UN40KU6290, UN65KU6290, UN40KU6290F, UN55KU6290F, UN60KU6290F, UN70KU6290F
- UN50KU6290, UN55KU6290, UN60KU6290, UN70KU6290
- UN43KU7000D, UN49KU7000, UN55KU7000, UN40KU7000



**Requires 2x AA Batteries  
( not included)**

**Image:** The remote control displayed alongside text confirming its universal replacement compatibility for various Samsung Smart Frame Curved QLED TVs.

## MAINTENANCE

### Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, aerosols, or harsh chemicals, as these may

damage the surface or internal components.

### Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new AA batteries. Do not mix old and new batteries or different types of batteries.

### Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

## TROUBLESHOOTING

- **Remote not responding:**
  - Ensure batteries are correctly installed and not depleted. Replace if necessary.
  - Check for any obstructions between the remote control and the TV's infrared receiver.
  - Point the remote directly at the TV.
- **Limited operating range:**
  - Ensure fresh batteries are used.
  - Minimize interference from other electronic devices.
- **Buttons require hard pressing:**
  - This may indicate low battery power. Replace batteries.
  - Ensure the remote is clean and free of debris around the buttons.

## SPECIFICATIONS

|                    |                                |
|--------------------|--------------------------------|
| Model Number       | BN59-01259E                    |
| Brand              | uehba                          |
| Product Dimensions | 6.38 x 1.38 x 0.59 inches      |
| Item Weight        | 0.634 ounces                   |
| Batteries Required | 2 AA batteries (not included)  |
| Material           | ABS                            |
| Compatible Devices | Television (Samsung Smart TVs) |

## WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your uehba BN59-01259E Replacement Remote Control, please contact the seller or manufacturer directly through your purchase platform. Please refer to your purchase documentation for specific warranty details, as these may vary.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B07KC93HGR>

More documents and user manuals: <https://manuals.plus/>