

manuals.plus /

> [Gingko](#) /

> [Gingko Flip Click Clock LED Alarm Clock with Vibration Function \(Cherry\) - User Manual](#)

## Gingko G003C15

# Gingko Flip Click Clock LED Alarm Clock with Vibration Function (Cherry) - User Manual

Model: G003C15

## INTRODUCTION

---

Thank you for purchasing the Gingko Flip Click Clock. This LED alarm clock is designed for simplicity and functionality, featuring touch-sensitive controls and a natural wood finish. This manual provides instructions for setup, operation, and maintenance to ensure optimal performance of your device.

### Key Features:

- LED display visible via sound activation or permanent display mode.
- Laser-engraved touch controls on the top surface indicate alarm status.
- Easy alarm management: press any top button to snooze, or flip the clock to turn off the alarm and revert to normal time display.
- Integrated 2000 mAh rechargeable battery, includes USB charging cable.
- Compact dimensions: 115 x 70 x 36 mm (L x W x H); Weight: 150 g.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your Flip Click Clock.



*Image 1: Front view of the Gingko Flip Click Clock, showing the LED display and the wooden casing.*



*Image 2: Top view of the clock, highlighting the laser-engraved touch controls for various functions.*



Image 3: Rear view of the clock, displaying the DC 5V charging port and product information.

#### Top Surface Controls:

- **Alarm Icon:** Touch to activate/deactivate alarm setting mode.
- **HR (Hour):** Touch to adjust the hour.
- **MIN (Minute):** Touch to adjust the minute.
- **V/S (Voice/Sound Activation):** Touch to toggle between sound-activated display and permanent display.
- **Power Icon:** Touch to turn the display on/off (when not in permanent display mode).

#### Rear Panel:

- **DC 5V Port:** Micro USB input for charging the internal battery.

## SETUP

---

### 1. Initial Charging

Before first use, fully charge the device. Connect the supplied USB charging cable to the DC 5V port on the back of the clock and plug the other end into a standard USB power adapter (not included) or a computer USB port. The LED display will indicate charging status (e.g., flashing battery icon or specific indicator). A full charge typically takes a few hours.

### 2. Powering On/Off

The clock is designed to be always on in terms of internal timekeeping. The display can be activated by sound/vibration or set to permanent display mode. To conserve battery, the display will typically turn off after a short period of inactivity in sound-activated mode.

## OPERATING INSTRUCTIONS

---

## 1. Setting the Time

1. Ensure the display is active. If not, gently tap the clock or make a sound.
2. Touch and hold the **HR** button on the top surface until the hour digits start flashing.
3. Tap the **HR** button repeatedly to adjust the hour.
4. Touch and hold the **MIN** button until the minute digits start flashing.
5. Tap the **MIN** button repeatedly to adjust the minute.
6. Once the desired time is set, wait a few seconds for the digits to stop flashing, or tap the **Alarm Icon** to confirm and exit time setting mode.

## 2. Setting the Alarm

1. Ensure the display is active.
2. Touch and hold the **Alarm Icon** on the top surface until the alarm time digits start flashing.
3. Use the **HR** and **MIN** buttons to set the desired alarm hour and minute, similar to setting the current time.
4. Once the alarm time is set, wait a few seconds for the digits to stop flashing, or tap the **Alarm Icon** to confirm. The alarm icon on the display will illuminate to indicate the alarm is active.

## 3. Alarm Functions

- **Activating/Deactivating Alarm:** Tap the **Alarm Icon** once to toggle the alarm on or off. The illuminated alarm icon on the display indicates it is active.
- **Snooze:** When the alarm sounds, tap any of the laser-engraved buttons on the top surface to activate the snooze function. The alarm will pause and sound again after a set interval (e.g., 5 minutes).
- **Turning Off Alarm:** To completely turn off the alarm, either tap the **Alarm Icon** to deactivate it, or physically flip the clock upside down. When flipped, the display will automatically reorient and the alarm will be deactivated.

## 4. Display Modes

- **Sound/Vibration Activated Display:** In this mode, the LED display will turn on when it detects a sound (e.g., a clap, tap on the clock) or vibration. It will automatically turn off after a few seconds of silence to conserve battery. This is the default mode.
- **Permanent Display:** To keep the display continuously on, tap the **V/S** button. Tap it again to return to sound/vibration activated mode. Note that permanent display mode will consume battery faster.

## MAINTENANCE

---

### Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners, solvents, or excessive moisture, as these can damage the wood finish and electronic components.

### Battery Care

- Charge the device regularly, especially if using the permanent display mode.
- Avoid fully depleting the battery for extended periods, as this can reduce its lifespan.
- If storing the clock for a long time, charge it to about 50% and recharge every few months.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Display not turning on.	Battery is low or depleted; sound activation not triggered.	Charge the clock using the USB cable. Gently tap the clock or make a sound to activate the display.
Alarm not sounding.	Alarm is not activated; alarm volume is too low (not adjustable).	Ensure the alarm icon on the display is illuminated. The alarm volume is fixed and cannot be adjusted.
Display remains on constantly (drains battery quickly).	Permanent display mode is active.	Tap the <b>V/S</b> button to switch back to sound-activated display mode.
Clock not responding to touch controls.	Low battery; temporary software glitch.	Charge the device. If unresponsive, try connecting to power and allowing it to charge for a few minutes.

## SPECIFICATIONS

---

- **Product Dimensions:** 115 x 70 x 36 mm (L x W x H)
- **Product Weight:** 150 grams
- **Power Source:** Rechargeable 2000 mAh Lithium Polymer battery (included)
- **Charging Port:** Micro USB (DC 5V)
- **Display Type:** Digital LED
- **Material:** Wood (Cherry finish)
- **Model Number:** G003C15

## WARRANTY INFORMATION

---

This Gingko Flip Click Clock is covered by a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

## SUPPORT

---

For further assistance, technical support, or warranty inquiries, please contact Gingko customer service through their official website or the retailer where the product was purchased. Please have your model number (G003C15) and proof of purchase ready.