

PRIXTON VS100

PRIXTON VS100 Vacuum Sealer Instruction Manual

Model: VS100

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your PRIXTON VS100 Vacuum Sealer. Please read this manual thoroughly before first use and retain it for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your appliance.

2. SAFETY INSTRUCTIONS

To prevent injury or damage, always observe basic safety precautions when using electrical appliances. This includes, but is not limited to:

- Read all instructions before use.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep out of reach of children.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only manufacturer-recommended attachments.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Exercise extreme caution when moving appliances containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

3. PRODUCT OVERVIEW

The PRIXTON VS100 is a versatile vacuum sealer designed for preserving various types of food. It features

both automatic and manual operation modes, as well as specific settings for dry, moist, normal, and fragile foods.



Figure 1: Top view of the PRIXTON VS100 Vacuum Sealer, showing the control panel with buttons for Stop, Seal, Vac Seal, Food, and Mode.

Control Panel Functions:

- **Stop Button:** Immediately stops any ongoing operation (vacuuming or sealing).
- **Seal Button:** Initiates sealing only, without vacuuming. Useful for creating custom-sized bags or sealing delicate items after manual vacuuming.
- **Vac Seal Button:** Initiates the automatic vacuuming and sealing process.
- **Food Button:** Toggles between Dry and Moist food settings. An indicator light will show the selected mode.
- **Mode Button:** Toggles between Normal and Fragile food settings. An indicator light will show the selected mode.

4. SETUP

1. **Unpack:** Carefully remove the vacuum sealer from its packaging. Retain packaging for storage or future transport.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Placement:** Place the vacuum sealer on a flat, stable, and dry surface. Ensure there is enough space around the unit for proper operation.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet.
5. **Prepare Bags:** Ensure you are using appropriate vacuum sealer bags. The PRIXTON VS100 is compatible with bags up to 25 cm wide.



Figure 2: The PRIXTON VS100 Vacuum Sealer shown with a visual indication of its maximum bag width capacity of 25 cm, alongside various vegetables.

5. OPERATING INSTRUCTIONS

5.1. Preparing the Bag

1. Place the items to be vacuum sealed inside a vacuum sealer bag.
2. Ensure that the open end of the bag is clean, dry, and free of wrinkles. Leave at least 2-3 inches of space between the food and the top of the bag.



Figure 3: The PRIXTON VS100 Vacuum Sealer with its lid open, illustrating how a vacuum bag is positioned within the sealing channel, ready for operation.

5.2. Selecting Food and Mode Settings

The VS100 offers specialized settings for different food types:

- **Food Setting (Dry/Moist):** Press the **Food** button to toggle between Dry and Moist settings.
- **Mode Setting (Normal/Fragile):** Press the **Mode** button to toggle between Normal and Fragile settings.



Figure 4: The PRIXTON VS100 Vacuum Sealer in operation with corn in a vacuum bag, visually indicating the availability of 'Dry/Moist Mode' and 'Normal/Fragile Mode' options.

Dry Mode: For foods without liquid, such as nuts, grains, or dried fruits.

Moist Mode: For foods with some moisture, such as raw meats, fruits, or simmered foods.

Normal Mode: Standard vacuum pressure for most solid foods.

Fragile Mode: Reduced vacuum pressure to prevent crushing delicate items like bread, chips, or soft fruits.

5.3. Automatic Vacuum and Seal

1. Open the lid of the vacuum sealer.
2. Place the open end of the bag into the vacuum channel, ensuring it lies flat across the sealing strip.
3. Close the lid firmly until you hear a click on both sides, indicating it is locked.
4. Press the **Vac Seal** button. The appliance will automatically vacuum the air from the bag and then seal it.
5. Once the process is complete, the indicator light will turn off. Press the release buttons (if present, typically on the sides) to open the lid and remove the sealed bag.



Figure 5: The PRIXTON VS100 Vacuum Sealer positioned on a kitchen counter, with red cabbage being sliced nearby, illustrating the convenience of its 'Automatic Mode' for food preparation.

5.4. Sealing Only

To seal a bag without vacuuming (e.g., for snack bags or creating custom bag sizes from a roll):

1. Place the open end of the bag onto the sealing strip, ensuring it is flat and centered.
2. Close the lid firmly.
3. Press the **Seal** button. The appliance will heat and seal the bag.
4. Once the sealing process is complete, the indicator light will turn off. Open the lid and remove the sealed bag.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure your vacuum sealer operates effectively.

- **Before Cleaning:** Always unplug the appliance from the power outlet.
- **Exterior:** Wipe the exterior of the unit with a damp cloth. Do not use abrasive cleaners or solvents.
- **Vacuum Channel and Sealing Strip:** Carefully wipe the vacuum channel and sealing strip with a

damp cloth to remove any food residue. Ensure these areas are completely dry before closing the lid or using the appliance again.

- **Gaskets:** Check the foam gaskets around the vacuum channel for any food particles or damage. Clean gently if necessary.
- **Storage:** Store the appliance with the lid unlocked to prevent compression of the gaskets, which can affect sealing performance over time.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet.
Bag does not vacuum properly.	Lid not properly closed; bag not positioned correctly; bag is damaged; gaskets are dirty or worn.	Ensure the lid is locked; reposition the bag; check bag for holes; clean or inspect gaskets.
Bag does not seal.	Sealing strip is dirty or wet; bag is wrinkled; sealing strip is worn.	Clean and dry the sealing strip; smooth out the bag; contact support if sealing strip is worn.
Vacuum is too strong/weak.	Incorrect mode selected.	Adjust the "Mode" setting (Normal/Fragile) as needed.


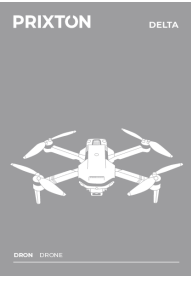



8. SPECIFICATIONS

Brand: PRIXTON
Model: VS100
Model Number: 10004710
Power: 110 Watts
Voltage: 230 Volts (AC)
Material: Metal
Color: White
Item Weight: 1.42 Kilograms
Package Dimensions: 33.6 x 19 x 10.4 cm
Operation Mode: Manual/Automatic

9. WARRANTY AND SUPPORT

PRIXTON products are designed and manufactured to the highest quality standards. For warranty information and customer support, please refer to the warranty card included with your product or visit the official PRIXTON website. Please have your model number (VS100) and purchase details ready when contacting support.
For further assistance, you may visit the [Prixtion Brand Store on Amazon](#).

Related Documents - VS100

	<p>Prixtion 10\" Prado Marco Digital Wifi - Manual de Usuario</p> <p>Guía completa para el marco de fotos digital Prixtion 10\" Prado con Wi-Fi. Aprenda a configurar, conectar amigos y gestionar sus recuerdos a través de la aplicación Frameo.</p>
	<p>Manual de Usuario Drone Prixtion Delta</p> <p>Guía completa para el dron Prixtion Delta, cubriendo operación, preparación, carga, control remoto, aplicación móvil y solución de problemas.</p>
	<p>Manual de Usuario Smartwatch Prixtion SWB33</p> <p>Explore las funciones, configuración y uso del smartwatch Prixtion SWB33 con esta guía completa. Aprenda a emparejar su dispositivo, medir su salud y utilizar las diversas aplicaciones.</p>
	<p>Manual de Usuario Prixtion Dalí Proyector: Guía Completa y Especificaciones</p> <p>Descubra cómo usar, instalar y configurar su proyector Prixtion Dalí. Este manual de usuario proporciona instrucciones detalladas, información de seguridad y especificaciones técnicas para una experiencia óptima.</p>
	<p>Prixtion SW15 Smartwatch User Manual</p> <p>Comprehensive user manual for the Prixtion SW15 Smartwatch, covering functions, parts, setup, and Bluetooth connectivity.</p>



[Prixton Sky 4K Drone Mini - Manual de Usuario](#)

Manual de usuario detallado para el dron Prixton Sky 4K, cubriendo preparación de vuelo, operación, mantenimiento, solución de problemas y uso de la aplicación móvil.