

[Manuals.plus](#) /

› [Code Alarm](#) /

› Code Alarm 2-Button Keyfob Remote User Manual

Code Alarm CATX510

Code Alarm 2-Button Keyfob Remote User Manual

Model: CATX510

INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Code Alarm 2-Button Keyfob Remote, Model CATX510. This remote is designed to operate with compatible Code Alarm vehicle security systems. It features two primary functions for arming/disarming and an auxiliary function.

FCC ID: ELVATCG



Figure 1: Front view of the Code Alarm 2-button keyfob remote. The top button features a combined lock/unlock icon, and the bottom button features a key icon, indicating its primary functions.

SETUP AND PROGRAMMING

Your new Code Alarm keyfob remote must be programmed to your existing compatible Code Alarm system before it can be used. This process links the remote to your vehicle's security system.

General Programming Steps:

While specific programming steps can vary slightly depending on your Code Alarm system model, the general procedure often involves placing the vehicle's alarm system into a programming mode. It is crucial to refer to the original installation manual or user guide for your specific Code Alarm vehicle security system for precise programming instructions.

- **Locate Programming Button/Switch:** Many Code Alarm systems have a hidden programming button or switch, often located near the control module under the dashboard.

- **Enter Programming Mode:** Typically, this involves turning the ignition key to the ON position, then pressing and holding the programming button or cycling the ignition a specific number of times. The system may respond with a chirp or light flash to indicate it's in programming mode.
- **Transmit Remote Code:** While in programming mode, press a button on the new keyfob remote. The system should respond with another chirp or flash, confirming that the remote has been successfully programmed.
- **Exit Programming Mode:** Turn off the ignition or wait for the system to automatically exit programming mode.

If you do not have the original manual for your Code Alarm system, please contact a professional installer or the manufacturer for assistance with programming.

OPERATING INSTRUCTIONS

The Code Alarm 2-Button Keyfob Remote provides convenient control over your vehicle's security system. The functions are typically assigned as follows:

- **Top Button (Lock/Unlock Icon):**
 - **Single Press:** Typically arms the security system and locks the vehicle doors.
 - **Press Again (within a few seconds):** May disarm the security system and unlock the vehicle doors. Consult your system's manual for exact behavior.
- **Bottom Button (Key Icon):**
 - **Single Press:** Often activates an auxiliary function, such as trunk release, remote start (if equipped), or panic mode (if held down). The specific function depends on how your system is configured.

Always refer to your specific Code Alarm system's user manual for detailed information on button functions and system responses.

MAINTENANCE

Battery Replacement:

The keyfob remote is powered by a small coin-cell battery (e.g., CR2032, though specific type not provided, check existing battery). If the remote's range decreases significantly or it stops responding, the battery may need replacement.

1. Carefully open the remote casing. This may require a small flat-head screwdriver or a prying tool. Look for a small notch on the side of the remote.
2. Note the orientation of the old battery before removing it.
3. Insert a new battery of the same type, ensuring the positive (+) side faces the correct direction (usually upwards).
4. Snap the remote casing back together securely.

General Care:

- Avoid exposing the remote to water or excessive moisture.
- Do not expose the remote to extreme temperatures (hot or cold).
- Keep the remote away from strong magnetic fields.
- Clean the remote with a soft, dry cloth if necessary. Avoid harsh chemicals.



Figure 2: Back view of the Code Alarm keyfob remote, displaying the FCC ID and other regulatory information.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding	Dead or low battery; Remote out of range; Remote unprogrammed; System issue.	Replace battery; Move closer to vehicle; Reprogram remote (see Setup section); Consult a professional.
Reduced operating range	Low battery; Radio interference; Obstructions.	Replace battery; Move away from sources of interference (e.g., power lines, large metal structures); Ensure clear line of sight if possible.
Buttons feel sticky or unresponsive	Dirt or debris under buttons; Physical damage.	Clean remote exterior; Do not attempt to disassemble further if unsure; Consider replacement if damaged.

SPECIFICATIONS

- Model Number: CATX510
- FCC ID: ELVATCG
- Brand: Code Alarm
- Product Dimensions: 3.5 x 1.5 x 0.5 inches
- Item Weight: 1 pounds
- Color: Black
- Compatible Devices: Code Alarm System
- Connectivity Technology: Radio Frequency

WARRANTY INFORMATION

Specific warranty terms for the Code Alarm 2-Button Keyfob Remote are typically provided by the original seller or manufacturer at the time of purchase. Please retain your proof of purchase for any warranty claims. For detailed warranty information, refer to the documentation included with your original Code Alarm system or contact the point of purchase.

SUPPORT

For technical support, programming assistance, or troubleshooting beyond the scope of this manual, please contact the authorized dealer or installer from whom you purchased your Code Alarm system. You may also visit the official Code Alarm website for additional resources or contact information.

© 2024 Code Alarm. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question