

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [SINGING WOOD](#) /
- › [SINGING WOOD 030BTL CD Player Boombox Instruction Manual](#)

SINGING WOOD SBX030BTL-PK

SINGING WOOD 030BTL Portable CD Player Boombox Instruction Manual

Model: SBX030BTL-PK | Brand: SINGING WOOD

INTRODUCTION

The SINGING WOOD 030BTL Portable CD Player Boombox is a versatile audio device designed for a wide range of listening experiences. It combines traditional CD playback with modern connectivity options, including Bluetooth, USB, and AUX input, alongside AM/FM radio functionality. Its compact design and multiple power options make it suitable for use at home or on the go. This manual provides detailed instructions for setting up, operating, and maintaining your boombox to ensure optimal performance and longevity.



Image: Front view of the SINGING WOOD 030BTL Portable CD Player Boombox in Kitty Pink, showcasing its dual speakers with

illuminated LED lights.

KEY FEATURES

- **Multi-functional Audio:** Supports CD, CD-R/RW, AM/FM Radio, Bluetooth, USB, and AUX-in playback.
- **Dynamic LED Lights:** Integrated LED lights on speakers that can sync with music rhythm and be turned on/off.
- **Immersive Stereo Sound:** Equipped with dual premium 3-inch front-firing speakers for clear, balanced audio.
- **Effortless CD Playback:** Top-loading CD player with Shuffle, Repeat, and Program functions.
- **Seamless Bluetooth Connectivity:** Wirelessly stream audio from smartphones, tablets, and other Bluetooth-enabled devices.
- **USB Music Playback:** Directly play MP3 or WMA files from USB flash drives (up to 64GB, FAT32 format).
- **Versatile Connectivity:** Includes auxiliary audio input and a headphone jack for personalized listening.
- **Dual Power Options:** Operates via included AC power cord (100-240 VAC, 50/60 Hz) or 6 x C-size dry batteries (not included).
- **Portable Design:** Features a foldable carrying handle for easy transport.



SETUP

Powering the Unit

Your SINGING WOOD 030BTL boombox offers two power options:

- **AC Power:** Connect the included AC power cord to the AC input jack on the back of the unit and then plug it into a standard wall outlet (100-240 VAC, 50/60 Hz).
- **Battery Power:** For portable use, insert 6 x C-size dry batteries (R14/Size C, 6 VDC) into the battery compartment located on the bottom of the unit. Ensure correct polarity (+/-) as indicated inside the compartment. Alkaline batteries are recommended for optimal performance.



Image: Illustration of the AC power connection and the battery compartment for portable use.

Antenna Setup

For optimal AM/FM radio reception, extend the telescopic antenna located on the back of the unit. Adjust its position and direction to achieve the clearest signal.

General Controls

- **POWER Button:** Press to turn the unit ON or OFF.
- **FUNCTION/LIGHT Button:** Press to cycle through different modes (CD, AM, FM, Bluetooth, USB, AUX). Hold to turn LED lights on/off.
- **VOLUME Knobs:** Rotate to adjust the audio volume.

CD Playback

1. Press the **FUNCTION/LIGHT** button until "CD" appears on the display.
2. Open the CD compartment cover by gently lifting it.
3. Place a CD (CD, CD-R/RW) onto the spindle with the label side facing up.
4. Close the CD compartment cover firmly.
5. Press the **PLAY/PAUSE** button to start playback.
6. Use the **SKIP** buttons (**B-SKIP** / **F-SKIP**) to navigate between tracks.
7. Press the **STOP/PROG** button to stop playback.
8. **Shuffle/Repeat/Program:** Use the **REP/RAND/STOP/PROG** button (or similar labeled button) to access these functions. Refer to the detailed manual for programming specific track orders.

AM/FM Radio

1. Press the **FUNCTION/LIGHT** button until "AM" or "FM" appears on the display.
2. Extend the telescopic antenna for better FM reception. For AM, rotate the unit for best reception.
3. Rotate the **TUNING** knob to select your desired radio station.

Bluetooth Connectivity

1. Press the **FUNCTION/LIGHT** button until "BT" appears on the display. The unit will enter pairing mode, indicated by a flashing "BT" or a specific sound.
2. On your Bluetooth-enabled device (smartphone, tablet), enable Bluetooth and search for available devices.
3. Select "SINGING WOOD" from the list of devices to pair. Once paired, the "BT" indicator will become solid, and you will hear a confirmation sound.
4. You can now stream audio wirelessly from your device to the boombox.

USB Music Playback

1. Insert a USB flash drive (FAT32 format, up to 64GB) containing MP3 or WMA audio files into the USB port on the front of the unit.
2. Press the **FUNCTION/LIGHT** button until "USB" appears on the display.
3. The unit will automatically begin playing the first compatible audio file.
4. Use the **PLAY/PAUSE** and **SKIP** buttons to control playback.

AUX Input

1. Connect an external audio device (e.g., MP3 player, phone) to the AUX input jack on the front of the unit using a 3.5mm audio cable (not included).
2. Press the **FUNCTION/LIGHT** button until "AUX" appears on the display.
3. Control audio playback and volume directly from your connected external device.

Headphone Jack

For private listening, plug standard 3.5mm headphones into the headphone jack on the front of the unit. Audio will automatically switch from the speakers to the headphones.

LED Light Control

The boombox features dynamic LED lights on its speakers. To toggle these lights ON or OFF, press and hold the **FUNCTION/LIGHT** button for approximately 3 seconds.

Product Overview Video

Your browser does not support the video tag.

Video: An official overview of the Singingwood SBX030 Series Boombox/CD Player, demonstrating its features and various functions.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **CD Lens Care:** If CD playback issues occur, use a specialized CD lens cleaner disc to clean the laser lens. Avoid touching the lens directly.
- **Battery Replacement:** When using battery power, replace all 6 C-size batteries simultaneously with new ones when the unit's performance degrades. Remove batteries if the unit will not be used for an extended period.
- **Storage:** Store the boombox in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC cord not properly connected; Batteries depleted or incorrectly inserted.	Ensure AC cord is securely plugged in. Replace batteries with new ones, checking polarity.
CD skipping or not playing	CD is dirty, scratched, or inserted incorrectly; CD lens is dirty.	Clean the CD with a soft cloth. Insert CD correctly. Use a CD lens cleaner.
Poor radio reception	Antenna not extended or positioned correctly; Weak signal area.	Fully extend and adjust the telescopic antenna. Try moving the unit to a different location.
Bluetooth not connecting	Unit not in Bluetooth mode; Device not in pairing mode; Already connected to another device.	Ensure boombox is in "BT" mode. Put your device in pairing mode. Disconnect from other Bluetooth devices.
USB not recognized	USB drive not FAT32 format; Files not MP3/WMA; Drive capacity too large.	Ensure USB drive is FAT32 and contains compatible files. Try a different USB drive.

SPECIFICATIONS

- **Model Number:** SBX030BTL-PK
- **Product Dimensions (L x W x H):** 11.8 x 9 x 4.8 inches
- **Item Weight:** 3.61 pounds
- **Power Source:** AC 100-240 VAC, 50/60 Hz or 6 x C-size batteries (DC 6V)
- **Supported Disc Types:** CD, CD-R, CD-RW

- **USB Support:** Up to 64GB, FAT32 format, MP3/WMA files
- **Connectivity:** Bluetooth, USB, AUX-in (3.5mm), Headphone Jack (3.5mm)
- **Radio Frequencies:** AM/FM Analog Tuner
- **Speaker Type:** Stereo, Dual 3-inch front-firing speakers




Image: Diagram illustrating the physical dimensions of the boombox.





WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your SINGING WOOD 030BTL Portable CD Player Boombox, please refer to the warranty card included with your product or visit the official SINGING WOOD website. Contact details and support resources are typically available on the manufacturer's dedicated support page.

© 2023 SINGING WOOD. All rights reserved.

Related Documents - SBX030BTL-PK

	<p>SingingWood SBX030BTL Portable CD Boombox with AM/FM Radio User Manual</p> <p>This user manual provides instructions for operating the SingingWood SBX030BTL Portable CD Boombox with AM/FM Radio. It covers safety precautions, operation of CD playback, radio tuning, Bluetooth connectivity, USB playback, AUX input, and technical specifications.</p>
---	--

	<p>Singing Wood BT25 Multimedia Speaker System User Manual</p> <p>User manual for the Singing Wood BT25 Multimedia Speaker System, covering specifications, safety instructions, connections, Bluetooth mode, Line In mode, and warranty information.</p>
	<p>PROMPOWER PK-L Фотоэлектрические Датчики: Руководство по эксплуатации и спецификации</p> <p>Полное руководство по эксплуатации и технические характеристики для компактных фотоэлектрических датчиков PROMPOWER серии PK-L. Охватывает модели среднего/дальнего действия, ретро-рефлективные и на пересечение луча, с деталями подключения и предупреждениями.</p>
	<p>Singing Machine STVG785BT Karaoke System Instruction Manual</p> <p>Comprehensive instruction manual for the Singing Machine STVG785BT Bluetooth Karaoke System, covering setup, operation for CD, USB, and Bluetooth modes, recording, downloading music, troubleshooting, and technical specifications.</p>
	<p>Proslat Fusion Plus & Lux Cabinet Set Installation Guide</p> <p>Comprehensive installation guide for Proslat Fusion Plus and Lux cabinet sets, covering safety, assembly steps, hardware, and warranty information. Features detailed instructions for various cabinet types, doors, drawers, shelves, and accessories.</p>