

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [MAHLE](#) /
- › [MAHLE LA62 Interior Air Filter User Manual](#)

MAHLE LA62

MAHLE LA62 Interior Air Filter User Manual

Model: LA62

INTRODUCTION

The MAHLE LA62 is a high-quality interior air filter designed to ensure clean and fresh air within your vehicle's cabin. This particle filter effectively removes dust, pollen, soot, and other airborne particulates, contributing to a healthier and more comfortable driving environment. Regular maintenance of your interior air filter is crucial for optimal performance of your vehicle's heating, ventilation, and air conditioning (HVAC) system.



Figure 1: The MAHLE LA62 Interior Air Filter. This image shows the rectangular filter with its pleated media and foam sealing edge, ready for installation.

INSTALLATION

Installing the MAHLE LA62 interior air filter typically involves accessing the filter housing, which is often located behind the glove compartment, under the dashboard, or in the engine bay near the firewall. Always consult your vehicle's specific service manual for precise instructions and location.

General Installation Steps:

1. **Safety First:** Ensure the vehicle's ignition is off and the parking brake is engaged.
2. **Locate Filter Housing:** Identify the interior air filter housing in your vehicle. This may require removing the glove compartment or other trim panels.
3. **Remove Old Filter:** Open the housing cover and carefully remove the old, dirty filter. Note the direction of the airflow arrow on the old filter, if present, as the new filter must be installed in the same orientation.
4. **Clean Housing:** Wipe down the inside of the filter housing to remove any debris or dust.

- 5. Install New Filter:** Insert the new MAHLE LA62 filter into the housing, ensuring the airflow arrow (if present on the filter) points in the correct direction, typically towards the passenger compartment. Make sure it fits snugly without bending or forcing.
- 6. Secure Housing:** Close the filter housing cover and reassemble any removed panels or the glove compartment.
- 7. Test System:** Start the vehicle and test the HVAC system to ensure proper airflow and function.

If you are unsure about the installation process, it is recommended to seek assistance from a qualified automotive technician.

OPERATION

The MAHLE LA62 interior air filter operates passively as an integral part of your vehicle's HVAC system. As air is drawn into the cabin for heating, cooling, or ventilation, it passes through the filter media. The filter's pleats and material trap airborne particles, preventing them from entering the passenger compartment. This continuous filtration process helps maintain air quality inside the vehicle.

MAINTENANCE

Regular maintenance of your interior air filter is essential for maintaining optimal cabin air quality and HVAC system efficiency. Over time, the filter media can become clogged with accumulated dust and debris, reducing airflow and filtration effectiveness.

Recommended Maintenance:

- Inspection:** Inspect the interior air filter at least once a year or every 15,000 miles (24,000 km), or as recommended by your vehicle manufacturer.
- Replacement:** Replace the MAHLE LA62 filter every 15,000 to 30,000 miles (24,000 to 48,000 km), or more frequently if you drive in dusty conditions, polluted areas, or if you notice reduced airflow or unpleasant odors from your HVAC system.
- Signs of a Clogged Filter:**
 - Reduced airflow from the vents.
 - Unpleasant or musty odors in the cabin.
 - Increased dust accumulation on interior surfaces.
 - Increased noise from the blower motor due to strain.

TROUBLESHOOTING

Most issues related to the interior air filter can be resolved by inspecting and replacing the filter.

Symptom	Possible Cause	Solution
Reduced airflow from HVAC vents	Clogged or dirty interior air filter	Inspect and replace the MAHLE LA62 filter.
Unpleasant or musty odors in the cabin	Filter accumulating mold, bacteria, or trapped debris	Replace the MAHLE LA62 filter. Consider a filter with activated carbon if odors persist (e.g., MAHLE LAK or LAO series).
Excessive dust on interior surfaces	Filter no longer effectively trapping particles	Replace the MAHLE LA62 filter.
Whistling or unusual noises from filter area	Improperly seated filter or housing cover	Re-seat the MAHLE LA62 filter and ensure the housing cover is securely closed.

SPECIFICATIONS

Key specifications for the MAHLE LA62 Interior Air Filter:

- **Item Name:** Interior Air Filter
- **Part Brand:** MAHLE
- **Model:** LA62
- **OEM Numbers:** 64318409043 / 64318409044 / 64319224084
- **Filter Type:** Particle Filter
- **Width:** 241 mm (9.49 inches)
- **Height:** 30 mm (1.18 inches)
- **Overall Length:** 530 mm (20.87 inches)
- **Vehicle Equipment:** For vehicles without air conditioning
- **Manufacturer Part Number:** 70598407
- **Package Dimensions:** 21.46 x 9.65 x 1.38 inches

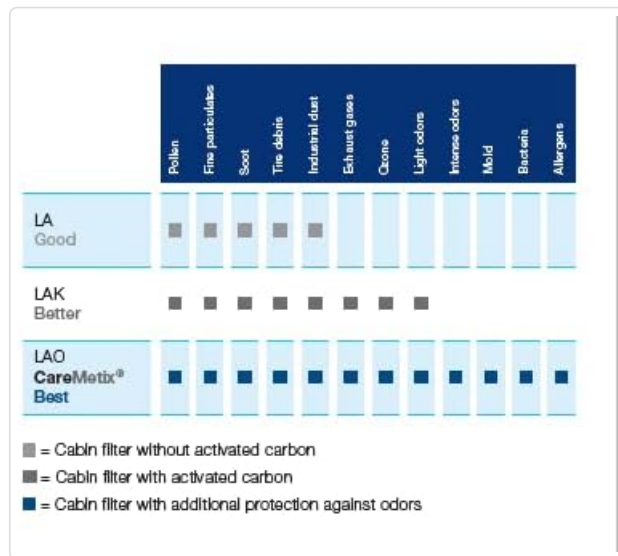


Figure 2: MAHLE Cabin Filter Comparison Chart. This chart illustrates the filtration capabilities of different MAHLE cabin filter types (LA, LAK, LAO CareMetix) against various contaminants like pollen, fine particulates, soot, industrial dust, exhaust gases, ozone, light odors, intense odors, mold, bacteria, and allergens. The LA62 is a 'Good' particle filter (LA type).

WARRANTY AND SUPPORT

For specific warranty information regarding your MAHLE LA62 interior air filter, please refer to the documentation provided with your purchase or visit the official MAHLE website. For technical assistance, installation queries, or any other support needs, please contact MAHLE customer service directly.

You can find more information and contact details on the official MAHLE website: www.mahle.com

© 2023 MAHLE. All rights reserved.

This manual is for informational purposes only. Always consult a qualified professional for vehicle maintenance.