

Bosch HBF114ES0

Bosch Series 2 HBF114ES0 Electric Oven User Manual

Model: HBF114ES0

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Bosch Series 2 HBF114ES0 Electric Oven. Please read these instructions carefully before using the appliance for the first time and keep them for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your oven.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent personal injury or damage to the appliance:

- **Electrical Safety:** Ensure the oven is correctly installed by a qualified professional and connected to a properly grounded outlet. Do not use extension cords.
- **Hot Surfaces:** The oven and its accessible parts become very hot during use. Always use oven mitts when handling hot items or surfaces. Keep children away.
- **Flammable Materials:** Do not store flammable materials in or near the oven.
- **Cleaning:** Disconnect the oven from the power supply before cleaning. Use only recommended cleaning agents.
- **Supervision:** Never leave the oven unattended during operation, especially when cooking with oil or fat.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your Bosch HBF114ES0 Electric Oven.



Image 3.1: Front view of the Bosch HBF114ES0 Electric Oven, showing the control panel, oven door, and handle.



Image 3.2: Interior view of the Bosch HBF114ES0 Electric Oven with the door open, revealing the oven cavity, fan, and rack supports.

Control Panel

The control panel features two rotary knobs for function and temperature selection, along with a digital display for time and additional settings.

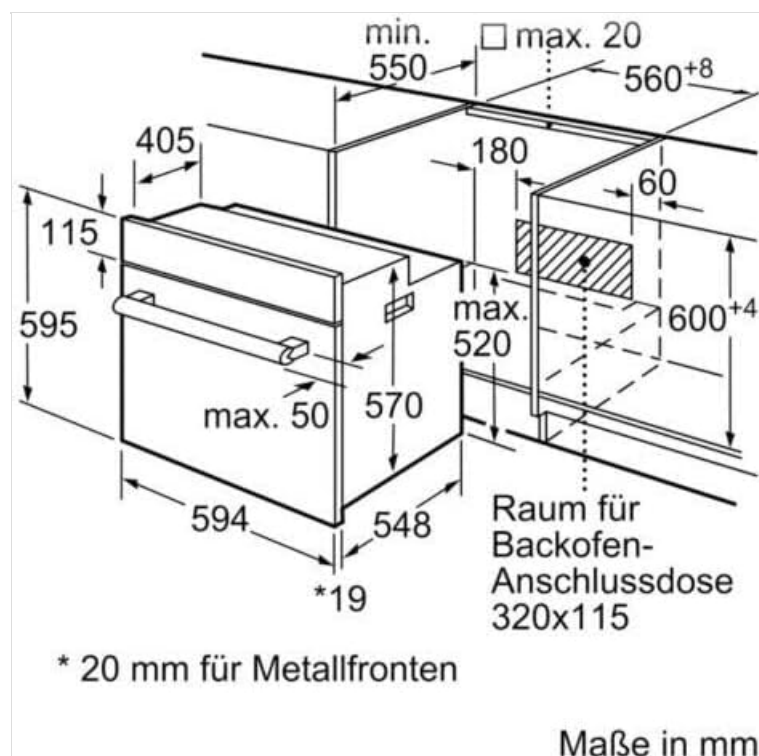 


Image 3.3: Close-up of the Bosch HBF114ES0 Electric Oven control panel, highlighting the rotary selectors and digital display.

4. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your oven. It is recommended that installation be performed by a qualified technician.

Installation Dimensions

Ensure the cabinet opening meets the specified dimensions for proper fit and ventilation.

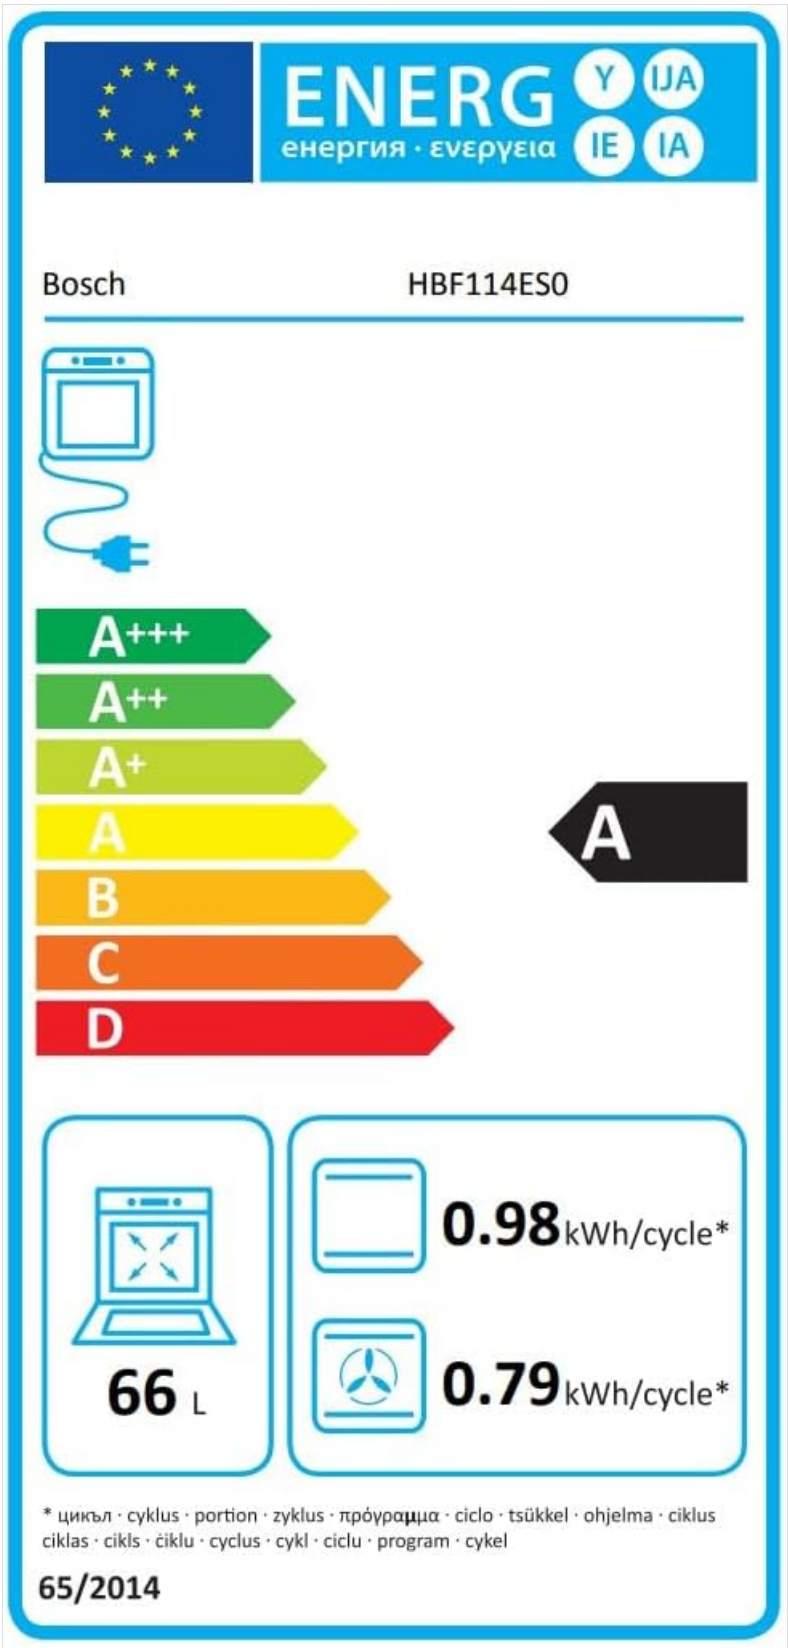 


Image 4.1: Technical drawing illustrating the required installation dimensions (in mm) for the Bosch HBF114ES0 Electric Oven, including width, height, and depth clearances.

First Use

1. Remove all packaging materials and accessories from the oven cavity.
2. Clean the oven interior with a damp cloth and mild detergent.
3. Heat the empty oven for approximately one hour at 200°C (392°F) to burn off any manufacturing residues. Ensure adequate ventilation during this process.
4. Allow the oven to cool completely before its first cooking use.

5. OPERATING INSTRUCTIONS

Your Bosch HBF114ES0 oven offers various cooking functions and precise temperature control.

Setting the Time

Upon initial power-up or after a power outage, the time display will flash. Use the '+' and '-' buttons on the digital display to set the current time. Confirm by pressing the clock symbol or waiting a few seconds.

Selecting a Cooking Function

1. Turn the left rotary knob to select the desired cooking function (e.g., Top/Bottom Heat, Hot Air, Grill).
2. Turn the right rotary knob to set the desired temperature (range 50-275°C).
3. The oven will begin heating. The indicator light will turn off once the set temperature is reached.

Common Cooking Functions

- **Top/Bottom Heat:** Ideal for baking cakes, casseroles, and roasting meat on one level.
- **Hot Air (Convection):** For baking and roasting on multiple levels simultaneously without flavor transfer.
- **Grill:** For grilling flat items, toasting, or browning.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure your oven remains hygienic and performs optimally.

General Cleaning

- Always allow the oven to cool down before cleaning.
- Clean the interior with warm soapy water and a soft cloth. For stubborn stains, use a specialized oven cleaner, following the product instructions carefully.
- Wipe down the exterior with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads, especially on stainless steel surfaces.
- The oven door glass can be cleaned with glass cleaner.

Replacing the Oven Light

Ensure the oven is disconnected from the power supply before attempting to replace the light bulb. Refer to the detailed instructions in the full manual for specific steps.

7. TROUBLESHOOTING

If you encounter an issue with your oven, consult the following common problems and solutions before contacting customer service.

Problem	Possible Cause	Solution
Oven does not heat	No power supply; incorrect settings	Check circuit breaker; ensure oven is plugged in; verify function and temperature settings.
Food not cooking evenly	Incorrect rack position; overloaded oven	Use recommended rack positions; avoid overcrowding the oven.
Smoke or odor during first use	Residues from manufacturing	This is normal. Ensure good ventilation. The odor will dissipate after initial use.

8. SPECIFICATIONS

Detailed technical specifications for the Bosch HBF114ES0 Electric Oven.

Produktdatenblatt

Delegierte Verordnung (EU) Nr. 65/2014

Name oder Warenzeichen des Lieferanten	Bosch
Modellkennung	HBF114ES0
Anzahl der Garräume	1
Garraum 1	
Energieeffizienzindex	95,2
Energieeffizienzklasse	A
Energieverbrauch pro Zyklus (konventioneller Modus)	0,98 kWh
Energieverbrauch pro Zyklus (Umluft-Modus)	0,79 kWh
Wärmequelle	Strom
Volumen	66 Liter

Image 8.1: EU Energy Label for the Bosch HBF114ES0 Electric Oven, indicating an energy efficiency class of A and consumption values.

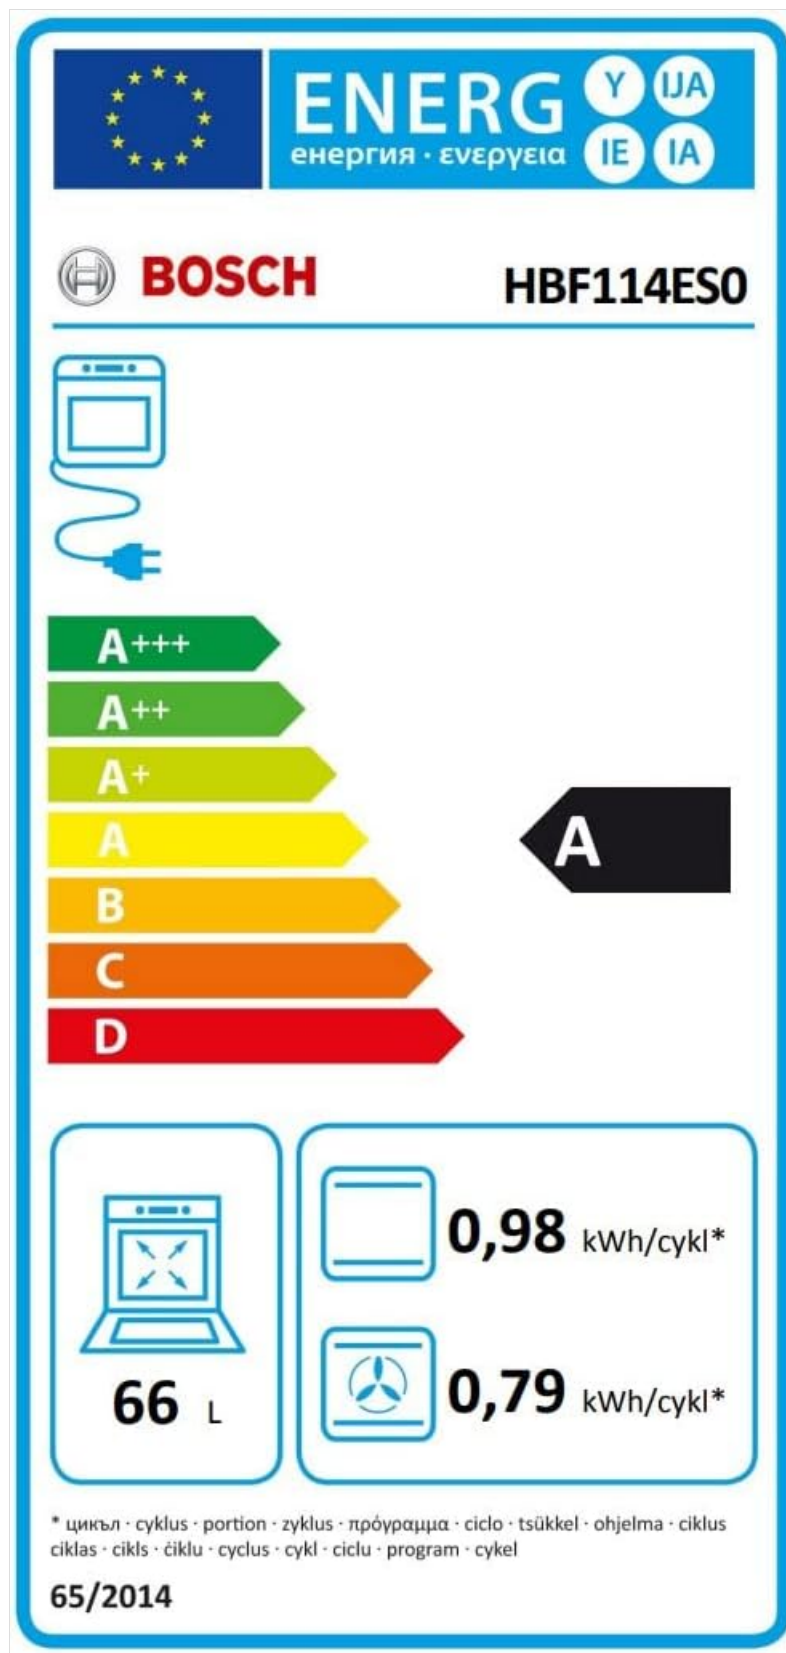 


Image 8.2: Product data sheet for the Bosch HBF114ES0 Electric Oven, detailing energy consumption, volume, and other technical data.

Specification	Value
Brand	Bosch
Model Number	HBF114ES0
Dimensions (L x W x H)	59.4 x 54.8 x 59.5 cm

Specification	Value
Weight	31.59 kg (69.65 lbs)
Energy Efficiency Class	A (A+++ to D scale)
Capacity	66 Litres
Power	3300 Watts
Material	Stainless Steel
ASIN	B07KDRPL2L

9. WARRANTY AND SUPPORT

 


For warranty information, technical assistance, or to order spare parts, please contact Bosch customer service. Details regarding spare parts availability are not provided in this document. Always refer to your purchase documentation or the official Bosch website for the most current warranty terms and support contact information in your region.

You can typically find support contact details on the official Bosch website: www.bosch-home.com

© 2023 Bosch. All rights reserved.

Related Documents - HBF114ES0

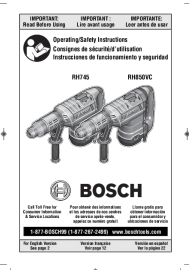	<p>Bosch Multimixer MUZ5MM1 User Manual and Instructions</p> <p>Explore the Bosch Multimixer MUZ5MM1 attachment with this comprehensive user manual. Find detailed instructions on safe operation, assembly, cleaning, and usage examples for your Bosch kitchen machine.</p>
	<p>Bosch GTA 2600 Professional Saw Stand - Assembly and Operating Manual</p> <p>Comprehensive assembly, operating, and safety manual for the Bosch GTA 2600 Professional saw stand, including technical specifications and maintenance information.</p>
	<p>Bosch GDE 18V-12 Professional Dust Extraction Attachment Manual</p> <p>User manual and safety instructions for the Bosch GDE 18V-12 Professional dust extraction attachment, detailing its features, operation, assembly, maintenance, and disposal. Compatible with Bosch GBH 18V-22 rotary hammers.</p>

	<p>Bosch RH745 RH850VC Rotary Hammer Operating and Safety Instructions</p> <p>Comprehensive operating and safety instructions manual for Bosch RH745 and RH850VC rotary hammers, covering usage, assembly, maintenance, and safety guidelines.</p>
	<p>Bosch GRL Professional Rotationslaser: Bedienungsanleitung und technische Daten</p> <p>Entdecken Sie die Bosch GRL Professional Serie von Rotationslasern, einschließlich der Modelle GRL 250 HV, GRL 300 HV und GRL 300 HVG, mit der RC 1 Professional Fernbedienung. Dieses Handbuch bietet detaillierte Anleitungen, Sicherheitshinweise und technische Spezifikationen für präzise Messungen auf Baustellen.</p>
	<p>Bosch LED Remote BRC3600 Instrukcja Obsługi</p> <p>Poznaj funkcje i obsługę pilota Bosch LED Remote BRC3600. Ta instrukcja zawiera szczegółowe informacje dotyczące bezpieczeństwa, instalacji i użytkowania, pomagając w pełni wykorzystać możliwości Twojego systemu Bosch eBike.</p>