

[Manuals.plus](#) /

› [Toastermaster](#) /

› Toastermaster Immersion Hand Blender Mixer Black User Manual

## Toastermaster 8541990211

# Toastermaster Immersion Hand Blender Mixer Black User Manual

Model: 8541990211 | Brand: Toastermaster

## INTRODUCTION

Thank you for choosing the Toastermaster Immersion Hand Blender. This versatile appliance is designed for efficient blending, mixing, chopping, and pureeing directly in your pots, bowls, or the included blending cup. Please read this manual thoroughly before first use to ensure safe and optimal operation.

## IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- To protect against risk of electrical shock, do not immerse the motor body in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Blades are sharp. Handle with care.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended household use.

## PARTS AND FEATURES

The Toastermaster Immersion Hand Blender consists of the following main components:

- **Motor Body:** The main unit containing the powerful 300-watt motor and control buttons.
- **Blending Shaft:** The detachable shaft with stainless steel blades at the end. This part is designed for immersion into ingredients.
- **Control Buttons:** Features high and low-speed settings for versatile blending.
- **25 oz (700 ml) Blending Cup:** A convenient cup for blending smaller quantities or preparing smoothies.





Image: The Toastmaster Immersion Hand Blender, showing the main motor body and the detachable blending shaft. Alongside it is the included blending cup, filled with various fruits like strawberries, blueberries, and sliced apples, demonstrating its use for smoothies.

## SETUP

---

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean Before First Use:** Wash the blending shaft and blending cup in warm, soapy water. Rinse thoroughly and dry. Wipe the motor body with a damp cloth. Do not immerse the motor body in water.
3. **Assemble:** Align the blending shaft with the motor body and twist until it locks securely into place. Ensure it is firmly attached before plugging in.
4. **Position:** Place the ingredients you wish to blend into a suitable container, such as the blending cup, a pot, or a deep bowl. Ensure the container is large enough to prevent splashing.

## OPERATING INSTRUCTIONS

---

1. **Plug In:** Plug the hand blender into a standard electrical outlet.
2. **Immerse:** Submerge the blending shaft into the ingredients. Ensure the blade guard is fully covered by the liquid or mixture to prevent splashing.
3. **Select Speed:** Press and hold either the "Low" or "High" speed button on the motor body to begin blending. The blender will operate as long as the button is held down.
4. **Blend:** Move the blender up and down and in circular motions to ensure all ingredients are thoroughly blended to your desired consistency. For thicker mixtures, the high-speed setting is recommended.
5. **Finish:** Release the button to stop the blender. Wait for the blades to stop completely before removing the blending shaft from the ingredients.
6. **Unplug:** Always unplug the appliance from the power outlet immediately after use.

This immersion blender is ideal for preparing a variety of foods, including smoothies, soups (such as tomato soup directly in a slow cooker), sauces, and baby food. Its powerful 300-watt motor ensures fast and efficient results.

## CLEANING AND MAINTENANCE

---

Proper cleaning and maintenance will extend the life of your hand blender.

1. **Unplug:** Always unplug the blender before cleaning.

- 2. **Detach Blending Shaft:** Twist the blending shaft counter-clockwise to detach it from the motor body.
- 3. **Clean Blending Shaft and Cup:** The blending shaft and blending cup are dishwasher safe for quick and simple cleaning. Alternatively, they can be washed by hand in warm, soapy water. Rinse thoroughly and dry immediately.
- 4. **Clean Motor Body:** Wipe the motor body with a damp cloth. Do not immerse the motor body in water or any other liquid.
- 5. **Storage:** Store the cleaned and dried blender in a dry place, away from direct sunlight and heat.

TROUBLESHOOTING

| Problem                             | Possible Cause                                                            | Solution                                                                                                                                                                                 |
|-------------------------------------|---------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Blender does not turn on.           | Not plugged in; power outage; blending shaft not properly attached.       | Ensure the blender is securely plugged into a working outlet. Check your home's circuit breaker. Re-attach the blending shaft firmly until it clicks.                                    |
| Ineffective blending or food stuck. | Too much food; food pieces too large; not enough liquid; blades are dull. | Reduce the amount of ingredients. Cut food into smaller pieces. Add more liquid to the mixture. Ensure the blade guard is fully submerged. If blades are dull, contact customer support. |
| Motor smells or overheats.          | Overuse; blending very thick mixtures for too long.                       | Stop operation immediately and unplug the blender. Allow it to cool down for at least 15-20 minutes before resuming use. Avoid continuous operation for extended periods.                |

SPECIFICATIONS

|                      |                   |
|----------------------|-------------------|
| Brand                | Toastmaster       |
| Model Number         | 8541990211        |
| Color                | Stainless Steel   |
| Special Feature      | Portable          |
| Style                | Modern            |
| Recommended Uses     | Mixing, Blending  |
| Power Source         | Corded Electric   |
| Number of Speeds     | 2                 |
| Voltage              | 240 Volts         |
| Blade Material       | Stainless Steel   |
| UPC                  | 655772017482      |
| Item Weight          | 1.53 pounds       |
| Date First Available | November 23, 2018 |

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the warranty card included with your purchase or visit the official Toastmaster website. Keep your purchase receipt as proof of purchase for any warranty claims. For further assistance, you may contact Toastmaster customer service through their official channels.