

[Manuals.plus](#) /

› [Air Wick](#) /

› Air Wick Automatic Air Freshener Spray Starter Kit User Manual

Air Wick 6233801918

Air Wick Automatic Air Freshener Spray Starter Kit User Manual

Model: 6233801918

Brand: Air Wick

1. INTRODUCTION AND OVERVIEW

The Air Wick Automatic Air Freshener Spray Starter Kit is designed to fill your home with continuous, fresh fragrance. This system features 24/7 OdorProtect technology, which actively fights odors around the clock, ensuring your living spaces remain welcoming and pleasant.

Each refill provides continuous fragrance for an extended period, up to 70 days when set to the low setting (40-minute interval). The device offers adjustable spray intervals to achieve your desired fragrance level, making it suitable for various rooms such as bathrooms, living rooms, hallways, kitchens, dens, and offices.



Figure 1: Air Wick Automatic Air Freshener Spray Starter Kit, featuring the device and two Fresh Linen refills.

2. PRODUCT COMPONENTS

Your Air Wick Automatic Air Freshener Spray Starter Kit includes the following items:

- 1 x Air Wick Automatic Spray Device (Freshmatic diffuser)
- 2 x Air Wick Fresh Linen Scent Refills
- 2 x AA Batteries (included)

3. SETUP INSTRUCTIONS

1. **Open the Device:** To open the device, twist the top section counter-clockwise and lift it off the base.



Figure 2: Step 1 - Twist to open the device.

2. **Insert Batteries:** Locate the battery compartment inside the device. Insert the two AA batteries, ensuring correct polarity (+/-) as indicated.



Figure 3: Step 3 - Insert AA batteries into the compartment.

3. **Insert Refill:** Place the Air Wick fragrance refill can into the base of the device. Ensure the nozzle of the refill is facing outwards, aligning with the spray opening of the device.



Figure 4: Air Wick device with a Fresh Linen refill, demonstrating up to 70 days of freshness.

4. **Close the Device:** Replace the top section of the device, aligning it with the base, and twist clockwise until it clicks securely into place.



Figure 5: Step 4 - Close the device by twisting the top section back into place.

5. **Placement:** Place the device on a flat, stable surface in your desired room. Ensure it is placed above eye level for optimal fragrance dispersion and away from direct airflow or heat sources.

4. OPERATING INSTRUCTIONS

The Air Wick Automatic Spray device allows you to control the frequency of fragrance release. Use the switch located on the device to select your preferred interval:

- **Low Setting:** Sprays every 40 minutes. Provides up to 70 days of continuous fragrance.
- **Medium Setting:** Sprays every 18 minutes.
- **High Setting:** Sprays every 9 minutes.



Figure 6: Fragrance control settings on the Air Wick Automatic Spray device.

The device will automatically spray at the selected interval, ensuring consistent freshness in your home.

5. MAINTENANCE

Regular maintenance ensures optimal performance of your Air Wick Automatic Spray device.

5.1 Refill Replacement

When the fragrance refill is empty, or when the device indicates a low refill (often by a red flashing light), it's time to replace the can. Follow the setup instructions (Section 3) to open the device, remove the old refill, and insert a new one.

5.2 Battery Replacement

The device requires two AA batteries. If the device stops spraying or the indicator light behaves unusually, replace the batteries. Follow the setup instructions (Section 3) to access the battery compartment and replace the old batteries with new ones, ensuring correct polarity.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not spraying.	◦ Empty fragrance refill. ◦ Depleted batteries. ◦ Refill not properly inserted.	◦ Replace the fragrance refill. ◦ Replace both AA batteries. ◦ Ensure the refill is correctly seated and the nozzle aligns with the spray mechanism.
Red flashing light.	Refill is low or empty.	Replace the fragrance refill.
Weak or inconsistent spray.	Low battery power.	Replace both AA batteries.

7. SPECIFICATIONS

- **Product Dimensions:** 8.44 x 3.19 x 7.75 inches
- **Item Weight:** 1.7 Pounds
- **Model Number:** 6233801918
- **Batteries:** 2 AA batteries (included)
- **Scent:** Fresh Linen
- **Color:** Red, White
- **Item Form:** Spray
- **Power Source:** Air Powered
- **Manufacturer:** Reckitt Benckiser - Hazmat
- **First Available Date:** October 8, 2018

8. SAFETY INFORMATION

Please read and follow all safety warnings and instructions provided on the product packaging and within this manual.

- **Keep Out of Reach of Children and Pets:** The device and refills contain chemicals that can be harmful if ingested or come into contact with skin or eyes.

- **Eye Irritant:** Avoid direct contact with eyes. In case of contact, rinse immediately with plenty of water and seek medical advice if irritation persists.
- **Contents Under Pressure:** Do not puncture or incinerate the aerosol can. Do not expose to heat or store at temperatures above 120°F (49°C).
- **Ventilation:** Use in well-ventilated areas.
- **Device Placement:** Place the device above eye level and ensure the spray is not directed towards people, pets, or food.
- **Battery Safety:** Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly.
- **Legal Disclaimer:** Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

9. WARRANTY AND SUPPORT

For product support, warranty information, or to report any issues, please contact Air Wick customer service. Refer to the product packaging for the most current contact details or visit the official Air Wick website.

Manufacturer: Reckitt Benckiser - Hazmat

Website: www.airwick.us

© 2025 Air Wick. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

