

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image Rolling Toolbox Stool User Manual

Sharper Image 206680

Sharper Image Rolling Toolbox Stool User Manual

Model: 206680 | Part Number: ST7043

1. INTRODUCTION

This user manual provides detailed instructions for the assembly, operation, and maintenance of your Sharper Image Rolling Toolbox Stool. Please read this manual thoroughly before use to ensure safe and efficient operation.

The Sharper Image Rolling Toolbox Stool is designed to provide a comfortable seating solution while keeping your tools organized and accessible in your workshop, garage, or any work area. It features a sturdy steel frame, a cushioned seat, multiple storage drawers, and smooth-gliding swivel casters for easy mobility.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the product:

- Do not exceed the maximum weight capacity of 300 pounds (136 kg) for the stool.
- Ensure all components are securely fastened before use. Regularly check for loose screws or parts.
- Use on a flat, stable, and level surface to prevent tipping.
- Keep hands and fingers clear of moving parts, especially when opening and closing drawers.
- Do not stand on the stool. It is designed for seated use only.
- Keep children and pets away from the stool during assembly and operation.

- Do not expose the stool to excessive moisture or extreme temperatures. It is not water resistant.

3. PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, contact customer support.

Item	Quantity	Description
Toolbox Stool Frame	1	Main steel frame with integrated storage
Cushioned Seat	1	Padded seat for comfort
Swivel Casters	4	Wheels for mobility
Drawers	3	Storage drawers with smooth-gliding slides
Hardware Pack	1	Screws, bolts, and tools for assembly

4. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your Sharper Image Rolling Toolbox Stool. It is recommended to have a second person assist with assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Check against the "Package Contents" list.
2. **Attach Casters:** Securely attach the four swivel casters to the base of the stool frame using the provided screws and wrench. Ensure they are tightened firmly to prevent wobbling.



Image: Underside view of the stool, highlighting the attached swivel casters. These casters allow for easy movement across various surfaces.

3. **Install Drawers:** Slide the three drawers into their respective slots on the stool frame. Ensure they glide smoothly on their tracks.



Image: Front view of the stool with drawers extended. Each drawer provides ample space for tools and accessories, ensuring easy access.

4. **Attach Cushioned Seat:** Place the cushioned seat on top of the stool frame. Align the mounting holes and secure the seat using the remaining screws. Do not overtighten.



Image: A person seated on the stool, demonstrating its ergonomic design and the convenience of accessing tools from the integrated drawers while working.

5. **Final Check:** Once assembled, gently rock the stool to ensure stability. Verify that all screws are tight and that the drawers open and close without obstruction.

5. OPERATING INSTRUCTIONS

The Sharper Image Rolling Toolbox Stool is designed for ease of use and convenience in your workspace.

- **Seating:** Sit comfortably on the cushioned seat. Ensure your weight is evenly distributed.
- **Mobility:** To move the stool, gently push or pull it in the desired direction. The swivel casters allow for 360-degree movement.
- **Tool Storage:** Utilize the three smooth-gliding drawers for storing various tools and small parts. The side trays and slots are ideal for frequently used items like screwdrivers, wrenches, and levels.



Image: Side view of the stool, illustrating the convenient side storage for frequently used tools, keeping them within arm's reach.

- **Accessing Tools:** Open drawers by pulling the handles. Close them by pushing them firmly until they click into place.

6. MAINTENANCE

Regular maintenance will prolong the life and performance of your rolling toolbox stool.

- **Cleaning:** Wipe down the steel frame and seat with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used. Avoid abrasive cleaners or solvents.
- **Caster Care:** Periodically check the casters for debris (hair, lint, etc.) that may impede their movement. Clean as necessary.
- **Hardware Check:** Every few months, inspect all screws and bolts to ensure they are tight. Retighten if any are loose.
- **Drawer Slides:** If drawers become stiff, apply a small amount of silicone lubricant to the drawer slides.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stool wobbles or is unstable.	Loose assembly hardware. Uneven surface.	Check and tighten all screws and bolts. Move the stool to a flat, level surface.

Problem	Possible Cause	Solution
Drawers are difficult to open/close.	Debris in slides. Misaligned.	Clean drawer slides. Apply silicone lubricant. Ensure drawers are properly seated in their tracks.
Casters do not roll smoothly.	Debris caught in wheels. Loose casters.	Remove any debris from the wheels. Check if casters are securely attached.

8. SPECIFICATIONS

Brand:	Sharper Image
Model Number:	206680
Part Number:	ST7043
Material:	Alloy Steel, Rubber
Color:	Black, Red
Product Dimensions:	26"L x 16"W x 14"H
Maximum Weight	
Capacity:	300 Pounds (136 kg)
Number of	
Compartments:	5 (3 drawers, 2 side trays)
Water Resistance	
Level:	Not Water Resistant
Country of Origin:	China

9. WARRANTY AND SUPPORT

Sharper Image products are backed by a limited warranty. For specific warranty details and to register your product, please refer to the warranty card included with your purchase or visit the official Sharper Image website.

For technical support, replacement parts, or general inquiries, please contact Sharper Image Customer Service:

Website: www.sharperimage.com

Phone: Refer to product packaging or website for current contact numbers.

Please have your model number (206680) and part number (ST7043) ready when contacting support.

