

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Monoprice](#) /

> [Monoprice SB-100 2.1-ch Soundbar User Manual](#)

Monoprice 134710

Monoprice SB-100 2.1-ch Soundbar User Manual

Model: 134710

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Monoprice SB-100 2.1-channel Soundbar. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.

The Monoprice SB-100 is designed to enhance your home entertainment experience with powerful and clear audio. It features 80 watts of power, two dynamic drivers, and two integrated bass drivers for superior sound quality. Its versatile design allows for flexible placement options, including beneath a TV or wall-mounted.



Figure 1: Front view of the Monoprice SB-100 Soundbar.

PACKAGE CONTENTS

Verify that all items are present and in good condition upon opening the package. If any items are missing or damaged, please contact Monoprice customer support.

- Monoprice SB-100 2.1-ch Soundbar
- Remote Control
- Power Adapter
- User Manual (this document)
- Wall Mounting Hardware (screws, anchors)

SETUP

Placement Options

The SB-100 offers flexible placement to suit your home theater setup:

- **Tabletop Placement:** Position the soundbar directly beneath your television on a flat, stable surface. Ensure there is adequate space for ventilation.
- **Wall Mounting:** The soundbar includes built-in mounting brackets for easy wall installation. Use appropriate screws and anchors for your wall type. Ensure the soundbar is level and securely fastened.



Figure 2: Soundbar positioned beneath a television.

Connecting Your Soundbar

The SB-100 provides multiple connectivity options for various devices:



Figure 3: Rear panel of the soundbar with input ports.



Figure 4: Detailed view of the soundbar's input connections.

1. **Optical Input:** For the best audio quality, connect an optical cable (not included) from your TV's optical audio output to the soundbar's "OPTICAL" input. Select "OPTICAL" as the input source on the soundbar.
2. **Coaxial Input:** Connect a coaxial audio cable (not included) from your TV's coaxial audio output to the soundbar's "COAXIAL" input. Select "COAXIAL" as the input source.
3. **3.5mm AUX Input:** Use a 3.5mm audio cable (not included) to connect devices with a headphone jack or analog audio output to the soundbar's "AUX" input. Select "AUX" as the input source.
4. **Bluetooth Connection:** For wireless audio streaming from mobile devices, refer to the "Bluetooth Pairing" section under Operating Instructions.

Power Connection

Connect the provided power adapter to the DC IN port on the soundbar's rear panel, then plug the adapter into a standard AC power outlet. The soundbar will enter standby mode.

OPERATING INSTRUCTIONS

Controls

The soundbar can be controlled using the side panel buttons or the included remote control.



Figure 5: Side panel controls (Power, Volume Up/Down, USB port).



Figure 6: Included remote control.

Remote Control Functions:

- **Power Button:** Turns the soundbar On/Off.
- **Mute Button:** Mutes or unmutes the audio.
- **PAIR Button:** Initiates Bluetooth pairing mode.

- **INPUT Button:** Cycles through input sources (Optical, Coaxial, AUX, Bluetooth).
- **VOL+/- Buttons:** Adjusts the master volume level.
- **TREBLE+/- Buttons:** Adjusts treble levels.
- **BASS+/- Buttons:** Adjusts bass levels.
- **DSP Modes (NEWS, MOVIE, MUSIC):** Selects preset equalizer modes.
- **RESET Button:** Resets audio settings to default.
- **USB Playback Controls:** Play/Pause, Skip Forward/Backward (for USB drive playback).

Bluetooth Pairing

1. Ensure the soundbar is powered on.
2. Press the **INPUT** button on the remote or the side panel until "BT" (Bluetooth) is displayed on the soundbar's indicator.
3. The soundbar will automatically enter pairing mode, indicated by a flashing "BT" light.
4. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
5. Select "Monoprice SB-100" from the list of devices.
6. Once paired, the "BT" light will become solid, and you can now stream audio wirelessly.

Note: The soundbar remembers only one paired device. If you wish to connect a new device, you may need to unpair the previous device or initiate pairing mode again.

DSP Listening Modes

The SB-100 features three Digital Signal Processing (DSP) modes to optimize audio for different content types:

- **NEWS Mode:** Enhances clarity of spoken word and compresses dynamics, ideal for news broadcasts or podcasts.
- **MOVIE Mode:** Provides richer bass, expands the soundstage, and enhances dialogue intelligibility for an immersive cinematic experience.
- **MUSIC Mode:** Emphasizes bass response and adds clarity to the high frequencies, suitable for general music listening.

Press the corresponding button (NEWS, MOVIE, MUSIC) on the remote control to switch between these modes.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the soundbar's exterior. Do not use liquid cleaners or abrasive chemicals, as they may damage the finish.
- **Ventilation:** Ensure the soundbar has adequate airflow around it. Do not block ventilation openings.
- **Storage:** If storing the soundbar for an extended period, disconnect it from power and store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Remote Control:** Replace batteries in the remote control when its range decreases or it becomes unresponsive. Use the specified battery type.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not active.	Ensure power cable is securely connected. Test the outlet with another device.
No sound	Incorrect input source selected; Volume too low; Cables not connected properly; TV audio output settings.	Select the correct input source (Optical, Coaxial, AUX, BT). Increase volume. Check all cable connections. Ensure TV audio output is set to external speakers or PCM.
Bluetooth pairing issues	Soundbar not in pairing mode; Device too far; Previous device still connected.	Ensure soundbar is in BT pairing mode (flashing BT). Move device closer. Disconnect/unpair from previous device.
Remote control not working	Dead batteries; Obstruction between remote and soundbar; Remote sensor blocked.	Replace remote batteries. Remove any obstructions. Ensure remote sensor on soundbar is clear.
Sound distortion	Volume too high; Poor audio source quality; Incorrect EQ settings.	Lower the volume. Try a different audio source. Adjust DSP modes or Bass/Treble settings.

SPECIFICATIONS

Feature	Detail
Model Number	134710
Speaker Type	Soundbar with Built-in Subwoofer
Channels	2.1-ch
Output Power	80 Watts (Max)
Connectivity	Bluetooth, Optical, Coaxial, 3.5mm AUX
Bluetooth Range	Up to 10 feet (3 meters)
Product Dimensions (L x W x H)	35.4" x 3" x 2.8" (900mm x 76mm x 71mm)
Item Weight	5.05 lbs (2.29 kg)
Mounting Type	Tabletop, Wall Mount
Color	Black
Power Source	Corded Electric
Included Components	2.1-ch Soundbar

WARRANTY AND SUPPORT

Limited Warranty

The Monoprice SB-100 Soundbar comes with a limited warranty. For specific terms and conditions of your warranty, please refer to the warranty information provided with your purchase or visit the official Monoprice website.

Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact Monoprice Customer Support. You can find contact information and additional resources on the official Monoprice website:

www.monoprice.com

© 2024 Monoprice, Inc. All rights reserved.
Monoprice and the Monoprice logo are trademarks of Monoprice, Inc.