

[manuals.plus](#) /› [SINGING WOOD](#) /› [Singingwood SBX030BT CD Player Boombox User Manual](#)**SINGING WOOD SBX030BTB**

Singingwood SBX030BT CD Player Boombox User Manual

Model: SBX030BTB

INTRODUCTION

Thank you for purchasing the Singingwood SBX030BT CD Player Boombox. This device offers a versatile audio experience with its CD player, AM/FM radio, Bluetooth connectivity, USB playback, and auxiliary input. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your boombox.

Bluetooth Connection



Image: The Singingwood SBX030BT CD Player Boombox in Starlight Blue, showcasing its compact design.

KEY FEATURES

- **Sleek and User-Friendly Design:** Features easy-to-use buttons and an LED display for effortless operation. Its compact and modern design is suitable for various environments.
- **Clear Stereo Sound:** Equipped with dual premium 3-inch front-firing speakers, delivering crisp, well-balanced stereo sound (2W x 2 RMS).
- **Versatile CD Player:** The top-loading CD player supports CD, CD-R/RW, MP3 CDs, and audiobook CDs, with shuffle (RAND) and repeat (REP) functions.
- **AM and FM Radio:** Built-in AM and FM tuner with a classic manual tuning knob for enjoying radio stations.
- **Bluetooth Streaming:** Easily pair with Bluetooth-enabled devices for wireless music and podcast streaming with a stable connection.
- **USB Playback:** Supports MP3 or WMA files from USB flash drives up to 128 GB (FAT32 format only; exFAT/NTFS not supported).
- **Convenient Features:** Includes a 3.5mm auxiliary (AUX) input for wired connections and a headphone

jack for private listening. The Function (FUNC) button allows easy switching between CD, USB, AUX, FM, AM, and Bluetooth modes.

CONTROLS AND CONNECTIONS

Familiarize yourself with the boombox's controls and connection ports for proper operation.



Image: Front view of the boombox with labels for FM Antenna, Volume Control Knob, LED Screen, Power ON/OFF, Play/Pause, Function, B-Skip, REP/RAND/STOP/PROG, F-Skip, Headphone Jack, USB Port, and AUX In Jack.

- **Power ON/OFF:** Turns the unit on or off.
- **Volume Control Knob:** Adjusts the audio output level.
- **LED Screen:** Displays current mode, track number, or radio frequency.
- **Play/Pause:** Starts or pauses playback in CD, USB, or Bluetooth modes.
- **Function (FUNC) Button:** Cycles through available modes: CD, USB, AUX, FM, AM, Bluetooth.
- **B-Skip / F-Skip:** Skips backward or forward through tracks on CD/USB, or tunes radio frequencies.
- **REP/RAND/STOP/PROG:** Controls repeat, random playback, stops playback, or programs CD/USB tracks.
- **FM Antenna:** Extend for optimal FM radio reception.
- **Headphone Jack (3.5mm):** For private listening with headphones.
- **USB Port:** Connect a USB flash drive for MP3/WMA playback.
- **AUX In Jack (3.5mm):** Connect external audio devices using an auxiliary cable.

SETUP

Powering the Boombox

The boombox can be powered by AC power or batteries.

AC Power Operation:

1. Ensure the boombox is switched off.
2. Connect the supplied AC power cord to the AC IN jack on the back of the unit.
3. Plug the other end of the AC power cord into a standard wall outlet (AC 120V ~ 60Hz).



Image: The boombox connected to a wall outlet via its AC power cord, illustrating AC power operation.

Battery Operation:

1. Ensure the boombox is switched off and disconnected from AC power.
2. Open the battery compartment cover on the bottom of the unit.
3. Insert 6 x 'C' size batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

OPERATING INSTRUCTIONS

CD Player Operation

1. Press the **Power** button to turn on the boombox.
2. Press the **FUNC** button repeatedly until 'CD' mode is selected.
3. Open the CD compartment cover by gently lifting it.
4. Place a CD (CD, CD-R/RW, MP3 CD, or audiobook CD) onto the center spindle with the label side facing up.
5. Close the CD compartment cover. The boombox will read the disc, and the track number will appear on the LED display.
6. Press the **Play/Pause** button to start playback.
7. Use the **B-Skip** and **F-Skip** buttons to navigate between tracks.
8. Press the **REP/RAND/STOP/PROG** button to cycle through repeat modes (repeat one, repeat all) or random playback. Press and hold to stop playback.

CD-R / CD-RW CD PLAYER

Enjoy the different beauty of sound effect

MP3
AUDIO DISC

disc
COMPACT
DIGITAL AUDIO

Image: A hand placing a CD into the top-loading CD player of the boombox, illustrating the CD loading process.

AM/FM Radio Operation

1. Press the **Power** button to turn on the boombox.
2. Press the **FUNC** button repeatedly until 'FM' or 'AM' mode is selected.
3. For FM reception, extend the FM antenna for best signal. For AM reception, rotate the unit for best signal.
4. Use the **Tuning Knob** to manually tune to your desired radio station.

Bluetooth Streaming

1. Press the **Power** button to turn on the boombox.
2. Press the **FUNC** button repeatedly until 'BT' (Bluetooth) mode is selected. The LED display will show 'BT' and flash, indicating it's in pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select 'SINGING WOOD' from the list of devices. Once paired, the 'BT' indicator on the boombox will stop flashing and remain solid.

5. You can now stream audio from your device to the boombox. Use your device's controls for track navigation and volume, or the boombox's volume knob.

AC / BATTERY POWER SUPPLY

Required AC power cord or 6C cell batteries (Not included)



Image: A smartphone showing its Bluetooth settings, with 'SINGING WOOD' visible for pairing, next to the boombox.

USB Playback

1. Press the **Power** button to turn on the boombox.
2. Insert a USB flash drive (FAT32 format, up to 128 GB) into the USB port.
3. Press the **FUNC** button repeatedly until 'USB' mode is selected. The boombox will automatically detect and begin playing MP3/WMA files from the USB drive.
4. Use the **Play/Pause**, **B-Skip**, **F-Skip**, and **REP/RAND/STOP/PROG** buttons to control playback.



Image: A USB flash drive being inserted into the USB port of the boombox, demonstrating USB playback setup.

Auxiliary Input (AUX)

1. Press the **Power** button to turn on the boombox.
2. Connect one end of a 3.5mm audio cable (not included) to the **AUX In** jack on the boombox.
3. Connect the other end of the audio cable to the headphone jack or audio output of your external device (e.g., MP3 player, smartphone).
4. Press the **FUNC** button repeatedly until 'AUX' mode is selected.
5. Start playback on your external device. Adjust volume using both the external device and the boombox's volume knob.



*Image: An audio cable being plugged into the **AUX In** jack of the boombox, showing how to connect an external device.*

Headphone Jack

1. Plug your 3.5mm headphones into the **Headphone Jack** on the front of the boombox.
2. Audio will automatically switch from the speakers to your headphones.
3. Adjust the volume using the boombox's volume knob.



Image: A headphone jack being inserted into the boombox, indicating private listening functionality.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the boombox. Do not use abrasive cleaners or solvents.
- **CD Lens Care:** If the CD player experiences reading errors, use a commercially available CD lens cleaner to clean the lens.
- **Storage:** When not in use for extended periods, remove batteries and store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Antenna:** Handle the FM antenna carefully to avoid damage. Retract it when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC cord not connected; Batteries depleted or incorrectly inserted.	Ensure AC cord is securely plugged in; Replace batteries or check polarity.
CD not playing / skipping	CD is dirty, scratched, or inserted incorrectly; CD lens is dirty.	Clean or replace CD; Insert CD with label side up; Use a CD lens cleaner.
Poor radio reception	FM antenna not extended; Unit position for AM.	Extend FM antenna fully; Rotate the unit for better AM signal.
Bluetooth not pairing	Boombox not in BT mode; Device Bluetooth off; Device too far.	Select BT mode; Enable Bluetooth on your device; Move device closer to boombox.
USB not playing	USB not inserted correctly; Unsupported file format; USB drive not FAT32.	Reinsert USB drive; Ensure files are MP3/WMA; Format USB drive to FAT32.

SPECIFICATIONS

- **Model Number:** SBX030BTB
- **Product Dimensions:** 11.8 x 9 x 4.8 inches

- **Item Weight:** 3.83 pounds
- **Connectivity Technology:** Bluetooth, Auxiliary, USB
- **Speaker Type:** Stereo (2W x 2 RMS)
- **CD Compatibility:** CD, CD-R/RW, MP3 CDs, Audiobook CDs
- **USB Compatibility:** MP3/WMA files, up to 128 GB (FAT32 format)
- **Power Source:** AC 120V ~ 60Hz or 6 x 'C' size batteries (not included)

OFFICIAL PRODUCT VIDEOS

Singingwood SBX030 Series Boombox/CD Player Overview

Your browser does not support the video tag.

Video: An official overview of the Singingwood SBX030 series boombox, highlighting its various features and design aspects.

SBX030BT CD Player Boombox Features

Your browser does not support the video tag.

Video: A detailed look at the features of the SBX030BT CD Player Boombox, including its connectivity options and ease of use.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Singingwood website. Keep your proof of purchase for any warranty claims.