

[Manuals.plus](#) /

> [bed geek](#) /

> bed geek Handheld Cordless Personal Wand Massager (Model BG_THREE) User Manual

bed geek BG_THREE

bed geek Handheld Cordless Personal Wand Massager User Manual

Model: BG_THREE | Brand: bed geek

1. PRODUCT OVERVIEW

The bed geek Handheld Cordless Personal Wand Massager is designed to provide a soothing and effective massage experience. Crafted with ultra-soft, body-safe silicone, it features an ergonomic prism shape for comfortable handling. This device offers 20 unique vibration patterns and 8 adjustable speeds, along with a memory function to recall your preferred settings. Its waterproof design ensures easy cleaning and enhanced durability, while the USB rechargeable battery provides cordless convenience for use at home or on the go.

8 Speeds • 20 Patterns



Super Quiet

Image: The bed geek massager highlighting its 8 speeds, 20 patterns, and super quiet operation.

2. SAFETY INFORMATION

- Always be gentle and avoid applying excessive pressure, especially on sensitive areas.
- Do not use on broken skin or open wounds.
- Always use on clean, dry skin.
- Follow all safety guidelines provided with the product.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

3. PACKAGE CONTENTS

- bed geek Handheld Cordless Personal Wand Massager
- USB Charging Cable
- Travel Pouch

4. SETUP

4.1 Charging the Device

Before first use, fully charge the massager. Locate the charging port at the base of the massager. Insert the small pin connector of the provided USB charging cable into the port. Connect the USB-A end of the cable to a compatible USB power source (e.g., computer, wall adapter). The indicator lights on the massager will illuminate during charging and turn off or change color when fully charged. A full charge typically takes approximately 2-3 hours.

Water / Splash Resistant



Image: The bed geek massager shown with its USB charging cable, emphasizing its travel-friendly and fast-chargeable design.

Your browser does not support the video tag.

Video: A short demonstration of the bed geek PLAY:THREE massager, showcasing its design and features.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To turn the massager **ON**, press and hold the power button (usually the bottom button with a circle icon) for 2 seconds. The indicator lights will illuminate.
- To turn the massager **OFF**, press and hold the power button again for 2 seconds. The indicator lights will turn off.

5.2 Adjusting Vibration Patterns and Speeds

- The massager features 20 unique vibration patterns. To cycle through these patterns, press the middle button (often marked with a 'W' or wave icon) while the device is on.
- The device also has 8 powerful speed settings. To adjust the intensity, press the top button (often marked with '|||' or intensity bars) to increase or decrease the speed within the selected pattern.
- **Memory Feature:** The massager will remember your last used pattern and speed setting for convenience upon next activation.



Powerful /
Rechargeable

bed geek



Super Long
Battery Life

Image: Close-up of the bed geek massager's control panel, showing the power, vibration pattern, and intensity buttons.

5.3 Flexible Head Design

The massager is equipped with a flexible head that can bend to target various muscle groups and hard-to-reach areas, providing a customizable and effective massage experience.

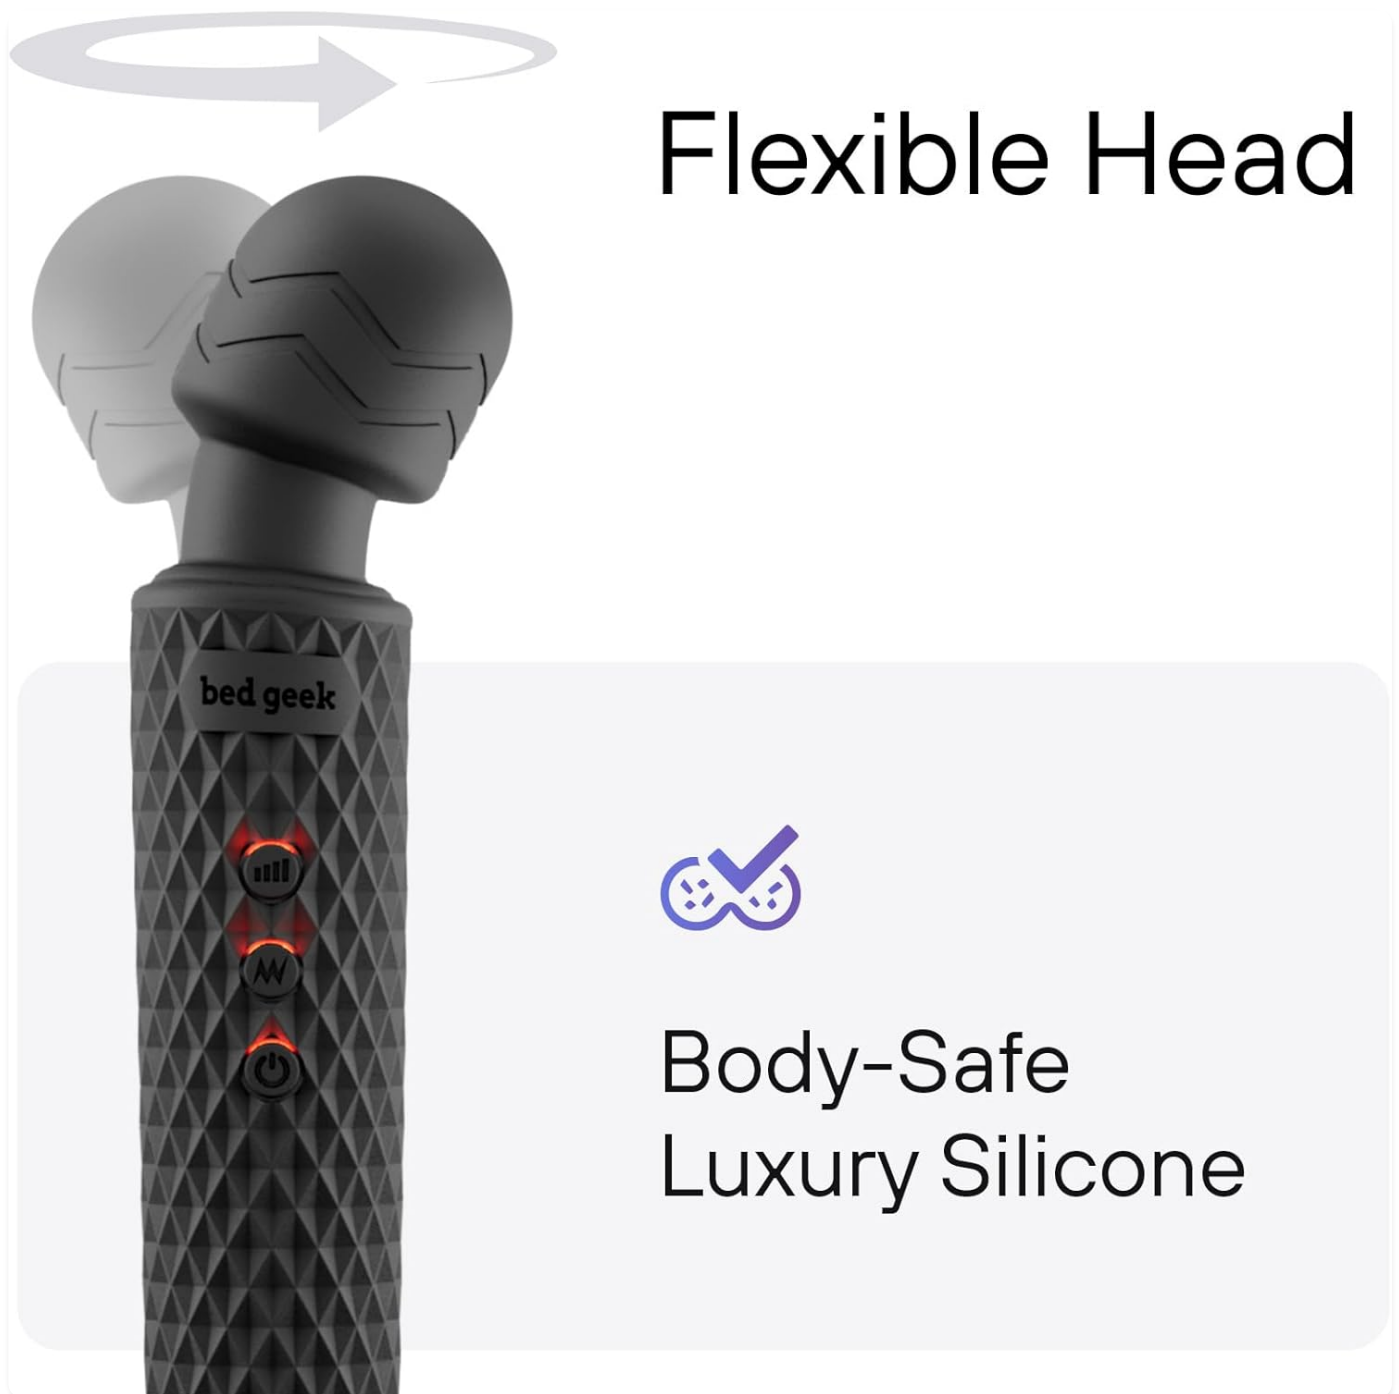


Image: The bed geek massager demonstrating its flexible head and highlighting its body-safe luxury silicone material.

6. MAINTENANCE

6.1 Cleaning

The bed geek massager is waterproof, making it easy to clean. After each use, wash the massager with warm water and mild soap, or wipe it down with a wet wipe. Ensure the device is completely dry before storing it. Do not use cleaning agents containing alcohol, gasoline, or acetone, as these may damage the silicone material.

Travel Friendly



Fast Chargeable / USB Cable Included

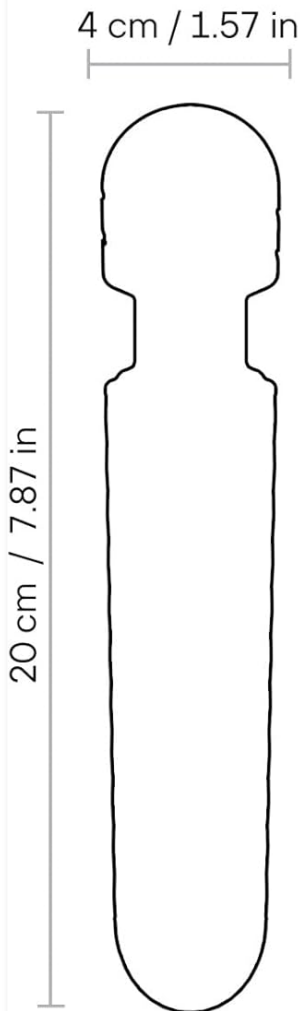


Image: The bed geek massager shown under running water, illustrating its water/splash resistant feature.

6.2 Storage

Store the massager in a cool, dry place, away from direct sunlight and extreme temperatures. Use the provided travel pouch to keep it clean and protected when not in use or during travel.

7. TROUBLESHOOTING

- **Device not turning on:** Ensure the massager is fully charged. Connect it to the USB charging cable and allow sufficient time for charging.
- **Weak vibrations:** Check the battery level. If low, recharge the device. Also, ensure the intensity setting is adjusted to your preference using the top button.
- **Buttons unresponsive:** Ensure the device is not locked (if applicable, refer to specific product instructions for lock features). If issues persist, try fully charging the device.

8. SPECIFICATIONS

Feature	Detail
Model Number	BG_THREE
Product Dimensions	3.94 x 1.57 x 7.87 inches; 8.11 ounces
Material	Skin-Soft Silicone
Vibration Patterns	20
Speeds	8
Waterproof	Yes
Rechargeable	USB (1 A battery included)
First Available	June 17, 2019

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official bed geek website. Keep your purchase receipt for any warranty claims.