

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Smoby](#) /

› [Smoby - Maison pour Enfant Nature II avec Cuisine et Accessoires \(810713\) Maison Enfant, A2103306, Coloré Champêtre](#)

Smoby 810713

Smoby Nature II Playhouse with Kitchen

INSTRUCTION MANUAL

Product Overview

The Smoby Nature II Playhouse with Kitchen is a vibrant and durable outdoor play structure designed to inspire imaginative play in children. This playhouse features a main house area, an integrated kitchen with accessories, and various openings like a door and windows, providing a realistic and engaging play environment. Made from robust plastic, it is built to withstand outdoor conditions.



Image: The Smoby Nature II Playhouse with Kitchen, showcasing its colorful design and integrated kitchen area.

Important Safety Information

Please read and understand all safety warnings before assembly and use. Failure to follow these instructions may result in injury.

- This product is intended for family use only.
- Recommended for children aged 24 months and older.
- Adult supervision is required at all times when children are playing with the playhouse.
- Ensure the playhouse is assembled on a flat, stable surface away from hazards such as fences, trees, or other structures.
- Regularly inspect the playhouse for any loose parts, damage, or wear. Do not use if damaged.

Package Contents

The Smoby Nature II Playhouse with Kitchen includes one main playhouse unit and various accessories for the

integrated kitchen. Please ensure all components are present before beginning assembly.



Image: A detailed view of the playhouse's integrated kitchen area, showing the sink, stove, and included accessories like plates and utensils.

Assembly Instructions

This product requires self-assembly. For optimal results and safety, it is highly recommended that two adults assemble the playhouse. Assembly typically takes approximately 2 hours.

1. Unpack all components and verify against the parts list provided in the manufacturer's manual (not included here).
2. Identify the main panels (walls, roof, floor) and the kitchen unit.
3. Follow the step-by-step diagrams in the manufacturer's manual to connect the panels securely. Ensure all locking mechanisms or screws are properly fastened.
4. Attach the roof, door, and window elements.

5. Install the kitchen unit and place the accessories as instructed.
6. Before allowing children to play, double-check all connections for stability and security.



Image: A line drawing illustrating the overall dimensions of the Smoby Nature II Playhouse: 145 cm (length) x 110 cm (width) x 127 cm (height).

Operating Your Playhouse

The Smoby Nature II Playhouse offers various interactive elements for children's enjoyment and development.

- **Door:** The playhouse features a functional door for easy entry and exit, encouraging role-play.
- **Windows:** Two windows allow light and air into the playhouse, and one features a functional shutter for interactive play.
- **Kitchen Area:** The integrated kitchen includes a sink, stove, and various accessories, promoting imaginative cooking and social play.

This playhouse is designed to foster imagination, encourage discovery of the environment, develop sharing skills and teamwork, provide entertainment, and introduce children to gardening concepts through play. It also helps in developing dexterity and agility.



Image: Two children, a girl and a boy, happily playing with the Smoby Nature II Playhouse, demonstrating its interactive features.

Image: A child peeking out from one of the playhouse windows, highlighting the interactive window feature.

Care and Maintenance

Proper care will extend the life of your Smoby Nature II Playhouse.

- **Cleaning:** Wipe down the surfaces with a damp cloth and mild soap. Avoid abrasive cleaners or harsh chemicals.
- **Weather Resistance:** The playhouse is weather-resistant, designed for outdoor use. However, during extreme weather conditions (e.g., heavy snow, strong winds), it is advisable to secure or store the playhouse to prevent damage.
- **Inspection:** Periodically check all connections, screws, and plastic parts for wear, damage, or loosening. Tighten any loose screws and replace damaged parts immediately.

Troubleshooting Guide

If you encounter any issues with your Smoby Nature II Playhouse, please refer to the following common solutions:

- **Assembly Difficulties:** If parts do not fit together easily, ensure you are following the manufacturer's assembly diagrams precisely. Some parts may require firm pressure to snap into place. Verify that you have the correct parts for each step.
- **Missing or Damaged Parts:** If you find any parts are missing or damaged upon opening the package, do not proceed with assembly. Contact Smoby customer support for assistance.
- **Stability Issues:** Ensure the playhouse is placed on a completely flat and level surface. Re-check all

connections and screws to ensure they are securely fastened.

Product Specifications

Feature	Specification
Model Number	810713 (Nature Playhouse)
Dimensions (L x W x H)	145 x 110 x 127 cm
Weight	5 kg
Material	Plastic
Recommended Age	24 months and up
Number of Players	2-4
Number of Windows	2
Assembly Required	Yes

Warranty and Customer Support

For specific warranty details, please refer to the documentation provided with your purchase or visit the official Smoby website. If you require assistance with assembly, have questions about product functionality, or need to inquire about spare parts, please contact Smoby customer service directly. Information regarding the availability of spare parts is not provided in this manual.

You can visit the Smoby brand store for more information:[Smoby Brand Store](#)