

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cecotec](#) /

› [Cecotec ProClean 6010 Microwave Oven User Manual](#)

Cecotec 6010

Cecotec ProClean 6010 Microwave Oven User Manual

Model: 6010 | Brand: Cecotec

INTRODUCTION

Thank you for choosing the Cecotec ProClean 6010 Microwave Oven. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

The ProClean 6010 microwave features an elegant black design with stainless steel finishes and a 23-liter capacity. It incorporates 3DWave technology for uniform heating and a Ready2Clean coating for easy maintenance. With 800W of power and a user-friendly digital control panel, it is designed for convenience and performance.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow dirt or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Do not use corrosive chemicals or vapors in this appliance.
- Close supervision is necessary when the appliance is used by or near children.
- Only use utensils suitable for microwave ovens.

PRODUCT OVERVIEW

The Cecotec ProClean 6010 microwave oven is designed for convenience and efficiency in your kitchen. Key features include:

- **23-Liter Capacity:** Ideal for various cooking needs.
- **800 W Power:** Efficient heating with 5 adjustable power levels.
- **3DWave Technology:** Ensures uniform heating by completely surrounding food with waves, eliminating cold spots.
- **Ready2Clean Coating:** Special interior coating that repels dirt, making cleaning quick and easy.
- **Digital Control Panel:** Intuitive LED display for easy program selection and time setting.
- **8 Preset Programs:** Optimized settings for common dishes.
- **Defrost Mode:** Adapts to different food types for effective thawing.
- **Child Safety Lock:** Prevents accidental operation by children.
- **Acoustic Alert:** Notifies when cooking is complete.



Front view of the Cecotec ProClean 6010 Microwave Oven, showcasing its sleek black and stainless steel design with digital display.



Illustration highlighting the 23-liter capacity of the microwave


oven, indicating ample space for various dishes.



Visual representation of the 3DWave technology, showing how microwaves evenly distribute heat around food for consistent cooking.



Close-up of the digital control panel, detailing the 8 preset programs available for different food types.

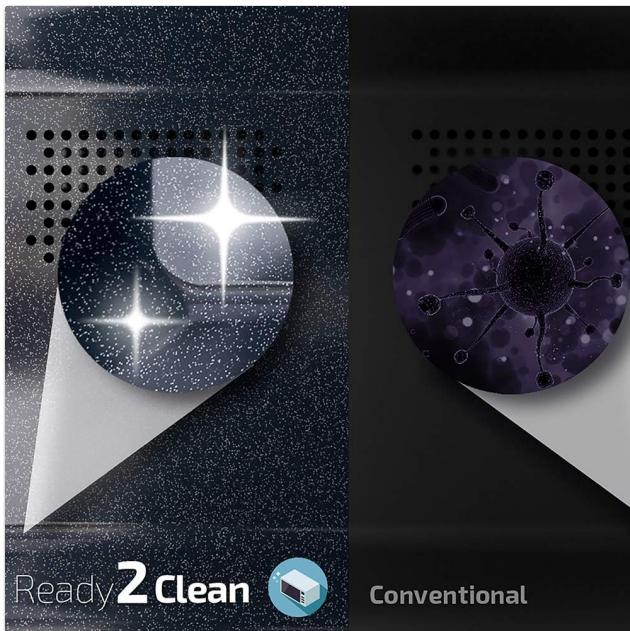

Comparison image illustrating the easy-to-clean Ready2Clean interior coating versus a conventional microwave interior, showing reduced dirt adhesion.

SETUP AND INSTALLATION

Unpacking

- Carefully remove the microwave oven and all packaging materials.
- Check the oven for any damage, such as dents or a misaligned door. Do not operate if damaged.
- Remove any protective film from the surface of the cabinet and door.
- Ensure the turntable and turntable ring are present and undamaged.

Placement

- Place the oven on a flat, stable surface that can support its weight.
- Ensure adequate ventilation: leave a minimum of 20 cm clearance above the oven, 10 cm at the rear, and 5 cm on both sides.
- Do not block any ventilation openings.
- Keep the oven away from heat sources and strong magnetic fields.

Electrical Connection

- Plug the oven into a properly installed and grounded wall outlet (230 Volts).
- Do not use extension cords or adapters.

OPERATING INSTRUCTIONS

Basic Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the door securely.
3. Press the "Power Level" button repeatedly to select the desired power level (e.g., P100 for 800W, P80 for 640W, etc. - assuming 5 levels).

4. Use the numeric keypad to enter the cooking time (up to 100 minutes).
5. Press the "Start" button to begin cooking.

Preset Programs

The ProClean 6010 offers 8 convenient preset programs for various food items:

1. Popcorn
2. Potato
3. Pizza
4. Beverages
5. Reheat
6. Defrost
7. Quick Defrost
8. Cook by Power (Manual Power Setting)

To use a preset program:

1. Place food in the oven.
2. Press the "Menu" or "Auto Cook" button (refer to specific button on image, assuming there is one for programs) repeatedly until the desired program number appears on the display.
3. Press "Start". The oven will automatically set the cooking time and power level.

Defrost Function

The defrost function allows you to thaw food based on weight or time.

- **Defrost by Weight:** Press the "Defrost by Weight" button, then use the numeric keypad to enter the food's weight. The oven will calculate the defrosting time.
- **Defrost by Time:** Press the "Defrost by Time" button, then use the numeric keypad to enter the desired defrosting time.
- Press "Start" to begin.

Setting the Clock

- Press the "Clock" button.
- Use the numeric keypad to enter the current time (e.g., 12:30).
- Press the "Clock" button again to confirm.

Child Safety Lock

To activate the child safety lock, press and hold the "Stop/Cancel" button for approximately 3 seconds until a lock indicator appears on the display. To deactivate, repeat the process.

MAINTENANCE AND CLEANING

Regular cleaning of your microwave oven will ensure its longevity and optimal performance.

Interior Cleaning (Ready2Clean)

The Cecotec ProClean 6010 features a special Ready2Clean coating that repels dirt, making cleaning effortless.

- After each use, wipe the interior with a damp cloth and mild detergent.

- For stubborn stains, place a bowl of water with lemon slices inside and heat for 2-3 minutes. The steam will loosen the residue, making it easier to wipe away.
- Do not use abrasive cleaners, scouring pads, or sharp objects, as these can damage the Ready2Clean coating.

Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the control panel with a soft, slightly damp cloth. Avoid excessive moisture.
- Ensure the door seals are clean to maintain proper operation.

Turtable and Ring

- The glass turntable and turntable ring can be removed for cleaning.
- Wash them in warm, soapy water or in the dishwasher.
- Ensure they are completely dry before placing them back in the oven.

TROUBLESHOOTING

If you encounter any issues with your microwave oven, please refer to the following table before contacting customer service.

Problem	Possible Cause	Solution
Oven will not start	Door not closed properly. Power cord not plugged in. Fuse blown or circuit breaker tripped. Child lock activated.	Close the door firmly. Ensure the power cord is securely plugged into an outlet. Check your household fuse/circuit breaker box. Deactivate the child lock (press and hold "Stop/Cancel" for 3 seconds).
Food not heating	Incorrect cooking time or power level set. Food not suitable for microwave.	Adjust cooking time and power level. Ensure food is in a microwave-safe container.
Turtable not rotating	Turtable or ring not properly placed. Obstruction under the turntable.	Re-position the turntable and ring correctly. Remove any debris from under the turntable.
Unusual noise during operation	Food container touching oven walls. Turntable not seated correctly.	Ensure container is centered and not too large. Check and re-seat the turntable.

SPECIFICATIONS

Feature	Detail
Brand	Cecotec

Feature	Detail
Model Number	V1704559
Color	6010 Inox (Black with Stainless Steel)
Capacity	23 Liters
Power Output	800 Watts
Voltage	230 Volts
Material	Steel
Product Dimensions (L x W x H)	53.7 x 42.2 x 32 cm
Product Weight	12.3 kg
Noise Level	44 Decibels
Special Features	Control panel lock, Turntable, Programmable, 3DWave Technology, Ready2Clean coating
Installation Type	Freestanding
Components Included	Microwave, Turntable, Instruction Manual

WARRANTY AND SUPPORT

Your Cecotec ProClean 6010 Microwave Oven comes with a standard manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions.

For technical support, service, or to purchase replacement parts, please contact Cecotec customer service. You can find more information and contact details on the official Cecotec website or through your retailer.

Online Support: Visit the [Cecotec Brand Store](#) for additional product information and support resources.