

[Manuals.plus](#) /

> [Cecotec](#) /

> Cecotec Power Instant-ccino 20 Touch Semi-Automatic Coffee Machine User Manual

Cecotec 01558

Cecotec Power Instant-ccino 20 Touch Semi-Automatic Coffee Machine User Manual

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Cecotec Power Instant-ccino 20 Touch semi-automatic coffee machine. Please read this manual thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Extreme caution must be used when moving an appliance containing hot liquids.

PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Cecotec Power Instant-ccino 20 Touch coffee machine:



Figure 1: Overall view of the Cecotec Power Instant-ccino 20 Touch semi-automatic coffee machine.

- **Control Panel:** Touch-sensitive interface for selecting drink types and settings.
- **Water Tank:** Removable 1.4L capacity tank for water supply.
- **Milk Tank (Full-Milk):** Removable 500ml tank for milk, connects directly to the machine for automatic frothing.
- **Portafilter:** Holds ground coffee for brewing.
- **Filters:** Includes two filters for single or double espresso.
- **Double Spout:** Allows brewing one or two coffees simultaneously.
- **Drip Tray:** Collects excess liquid and is removable for easy cleaning.
- **Cup Warming Tray:** Located on top, helps pre-heat cups.
- **Adjustable Tray:** Base tray can be adjusted in height to accommodate different cup sizes.
- **Measuring Spoon with Tamper:** For precise coffee dosing and tamping.



Figure 2: Close-up of the touch control panel and cup warming tray.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and ensure all components are present.
2. **Initial Cleaning:** Before first use, wash the water tank, milk tank, portafilter, and filters with warm soapy water. Rinse thoroughly and dry. Wipe the exterior of the machine with a damp cloth.
3. **Fill Water Tank:** Fill the 1.4L water tank with fresh, cold water up to the MAX level. Place it securely back into the machine.
4. **Attach Milk Tank (Optional):** If preparing milk-based drinks, fill the 500ml Full-Milk tank with cold milk. Connect it to the designated port on the machine.
5. **Power On:** Plug the machine into a suitable electrical outlet (230V). Press the power button to turn on the machine. The machine will begin heating, indicated by flashing lights on the control panel.
6. **Priming the System:** Before brewing coffee, it is recommended to run a cycle without coffee to prime the system. Place a cup under the spout and press the single espresso button. Allow water to flow through. Repeat this process for the milk system by pressing a milk-based drink button with the milk tank attached.

OPERATING INSTRUCTIONS

Your Cecotec Power Instant-ccino 20 Touch offers various options for preparing your favorite coffee beverages.

Preparing Espresso

1. **Prepare Ground Coffee:** Use the measuring spoon to add ground coffee to the appropriate filter (single or double) in the portafilter. Tamp the coffee gently with the tamper end of the spoon.
2. **Attach Portafilter:** Insert the portafilter into the brewing head and turn it to the right until it is securely locked.
3. **Place Cup(s):** Place one or two cups on the drip tray under the spouts. Adjust the height of the tray if necessary.
4. **Select Espresso:** On the touch control panel, press the button for a single espresso or double espresso. The machine will automatically brew and dispense the coffee.



Figure 3: Brewing two espressos simultaneously.

Preparing Milk-Based Beverages (Cappuccino, Latte)

1. **Fill Milk Tank:** Ensure the Full-Milk tank is filled with cold milk and securely attached to the machine.
2. **Prepare Espresso:** Follow steps 1-3 for preparing espresso.
3. **Select Beverage:** On the touch control panel, select the desired milk-based beverage (e.g., Cappuccino, Latte). The machine will first brew the espresso, then automatically froth and dispense milk into your cup.
4. **Adjust Foam:** The milk tank typically has a dial to adjust the amount of foam. Experiment to find your preferred consistency.



Figure 4: Machine dispensing frothed milk for a beverage.



Figure 5: Examples of beverages prepared by the machine.

Customizing Your Coffee (Custom Coffee System)

The Custom Coffee system allows you to program the desired quantity of coffee, milk, and foam for each beverage type. Refer to the specific programming instructions in the full manual for detailed steps on how to save your personalized settings.

Hot Water Function

Your machine can also dispense hot water for teas and infusions. Consult the control panel for the dedicated hot water function button.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your coffee machine.

Daily Cleaning

- **Drip Tray:** Empty and clean the drip tray daily. It is easily removable.
- **Portafilter and Filters:** After each use, remove the portafilter and discard used coffee grounds. Rinse the portafilter and filters under running water.
- **Milk System:** After preparing milk-based drinks, perform the automatic cleaning cycle for the milk system (if available on your model) or manually rinse the milk tube and nozzle. The milk tank can be stored in the refrigerator.
- **Exterior:** Wipe the exterior surfaces of the machine with a soft, damp cloth. Do not use abrasive cleaners.

Automatic Cleaning System

The machine features an automatic cleaning system for the milk circuit. Refer to the full manual for instructions on how to activate this cycle to maintain hygiene and prevent blockages.

Descaling

Over time, mineral deposits can build up in the machine's internal components. Descaling is essential to remove these deposits. The frequency of descaling depends on water hardness and usage. Use a suitable descaling

solution designed for coffee machines and follow the product's instructions carefully. Generally, a descaling cycle involves:

1. Emptying the water tank and filling it with descaling solution mixed with water (as per descaler instructions).
2. Running the solution through the machine's coffee and steam/milk circuits.
3. Rinsing the machine thoroughly with fresh water.

TROUBLESHOOTING

This section addresses common issues you might encounter with your coffee machine.

Problem	Possible Cause	Solution
Coffee is not hot enough.	Cups are cold; machine not fully preheated.	Pre-heat cups using the cup warming tray or by running a hot water cycle into the cup. Ensure the machine has fully preheated before brewing.
No coffee dispenses.	Water tank empty; portafilter not properly inserted; machine clogged.	Fill water tank. Ensure portafilter is securely locked. Descale the machine if necessary.
Milk not frothing well.	Milk tank/system dirty; milk not cold enough; incorrect milk type.	Clean the milk tank and frothing system thoroughly. Use fresh, cold milk. Ensure the milk tank is properly attached.
Machine is noisy.	Normal operation sound; air in the system.	Some noise during brewing and frothing is normal. If excessively noisy, ensure water tank is full and machine is primed.
Leaking from machine.	Drip tray full; water tank not seated correctly; seals worn.	Empty the drip tray. Re-seat the water tank firmly. If leaking persists, contact customer support.

TECHNICAL SPECIFICATIONS

Model: 01558 (Power Instant-ccino 20 Touch Serie Nera)

Brand: Cecotec

Power: 1350 Watts

Pressure: 20 Bars

Water Tank Capacity: 1.4 Liters

Milk Tank Capacity: 0.5 Liters (500ml)

Voltage: 230V

Dimensions (L x W x H): 36.5 x 25 x 32.5 cm

Weight: 4.7 Kilograms

Material: 18/10 Steel

Compatible Coffee Type: Ground coffee

Heating System: Thermoblock

Control Type: Touch

Noise Level: 44 dB

Functions: Espresso, Americano, Cappuccino, Latte, Hot Water

WARRANTY AND SUPPORT

Your Cecotec Power Instant-ccino 20 Touch coffee machine comes with a standard manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical assistance, spare parts, or warranty claims, please contact Cecotec customer support through their official website or the contact information provided in your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07KJHVPKQ>

More documents and user manuals: <https://manuals.plus/>