

[Manuals.plus](#) /

› [Easytry123](#) /

› Easytry123 Replacement Remote Control User Manual for Samsung Smart LED HDTVs (Models: UE55K5510AKXXU, UE55K5510AW, UE55K5515AK, UE55K5580SU, UE55K5582SU, UE55K5589SU, UE55KU6510S)

Easytry123 Easytry4330

Easytry123 Replacement Remote Control User Manual

For Samsung Smart LED HDTV Models: UE55K5510AKXXU, UE55K5510AW, UE55K5515AK, UE55K5580SU, UE55K5582SU, UE55K5589SU, UE55KU6510S

1. INTRODUCTION

This document provides comprehensive instructions for the setup, operation, and maintenance of your Easytry123 replacement remote control. This remote is designed to be compatible with specific Samsung Smart LED HDTV models as listed above. Please read this manual carefully to ensure proper use and functionality.

Important Note: This is a replacement remote control. While it is designed to replicate the primary functions of your original remote, some advanced or specific functions may not operate identically. Please verify compatibility with your TV model before use.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Gently slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Rear view of the remote control with the battery cover detached, revealing the battery compartment ready for AAA battery insertion.



Figure 2: Illustration of the battery cover being slid open on the back of the remote control.

2.2 Initial Use

This remote control utilizes infrared (IR) technology and does not require pairing. Once batteries are installed, point the remote directly at your Samsung Smart LED HDTV and begin use. Ensure there are no obstructions between the remote and the TV's IR receiver.

3. OPERATING INSTRUCTIONS

The Easytry123 replacement remote control features an ergonomic design for comfortable handling and intuitive button layout. Below is a general guide to common functions:



Figure 3: Front view of the Easytry123 replacement remote control, displaying its full button layout.

- **Power Button ():** Turns the TV on or off.
- **Source Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Number Pad (0-9):** Direct channel selection.
- **Volume Up/Down (VOL +/-):** Adjusts the TV's volume level.
- **Channel Up/Down (CH +/-):** Changes the TV channel.
- **Mute Button:** Mutes or unmutes the TV's audio.
- **Smart Hub Button:** Accesses the Samsung Smart Hub for apps and streaming services.
- **Menu Button:** Opens the TV's main settings menu.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used to navigate menus and select options.
- **Return/Exit Buttons:** Navigates back or exits current menus/applications.
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV application or content.

For specific functions not listed, refer to your Samsung TV's original user manual, as button labels and their exact actions may vary slightly.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in liquid.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

5. TROUBLESHOOTING

- **Remote is not responding:**
 - Ensure batteries are correctly installed with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's infrared receiver.
 - Ensure you are within a reasonable range and pointing the remote directly at the TV.
- **Certain functions do not work:**
 - As a replacement remote, some advanced or specific functions may not be fully supported or may operate differently than the original remote. This is a known characteristic of replacement units.
 - Verify that your TV model is listed as compatible in the introduction of this manual.

6. SPECIFICATIONS

Feature	Description
Model Number	Easytry4330
Brand	Easytry123
Compatible Devices	Samsung Smart LED HDTVs (Specific models listed in Introduction)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Special Feature	Ergonomic Design
Batteries Required	2 x AAA (not included)

7. WARRANTY AND SUPPORT

Information regarding product warranty and customer support for this Easytry123 replacement remote control is not provided within this manual. For warranty claims or technical assistance, please refer to the seller or your purchase documentation.