

Monster Rove 2

Monster Rove 2 Portable Bluetooth Speaker Instruction Manual

Model: Rove 2

				Introduction	Package			
Contents	Controls	Setup	Operating	Maintenance	Troubleshooting	Specifications	Warranty &	
				Support				

1. INTRODUCTION

The Monster Rove 2 is a portable, water-resistant Bluetooth speaker designed for versatile audio playback. It features 20 watts of power, up to 15 hours of playtime, and the ability to sync with another Rove 2 speaker for a stereo experience. This manual provides essential information for the proper use and care of your speaker.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- Monster Rove 2 Portable Bluetooth Speaker
- USB Charging Cable
- Auxiliary Audio Cable
- Carrying Case
- Instruction Manual (this document)



Image: The Monster Rove 2 speaker, its dedicated carrying case, a USB charging cable, and an auxiliary audio cable.

3. CONTROLS AND INDICATORS

Familiarize yourself with the buttons and indicators on your Monster Rove 2 speaker for optimal operation.

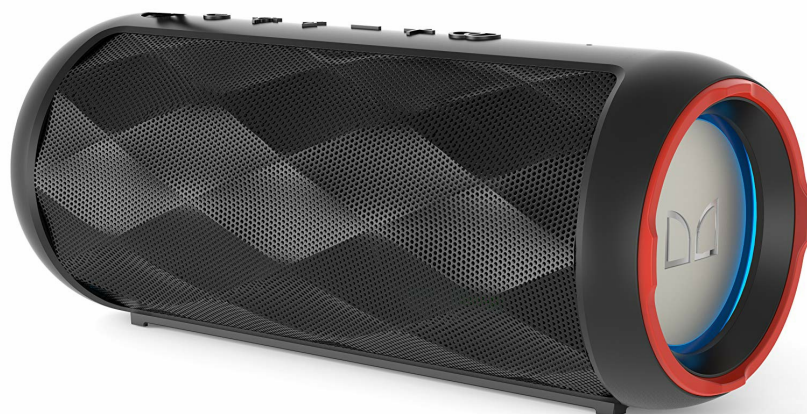


Image: Side view of the Monster Rove 2 speaker, highlighting the control panel with various buttons and ports.

- **Power Button:** Press and hold to turn the speaker on or off.
- **Bluetooth Pairing Button:** Press to enter Bluetooth pairing mode.
- **Volume Up (+):** Increase volume.
- **Volume Down (-):** Decrease volume.
- **Play/Pause Button:** Play or pause audio. Answer/end calls.
- **EZ-Play Button:** Initiate or disconnect EZ-Play pairing with another Rove 2 speaker.
- **RGB LED Light Button:** Cycle through or turn off RGB lighting modes.

- **Charging Port:** Connect the USB charging cable.
- **AUX-In Port:** Connect an auxiliary audio cable for wired playback.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charging cable to the speaker's charging port and a compatible USB power adapter (not included). The LED indicator will show charging status and turn off when fully charged. A full charge provides up to 15 hours of playtime.

4.2 Powering On/Off

Press and hold the Power button for approximately 3 seconds to turn the speaker on or off. An audible prompt will confirm the action.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and within 1 meter of your Bluetooth device.
2. The speaker will automatically enter pairing mode, indicated by a flashing LED. If not, press the Bluetooth pairing button.
3. On your device, enable Bluetooth and search for available devices.
4. Select "Monster Rove 2" from the list.
5. Once paired, the speaker will provide an audible confirmation, and the LED will stop flashing.

Note: The speaker will automatically attempt to reconnect to the last paired device when powered on.

4.4 EZ-Play Sync (Connecting Two Speakers)

To achieve a stereo sound experience, you can connect two Monster Rove 2 speakers using the EZ-Play feature.

1. Ensure both Rove 2 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), press the EZ-Play button. The speaker will enter EZ-Play pairing mode.
3. On the second speaker (this will be the secondary speaker), press the EZ-Play button.
4. The speakers will automatically connect to each other. An audible confirmation will indicate successful pairing.
5. Once connected, pair your Bluetooth device to the primary speaker as described in section 4.3. Audio will now play in stereo through both speakers.



Image: A visual representation of two Monster Rove 2 speakers wirelessly connecting to each other using the EZ-Play feature for stereo sound.

5. OPERATING THE SPEAKER

5.1 Playing Audio

- **Bluetooth:** Once paired, audio from your connected device will play through the speaker. Use the Play/Pause button to control playback. Adjust volume using the +/- buttons on the speaker or your device.
- **AUX-In:** Connect one end of the 3.5mm auxiliary audio cable to the speaker's AUX-In port and the other end to your audio source. The speaker will automatically switch to AUX mode. Control playback and volume from your audio source.

5.2 Speakerphone Function

When connected via Bluetooth, the Monster Rove 2 can be used as a speakerphone.

- **Answer/End Call:** Press the Play/Pause button once.
- **Reject Call:** Press and hold the Play/Pause button for 2 seconds.

5.3 RGB LED Lighting

The speaker features integrated RGB LED lights. Press the dedicated RGB LED Light button to cycle through various lighting modes or to turn the lights off.



Image: A detailed view of the Monster Rove 2 speaker's end cap, showcasing the vibrant RGB LED lighting in action.

6. MAINTENANCE

6.1 Water Resistance (IPX4)

The Monster Rove 2 speaker is IPX4 water-resistant, meaning it is protected against splashing water from any direction. This makes it suitable for outdoor use or near water sources. However, it is not designed to be submerged in water.

- Do not submerge the speaker in water.
- Ensure all port covers are securely closed before exposing the speaker to water.
- If the speaker gets wet, wipe it dry with a soft cloth before charging or opening any ports.

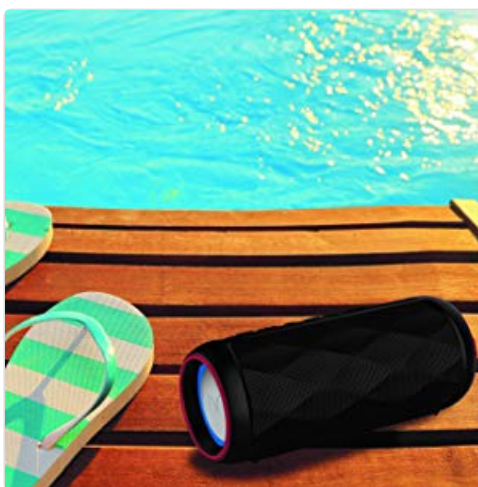


Image: A detailed view of the Monster Rove 2 speaker's surface, showing water droplets, illustrating its water-resistant design.

6.2 Cleaning

Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface.

6.3 Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery periodically to maintain its lifespan. The included carrying case provides protection during storage and transport.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker using the provided USB cable.
Cannot pair via Bluetooth.	Speaker is not in pairing mode; device Bluetooth is off; speaker is too far.	Ensure speaker is in pairing mode (flashing LED). Turn on Bluetooth on your device. Move speaker closer to device (within 10 meters). Forget "Monster Rove 2" on your device and re-pair.
No sound.	Volume is too low; incorrect input source; device not playing.	Increase volume on both speaker and connected device. Ensure correct input (Bluetooth/AUX). Check if audio is playing on your device.
EZ-Play not connecting.	Speakers are already paired to a device; not in EZ-Play mode.	Ensure both speakers are disconnected from any Bluetooth device. Press the EZ-Play button on both speakers to initiate pairing.
Poor sound quality.	Low battery; interference; device too far.	Charge the speaker. Move speaker closer to the device. Avoid obstacles between speaker and device.

8. SPECIFICATIONS

Model Name:	Rove 2
Speaker Type:	Portable Outdoor Bluetooth Speaker
Output Power:	20 Watts
Connectivity:	Bluetooth, USB (for charging), 3.5mm AUX-In
Wireless Technology:	Bluetooth
Bluetooth Range:	Up to 10 meters (33 feet)
Battery Life:	Up to 15 hours (at 50% volume)
Water Resistance:	IPX4 (Splash-proof)
Dimensions (L x W x H):	10 x 4 x 4 inches (approximately)
Weight:	1.5 pounds (approximately)
Power Source:	Battery Powered (4 AA batteries required, included)
Control Method:	Touch buttons

9. WARRANTY & SUPPORT

The Monster Rove 2 speaker comes with a limited warranty. For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official Monster website. For technical support, product registration, or service inquiries, please contact Monster customer support through their official channels.

Online Support: www.monsterproducts.com/support

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07KJPW736>

More documents and user manuals: <https://manuals.plus/>