



Manuals.plus /

- › Wonderchef /
- › Wonderchef Oven Toaster Griller (OTG) - 60 Litres Instruction Manual

Wonderchef 63152804

Wonderchef Oven Toaster Griller (OTG) - 60 Litres

Model: 63152804

INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Wonderchef 60 litres Oven Toaster Griller (OTG). Please read this manual thoroughly before first use and keep it for future reference.



Image: The Wonderchef 60 Litre OTG, showcasing its spacious interior with a chicken roasting on the rotisserie, highlighting its primary function.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place cooking utensils or baking dishes on the glass door.
- Always wear protective, insulated oven mitts when inserting or removing items from the hot oven.

PRODUCT COMPONENTS

Your Wonderchef OTG comes with the following components:

- OTG Unit
- Chromed wire rack
- Baking and grilling tray
- Rotisserie rod and forks
- Tray handle
- Crumb tray

Design Healthy Recipes with Multifunctional Settings



Image: The Wonderchef OTG displayed with its accessories including the wire rack, baking tray, and rotisserie, alongside various prepared dishes like toast, pizza, and roasted chicken, demonstrating its versatility.

SETUP

1. **Unpacking:** Carefully remove the OTG and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the OTG on a stable, heat-resistant, and flat surface. Ensure there is adequate clearance (at least 10-15 cm) on all sides for proper ventilation. Do not place it near flammable materials like curtains.
3. **First Use Preparation:** Before first use, wipe down the interior and accessories with a damp cloth. Run the oven empty at maximum temperature (250°C) for about 15 minutes to burn off any manufacturing residues. A slight odor or smoke is normal during this process. Ensure the area is well-ventilated.
4. **Power Connection:** Ensure the power supply matches the specifications (220-230V~50Hz~2000W). Plug the appliance into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Control Panel Overview



Image: A detailed view of the OTG's control panel, clearly labeling each knob: Heat Function, Temperature, Rod Selection, and Timer, for easy understanding of controls.

The Wonderchef OTG features four control knobs for precise cooking:

- **Heat Function Knob:** Selects the heating elements to be active (top, bottom, or both).
- **Temperature Knob:** Adjusts the cooking temperature from 100°C to 250°C.
- **Rod Selection Knob:** Activates the rotisserie function or convection fan.
- **Timer Knob:** Sets the cooking time up to 60 minutes with an auto-shut off and ready bell.

Cooking Functions

The OTG offers versatile cooking capabilities:

- **Baking:** Ideal for cakes, breads, pizzas, and casseroles. Use both top and bottom heating elements.
- **Grilling:** Perfect for meats, vegetables, and tandoori dishes. Use the top heating element, often with the rotisserie.
- **Toasting:** For bread, bagels, and quick browning. Use the top heating element.
- **Rotisserie:** For even roasting of whole chicken or large meat cuts. Ensure the rotisserie rod is properly secured and the rotisserie function is selected.

Bake, Toast, and Grill with Versatile Heating

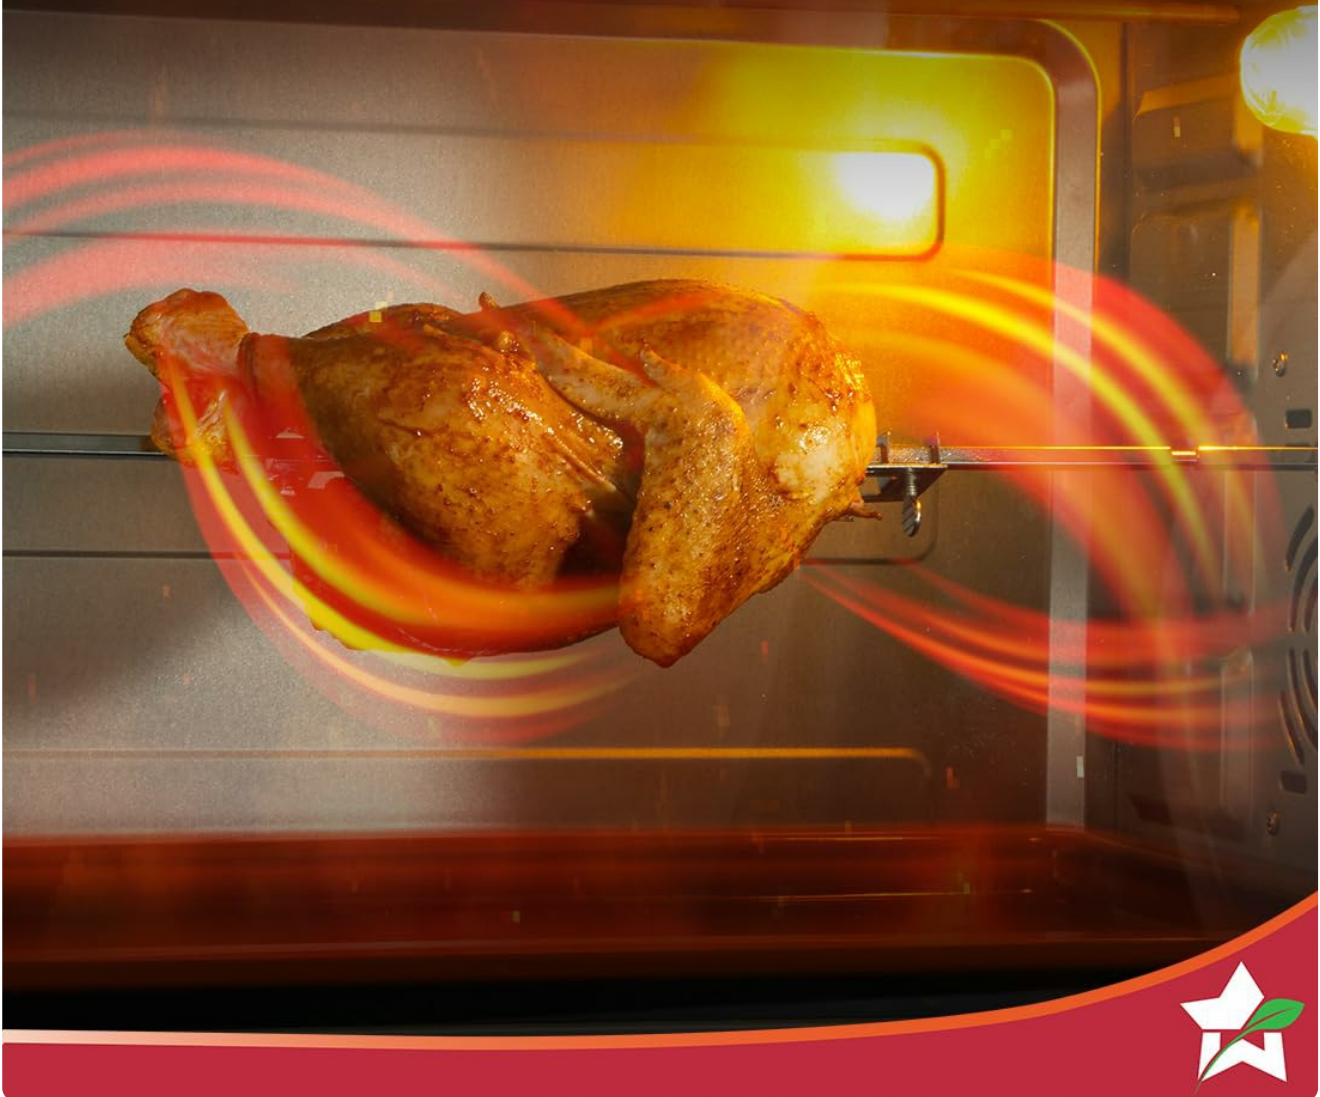


Image: The interior of the Wonderchef OTG, illustrating the powerful heat circulation from the heating elements around a chicken on the rotisserie, ensuring thorough and even cooking.

General Operation Steps

1. **Preheat:** Turn the Temperature knob to the desired temperature and the Heat Function knob to the desired heating mode. Allow the oven to preheat for 10-15 minutes.
2. **Place Food:** Carefully place the food item on the wire rack or baking tray using the tray handle. For rotisserie, ensure the meat is securely fastened and the rod is correctly positioned.
3. **Set Timer:** Turn the Timer knob to the desired cooking duration. The oven will start operating.
4. **Monitor:** The internal lamp provides clear visibility. Avoid opening the door frequently to maintain consistent temperature.
5. **Completion:** The oven will automatically shut off and a bell will ring when the timer reaches zero. Carefully remove the cooked food using oven mitts and the tray handle.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your OTG.

- **Always unplug the appliance** and allow it to cool completely before cleaning.
- **Crumb Tray:** The removable crumb tray should be cleaned regularly to prevent grease buildup and potential fire hazards. Simply slide it out and wash with soap and water. **DO NOT USE STEEL WOOL** as it can scratch the surface.
- **Interior:** Wipe the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner can be used. Avoid harsh chemicals or abrasive pads.
- **Exterior:** Clean the exterior with a soft, damp cloth. Do not use abrasive cleaners or polishes.
- **Accessories:** Wash the wire rack, baking tray, and rotisserie accessories with warm soapy water. They are generally dishwasher safe, but hand washing is recommended for longevity.

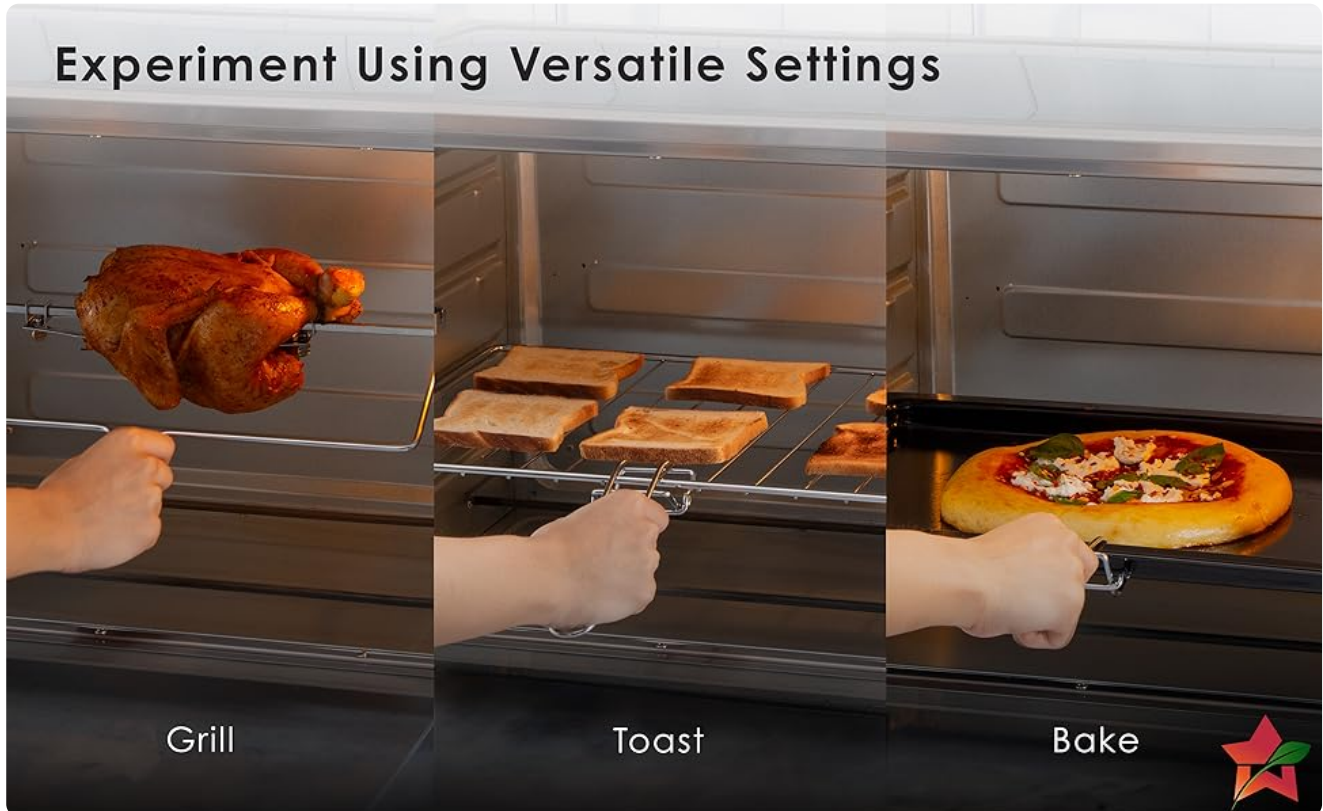


Image: A hand demonstrating the easy removal and cleaning of the crumb tray from the Wonderchef OTG, emphasizing the importance of regular maintenance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; timer not set.	Ensure plug is securely in outlet; check circuit breaker; turn timer knob to desired time.
Food not cooking evenly.	Incorrect temperature/function setting; overcrowding; uneven food placement.	Verify settings; avoid overcrowding; rotate food or tray during cooking.
Excessive smoke during operation.	Food residue/grease on heating elements or crumb tray.	Unplug and allow to cool. Clean crumb tray and interior thoroughly. Ensure no food touches heating elements.
Rotisserie not rotating.	Rotisserie rod not properly engaged; food too heavy/unbalanced; rotisserie function not selected.	Ensure rod is correctly seated; balance food on rod; select the rotisserie function on the knob.
Timer bell not ringing.	Timer mechanism issue.	Contact customer support if the timer function is otherwise working but the bell is not.

SPECIFICATIONS

Feature	Detail
Brand	Wonderchef
Model Name	60L Silver
Model Number	63152804
Capacity	60 Litres
Colour	Silver
Material	Stainless Steel (Finish Type), Tempered Glass (Door Material)
Product Dimensions	43D x 63W x 44H Centimeters
Item Weight	25 kg
Power Consumption	2000W
Voltage	220-230V~50Hz
Temperature Range	Up to 250°C
Control Type	Rotating Knob
Special Features	Temperature Control, Timer, Rotisserie, Auto-Shut Off, Heat-Resistant Tempered Glass, Convection Mode
Included Components	Chromed wire rack, Baking and Grilling Tray, Rotisserie, Tray handle, Crumb Tray
Country of Origin	India

WARRANTY AND SUPPORT

Your Wonderchef OTG comes with a **2-year warranty**. For any support or service requirements, please utilize the following channels:

- **Pan-India Doorstep Service:** Convenient service available across India.
- **Quick Resolutions:** Expect resolutions within 48 hours.
- **On-demand Virtual Product Demo:** Available for product guidance.
- **WhatsApp Support:** For quick after-sales service, send "Hi" to +91 70705 95959.
- **Online Registration:** Register your purchase for priority service and warranty extension (if applicable) at Wonderchef Service Portal.

Effortless Cleaning

Simply wash Crumb tray using soap and water*



*DO NOT USE STEEL WOOL



**Service at
your Doorstep!**

Best-in-class **2-year service-at-your-doorstep** for **Oven Toaster Griller** ensures complete peace of mind.



Image: The Wonderchef OTG in a kitchen setting, surrounded by various healthy food preparations, emphasizing its role as a versatile appliance for healthy cooking.