

[Manuals.plus](#) /

> [Holiday Time](#) /

> Holiday Time Electric Musical Christmas Train (22 Pieces) - Instruction Manual

Holiday Time B07KK6JTLW

Holiday Time Electric Musical Christmas Train (22 Pieces) - Instruction Manual

Model: B07KK6JTLW

1. INTRODUCTION

Thank you for purchasing the Holiday Time Electric Musical Christmas Train. This manual provides essential information for the safe assembly, operation, and maintenance of your new train set. Please read these instructions carefully before use and retain them for future reference.

2. IMPORTANT SAFETY INFORMATION

- **Recommended Age:** This product is suitable for children aged 4 years and older.
- **Choking Hazard:** Contains small parts. Not suitable for children under 3 years due to potential choking hazards. Adult supervision is required.
- **Battery Safety:**
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are only to be charged under adult supervision.
 - Rechargeable batteries are to be removed from the toy before being charged.
 - Exhausted batteries are to be removed from the toy.
 - The supply terminals are not to be short-circuited.
 - Batteries must be inserted with the correct polarity.
- **Assembly:** Adult assembly is required. Ensure all parts are securely connected before operation.

3. PACKAGE CONTENTS

Please verify that all 22 pieces are included in your package:

- 1 x Locomotive
- 1 x Coal Car

- 2 x Passenger Cars
- 12 x Curved Track Sections
- 6 x Straight Track Sections



Figure 1: Back of the product box illustrating the included components and track configuration.

4. SETUP GUIDE

4.1 Battery Installation

1. Locate the battery compartment on the underside of the locomotive.
2. Using a screwdriver (not included), open the battery compartment cover.
3. Insert 2 x AA Alkaline batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the cover and secure it with the screw.

4.2 Track Assembly

The track sections are designed for easy interlocking. You can create a circular track layout with a diameter of approximately 75.2 cm.

1. Lay out the track sections on a flat, stable surface.
2. Connect the curved track sections together by aligning the connectors and gently pushing them until they click into place.
3. You can incorporate straight track sections to extend the layout or create variations.
4. Ensure all track connections are secure to prevent the train from derailing.

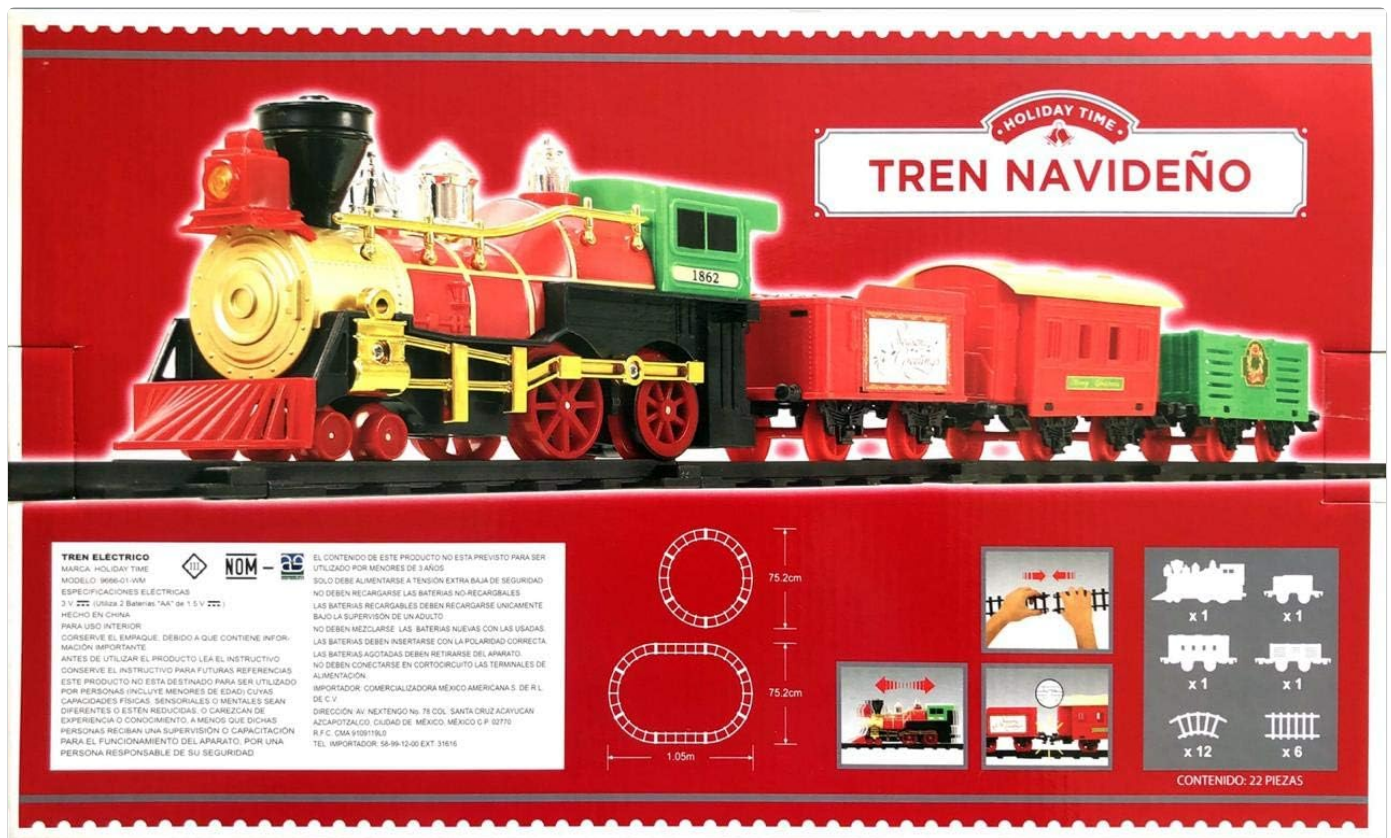


Figure 2: Track assembly diagram, illustrating a circular layout with a 75.2 cm diameter.

4.3 Connecting the Train Cars

The train features self-coupling wagons for easy attachment.

1. Align the coupling hooks of each car.
2. Gently push the cars together until the hooks engage.
3. Ensure all cars are securely connected to the locomotive and to each other.



Figure 3: Product image showing the locomotive and connected wagons on the track.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Locate the ON/OFF switch on the locomotive. Slide the switch to the 'ON' position to start the train. Slide it to 'OFF' to stop the train.

5.2 Musical Feature

When the train is powered on, it will play its favorite Christmas melodies automatically.

5.3 Movement

The train is designed to move forward and backward along the assembled track. Ensure the track is clear of obstructions for smooth operation.

6. MAINTENANCE

- **Cleaning:** Wipe the train and tracks with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the train set in its original packaging or a clean, dry place away from direct sunlight and extreme temperatures.
- **Battery Removal:** Always remove batteries from the locomotive if the train will not be used for an extended period to prevent leakage.

7. TROUBLESHOOTING

- **Train not moving:**
 - Check if the ON/OFF switch is in the 'ON' position.
 - Ensure batteries are correctly installed with proper polarity.
 - Replace old or depleted batteries with new AA Alkaline batteries.
 - Verify that all track sections are securely connected and form a continuous circuit.
- **Sound not working or distorted:**
 - Check battery levels and replace if necessary.
 - Ensure there are no obstructions to the speaker on the locomotive.
- **Train cars decoupling:**
 - Ensure the coupling hooks are fully engaged between cars.
 - Check if the train is operating on a flat and stable surface.
 - Inspect coupling mechanisms for any damage.

8. PRODUCT SPECIFICATIONS

Brand	Holiday Time
Model Number	B07KK6JTLW

Number of Pieces	22
Assembly Required	Yes
Track Gauge / Diameter	65 cm (track gauge) / 75.2 cm (circular layout diameter)
Batteries Included	No
Battery Type	AA Alkaline (2 required)
Remote Control Included	No
Color	Red and Green
Product Dimensions	35 x 25 x 5 cm
Product Weight	710 g

9. WARRANTY AND SUPPORT

Specific warranty information is not provided in the product details. For any questions, technical support, or warranty claims, please refer to the contact information provided on the product packaging or contact the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07KK6JTLW>

More documents and user manuals: **<https://manuals.plus/>**