#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- HUAWEI /
- > Huawei UQWiMAX Speed Wi-Fi NEXT W05 HWD36SKU Mobile Router User Manual

#### **HUAWEI W05 HWD36SKU**

# Huawei UQWiMAX Speed Wi-Fi NEXT W05 HWD36SKU Mobile Router User Manual

Model: W05 HWD36SKU

#### 1. Introduction

This user manual provides detailed instructions for the Huawei UQWiMAX Speed Wi-Fi NEXT W05 HWD36SKU mobile router. It covers essential information regarding product features, initial setup, operational procedures, maintenance guidelines, and troubleshooting common issues. Please read this manual thoroughly to ensure proper use and optimal performance of your device.

#### 2. PRODUCT OVERVIEW

The Huawei Speed Wi-Fi NEXT W05 HWD36SKU is a portable Wi-Fi router designed to provide high-speed internet access on the go. It supports WiMAX2+ and au4GLTE services, offering fast download and upload speeds. The device features a compact design with an LCD screen for easy status monitoring.



**Figure 2.1:** Front view of the Huawei Speed Wi-Fi NEXT W05 HWD36SKU mobile router, showcasing its black body with lime green sides and a central display screen.



Figure 2.2: Close-up of the side of the Huawei W05, highlighting the 'Reset' button and a USB port.



Figure 2.3: Rear view of the Huawei W05 mobile router, showing the product information label including IMEI and regulatory marks.

# 3. SETUP

# 3.1. Initial Charging

- 1. Connect the device to a power source using the provided USB cable and a compatible power adapter.
- 2. Allow the device to charge fully before first use. The battery indicator on the LCD will show charging status.

#### 3.2. SIM Card Insertion

- 1. Ensure the device is powered off.
- 2. Locate the SIM card slot, typically on the side or under the battery cover.
- 3. Insert the WiMAX2+/au4GLTE compatible SIM card into the slot with the gold contacts facing down and the notched corner aligned correctly.
- 4. Gently push until the SIM card clicks into place.

# 3.3. Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side) until the LCD screen illuminates.
- **To Power Off:** Press and hold the Power button until the power-off options appear on the screen, then select 'Power Off' or continue holding until the device shuts down.

# 4. OPERATING INSTRUCTIONS

# 4.1. Connecting Devices via Wi-Fi

- 1. Power on your W05 mobile router.
- 2. On your Wi-Fi enabled device (smartphone, laptop, tablet), open the Wi-Fi settings.
- 3. Search for available networks and select the SSID (network name) displayed on your W05's LCD screen.
- 4. Enter the Wi-Fi password (security key) shown on the W05's LCD screen when prompted.
- 5. Once connected, your device will have internet access through the W05 router.

# 4.2. Understanding the LCD Display

The 2.4-inch TFT LCD screen provides real-time information about your device's status, including:

- · Signal strength
- · Battery level
- · Connected devices count
- Data usage
- · Network name (SSID) and password
- Current operating mode (e.g., High Performance, Battery Saving)

# 4.3. Changing Operating Modes

Your W05 router may offer different operating modes to optimize performance or battery life. Refer to the onscreen menu or the device's web interface for options to switch between modes such as 'High Performance' for maximum speed or 'Battery Saving' for extended usage.

#### 5. MAINTENANCE

#### 5.1. Battery Care

- · Avoid exposing the device to extreme temperatures.
- Do not leave the device fully discharged for extended periods.
- For long-term storage, charge the battery to approximately 50% and store in a cool, dry place.

#### 5.2. Cleaning

Use a soft, dry, lint-free cloth to clean the device. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the device's surface or internal components.

# 5.3. Firmware Updates

Periodically check for firmware updates to ensure your device has the latest features, security patches, and performance improvements. Updates can usually be performed via the device's web interface or a dedicated mobile application.

#### 5.4. Resetting the Device

If your device experiences persistent issues, a factory reset may resolve them. There are two types of resets:

- Soft Reset: Simply power off and then power on the device.
- Factory Reset: This will restore the device to its original factory settings, erasing all personal configurations. Locate the 'Reset' button (refer to Figure 2.2) and use a thin object (like a paperclip) to press and hold it for approximately 5-10 seconds while the device is powered on. Follow any on-screen prompts.

#### 6. TROUBLESHOOTING

This section addresses common issues you might encounter with your Huawei W05 mobile router.

### 6.1. No Internet Connection

- Check Signal: Ensure the device is in an area with good network coverage.
- SIM Card: Verify the SIM card is correctly inserted and active.
- Data Plan: Confirm your data plan is active and has available data.
- **Reboot:** Power off the device, wait a few seconds, then power it back on.

# 6.2. Slow Connection Speed

- Signal Strength: Move to an area with better signal reception.
- Connected Devices: Disconnect unnecessary devices to reduce network load.
- Operating Mode: Ensure the device is not in a 'Battery Saving' mode that might limit speed.
- Network Congestion: Performance may vary based on network traffic in your area.

# 6.3. Device Not Powering On

- Battery Charge: Connect the device to a charger and ensure it has sufficient battery.
- Power Button: Ensure the Power button is pressed and held correctly.

# 6.4. Wi-Fi Connection Issues

- Password: Double-check the Wi-Fi password.
- SSID Broadcast: Ensure the router's SSID broadcast is enabled.
- **Device Compatibility:** Confirm your connecting device supports the Wi-Fi standards (2.4GHz or 5GHz) used by the W05.

#### 7. Specifications

Feature	Description
Supported Services	WiMAX2+, au4GLTE
Communication Speed (Downlink)	Max 708 Mbps
Communication Speed (Uplink)	Max 75 Mbps
Form Factor	WiFi Router Type
Wireless LAN Standards	IEEE802.11ac/n/a (5GHz band), 11n/g/b (2.4GHz band)
Display	2.4-inch TFT LCD
Battery Capacity	2,750 mAh
Dimensions (L x W x H)	14.6 x 6.3 x 2.1 cm

Feature	Description
Weight	130 g
Connectivity	Wi-Fi
Other Features	Internet Security

# 8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official HUAWEI support website. If you encounter issues that cannot be resolved using this manual, please contact HUAWEI customer support or your service provider for assistance.

HUAWEI Official Website: www.huawei.com

© 2023 HUAWEI. All rights reserved.

#### Related Documents - W05 HWD36SKU



#### Speed Wi-Fi HOME L02 Quick Start Guide - HUAWEI

This guide provides instructions for setting up and operating the HUAWEI Speed Wi-Fi HOME L02 wireless router, covering device setup, connection methods, features, and troubleshooting. Learn to connect devices via Wi-Fi or Ethernet for internet access.



#### HUAWEI WiFi AX2 FAQ: Setup and Management Guide

Frequently asked questions about setting up and managing the HUAWEI WiFi AX2 router, including broadband account information, connection methods, Wi-Fi vs. router passwords, and using the HUAWEI AI Life app.



#### Manuale Utente HUAWEI WiFi AX2: Configurazione e Guida

Questa guida completa per il HUAWEI WiFi AX2 offre istruzioni dettagliate su configurazione, impostazioni di rete, risoluzione dei problemi e funzionalità avanzate per ottimizzare la tua esperienza Wi-Fi.



#### Huawei WA8021V5 AS Router WiFi Quick Setup Guide

A quick setup guide for the Huawei WA8021V5 AS Router, detailing how to configure Wi-Fi settings including SSID, password, and power mode.



#### **HUAWEI WiFi AX3 Quick Start Guide**

Get started quickly with your HUAWEI WiFi AX3 router. This guide provides essential setup instructions, port identification, and basic configuration steps for a seamless internet experience.



#### Installation Manual for Optik Wi-Fi Router HUAWEI HG8145V5

This manual provides step-by-step instructions for installing and configuring the HUAWEI HG8145V5 Optik Wi-Fi Router, including connecting to the optical network, setting up Magio Box for TV services, and configuring Wi-Fi connections.