

[Manuals.plus](#) /

› [FAO Schwarz](#) /

› FAO Schwarz 1003434 Instant Camera Instruction Manual

FAO Schwarz 1003434

FAO Schwarz Instant Camera

Model: 1003434

PRODUCT OVERVIEW

The FAO Schwarz Instant Camera (Model 1003434) is designed for capturing and instantly printing keepsake-sized mini photos. This camera features a modern yet nostalgic design, making it simple to operate with its point-and-shoot functionality. It includes an automatic flash for various lighting conditions and is compatible with high-speed ISO 800 instant mini film.

F·A·O
SCHWARZ

— SINCE 1862 —



Image: FAO Schwarz 1003434 Instant Camera in its packaging. The camera is white with red accents, featuring a prominent lens and a gold FAO Schwarz logo. The packaging has a festive, geometric design in red, black, and gold.

PACKAGE CONTENTS

Verify that all items are present in the package:

- FAO Schwarz Instant Camera (Model 1003434)
- Camera Strap
- Instruction Manual
- Two AA Batteries

Note: High-speed ISO 800 instant mini film is sold separately and is required for printing photos.

SETUP

1. Installing Batteries

1. Locate the battery compartment on the camera.
2. Open the battery compartment cover.
3. Insert the two AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.

4. Close the battery compartment cover securely.

2. Loading Film

1. Open the film compartment door on the back of the camera.
2. Align the yellow mark on the film pack with the yellow mark inside the camera's film compartment.
3. Gently push the film pack into the compartment until it clicks into place.
4. Close the film compartment door. The camera will automatically eject the film cover sheet. Do not pull this sheet out manually.

3. Attaching the Camera Strap

Thread the camera strap through the designated loops on the camera body and secure it according to the strap's instructions to prevent accidental drops.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the power button to turn the camera on. The camera features an auto power-off timer to conserve battery life if left idle.

2. Taking a Photo

1. Ensure the built-in lens cover is open.
2. Look through the viewfinder to frame your shot.
3. Press the shutter button firmly to take a picture.
4. The photo will automatically eject from the film slot. Allow the photo to develop for a few minutes in a warm, dark place for best results.

3. Flash and Lighting Modes

The camera is equipped with an automatic flash that activates in low-light conditions to ensure proper exposure. No manual adjustment for flash or lighting modes is required.

MAINTENANCE

- **Cleaning:** Wipe the camera body with a clean, dry, soft cloth. Do not use liquid cleaners, abrasive materials, or solvents, as these can damage the camera's finish.
- **Lens Care:** Keep the lens clean and free from dust, fingerprints, and smudges. Use a soft, lint-free cloth specifically designed for camera lenses if necessary. Avoid touching the lens directly.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight, high humidity, and extreme temperatures when not in use.
- **Battery Replacement:** Replace batteries when the camera's indicator suggests low power or when it fails to operate correctly. Always use fresh AA batteries.

TROUBLESHOOTING

Camera Does Not Turn On

- Check if the batteries are inserted correctly with the proper polarity (+/-).
- Replace with fresh AA batteries.

Photos Are Too Dark/Light

- Ensure adequate lighting for your subject. The camera has an automatic flash for low-light conditions; ensure it is not obstructed.
- Verify that the film is not expired and is stored correctly according to the film manufacturer's instructions.

Film Does Not Eject

- Check if the film pack is correctly loaded and seated firmly in the compartment.
- Ensure there is film remaining in the pack (check the counter).
- Replace batteries if they are low, as insufficient power can prevent film ejection.

SPECIFICATIONS

Feature	Detail
Model Name	1003434
Lens	F = 60mm
Focus Range	0.6m - ∞
Shutter Speed	1/60 sec
Compatible Film	High-speed ISO 800 instant mini film (sold separately)
Power Source	2 x AA Batteries
Dimensions (L x W x H)	14 x 5.1 x 11.4 cm (approximate)
Auto Power-Off	Yes

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official FAO Schwarz website. Keep your purchase receipt as proof of purchase for any warranty claims.