

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Alpina](#) /
- › [Alpina Adjustable Stainless Steel Pan Coaster User Manual](#)

Alpina 8711252066554

Alpina Adjustable Stainless Steel Pan Coaster User Manual

Model: 8711252066554

INTRODUCTION

This manual provides instructions for the proper use and care of your Alpina Adjustable Stainless Steel Pan Coaster. Designed to protect your surfaces from heat, this coaster is a versatile addition to any kitchen.



Image: Alpina Adjustable Pan Coaster in its packaging.

The Alpina Pan Coaster is crafted from sturdy stainless steel, offering durability and heat resistance. Its flexible and foldable design allows it to adapt to various pan sizes and oven dishes, providing both functionality and a unique aesthetic element to your dining table. When not in use, its flexible design enables easy storage.

SETUP

The Alpina Adjustable Pan Coaster requires no assembly. Simply remove it from its packaging. Its unique design allows you to adjust its shape to fit different cookware sizes.

1. **Unpack:** Carefully remove the pan coaster from its packaging.
2. **Adjust Shape:** Gently manipulate the stainless steel arms to expand or contract the coaster, forming the desired shape to accommodate your pan, pot, or oven dish. The coaster is designed to be flexible.

Pan coaster Dessous-de-plat pour casserole
Pfannenuntersetzer Pannenderzetter

ROSELSTAHL®
Rost
frei
STAINLESS
STEEL

Adjustable shape
Größe einstellbar

Forme ajustable
Aanpasbaar in maat



Image: The pan coaster adjusted to different shapes.

Ensure the coaster is stable on your surface before placing hot items on it.

OPERATING INSTRUCTIONS

The Alpina Pan Coaster is designed to protect your tables and countertops from heat damage caused by hot cookware.

- Position:** Place the adjusted pan coaster on a stable, flat surface where you intend to set down hot cookware.
- Place Cookware:** Carefully place your hot pan, pot, or oven dish onto the coaster. Ensure the cookware is centered and balanced on the coaster to prevent tipping.
- Surface Protection:** The coaster creates a barrier between the hot item and your table or countertop, preventing heat marks and damage.



Image: Pan coaster in use with a pot.

Important Safety Note:

- While the coaster is heat-resistant, avoid exposing the rubber feet directly to extremely high temperatures (e.g., directly from a very hot oven baking sheet exceeding 200°C / 392°F) for extended periods, as this may cause damage to the rubber components.
- Always ensure the coaster is fully supporting the cookware to prevent accidents.

MAINTENANCE AND CARE

To ensure the longevity and hygiene of your Alpina Pan Coaster, follow these care instructions:

- **Cleaning:** The pan coaster is designed for **Hand Wash Only**. Use warm soapy water and a soft cloth or sponge to clean.
- **Drying:** After washing, thoroughly dry the coaster with a clean towel to prevent water spots and maintain the stainless steel finish.
- **Storage:** Thanks to its flexible design, the coaster can be folded for compact storage in a kitchen cabinet or drawer when not in use.

TROUBLESHOOTING

This section addresses common concerns you might encounter with your pan coaster.

Problem	Possible Cause	Solution
Rubber feet show signs of melting or damage.	Exposure to excessively high temperatures, particularly from items directly out of a very hot oven (e.g., baking sheets).	Avoid placing items directly from an oven at temperatures exceeding 200°C / 392°F onto the coaster. Allow extremely hot items to cool slightly before placing them on the coaster, or use an alternative heat-resistant surface for such items.
Coaster is unstable or tips easily.	Improper adjustment of the coaster's shape or uneven placement of cookware.	Ensure the coaster is fully expanded and adjusted to securely fit the base of your cookware. Place cookware centrally and ensure the coaster is on a flat, stable surface.
Stainless steel appears dull or has water spots.	Improper cleaning or drying.	Always hand wash with warm soapy water and dry thoroughly immediately after cleaning with a soft, clean towel.

SPECIFICATIONS

Feature	Detail
Brand	Alpina
Model Number	8711252066554
Material	Stainless Steel

Feature	Detail
Color	Black/Silver
Dimensions (Expanded)	27.5 x 20.5 x 1.7 cm (approx. 10.8 x 8.1 x 0.67 inches)
Dimensions (Folded/Compact)	19 x 8 x 2.3 cm (approx. 7.48 x 3.15 x 0.91 inches)
Item Weight	215 grams (approx. 7.58 ounces)
Care Instructions	Hand Wash Only
Included Components	1x Pan Coaster

WARRANTY AND SUPPORT

Specific warranty information for the Alpina Adjustable Stainless Steel Pan Coaster is not provided in the product details. For warranty claims, technical support, or further inquiries, please contact Alpina customer service directly or refer to the retailer's return policy where the product was purchased.

You may find contact information on the product packaging or the official Alpina website.