

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [SoBuy](#) /
- › [SoBuy Kitchen Cart FKW67-WN Instruction Manual](#)

SoBuy FKW67-WN

SoBuy Kitchen Cart FKW67-WN Instruction Manual

Model: FKW67-WN | Brand: SoBuy

1. PRODUCT OVERVIEW

The SoBuy Kitchen Cart FKW67-WN is a versatile and functional white kitchen trolley designed to provide additional storage and workspace. It features a durable Hevea wood top and two slatted shelves, supported by a sturdy MDF frame. Equipped with four wheels, two of which have brakes, it offers both mobility and stability.



Figure 1: SoBuy Kitchen Cart FKW67-WN in use.

2. SAFETY INFORMATION

- Ensure all components are securely fastened before use.
- Do not exceed the maximum load capacity of 50 kg.
- Keep small parts away from children during assembly to prevent choking hazards.
- Use the wheel brakes when the cart needs to remain stationary.
- Avoid placing hot items directly on the wood surface without protection.

3. PACKAGE CONTENTS

Verify that all parts and hardware are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

Component	Description	Quantity
Hevea Wood Top	Main work surface	1

Component	Description	Quantity
MDF Side Frames	Vertical support structures	2
Slatted Shelves	Storage shelves	2
Towel Bar	Side handle/towel holder	1
Wheels with Brakes	Lockable wheels	2
Standard Wheels	Non-locking wheels	2
Assembly Hardware	Screws, bolts, and tools	1 set



Figure 2: Example of assembly hardware.

4. SETUP AND ASSEMBLY

Assembly of the SoBuy Kitchen Cart FKW67-WN is designed to be straightforward. Follow the included graphical instructions carefully. It is recommended to assemble the cart on a soft, clean surface to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Identify each component using the provided parts list.
2. **Attach Wheels:** Secure the four wheels to the bottom of the cart's base frame. Ensure the two wheels with brakes are positioned on the same side for easier access.
3. **Assemble Side Frames:** Connect the side frames to the base using the appropriate screws.
4. **Insert Shelves:** Slide the two slatted shelves into the designated slots on the side frames. Ensure they are level and securely seated.
5. **Attach Top Panel:** Place the Hevea wood top onto the assembled frame and secure it with screws from underneath.
6. **Install Towel Bar:** Attach the towel bar to the side of the cart using the provided hardware.
7. **Final Check:** Verify that all screws are tightened and the cart is stable before use.



Figure 3: Product dimensions for reference during assembly.



Figure 4: Detail of a wheel with brake mechanism.

5. OPERATING INSTRUCTIONS

- **Moving the Cart:** To move the cart, ensure the wheel brakes are disengaged. Push or pull the cart using the towel bar or any sturdy part of the frame.
- **Securing the Cart:** To keep the cart stationary, press down on the levers of the two braked wheels until they lock. To release, lift the levers.
- **Loading Items:** Distribute weight evenly across the shelves and the top surface. Avoid placing excessively heavy items on one side.
- **Using the Towel Bar:** The side bar can be used to hang kitchen towels or other lightweight items.



Figure 5: Towel bar detail.

6. MAINTENANCE

- **Cleaning the Wood Top:** Wipe the Hevea wood top with a damp cloth and mild soap. Dry immediately to prevent water damage. Periodically, a food-safe wood oil can be applied to maintain its appearance and protect the surface.
- **Cleaning the MDF Frame:** Clean the white MDF frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Wheel Maintenance:** Regularly check the wheels for debris and clean as needed. Ensure they rotate freely and the brakes engage properly.
- **Hardware Check:** Periodically inspect all screws and connections to ensure they remain tight. Retighten if necessary.



Figure 6: Detail of the Hevea wood top.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cart is wobbly or unstable	Loose screws or uneven assembly	Check and tighten all screws. Ensure the cart is on a level surface.
Wheels do not roll smoothly	Debris in wheels or tight installation	Clean wheels of any hair or debris. Ensure wheels are installed correctly and not overtightened.
Wheel brakes do not engage/disengage	Mechanism obstruction or damage	Check for any obstructions around the brake mechanism. If damaged, contact customer support for replacement parts.
Scratches on wood top	Sharp objects or abrasive cleaning	Use cutting boards or protective mats. Minor scratches can sometimes be buffed out with fine sandpaper and re-oiled.

8. SPECIFICATIONS

- **Model:** FKW67-WN
- **Brand:** SoBuy
- **Color:** White
- **Materials:** Hevea Wood (top), MDF (structure)
- **Dimensions (L x D x H):** 54 cm x 39 cm x 85 cm (including wheels)
- **Product Weight:** 11 kg
- **Load Capacity:** Up to 50 kg
- **Features:** 2 shelves, 4 wheels (2 with brakes), 1 towel bar

9. SUPPORT

For any questions, suggestions, or assistance with your SoBuy Kitchen Cart FKW67-WN, please do not hesitate to contact SoBuy customer support. We are committed to addressing your needs and inquiries.

Contact information can typically be found on the SoBuy official website or through your purchase platform.
