

[Manuals.plus](#) /

› [Easytry123](#) /

› Easytry123 Replacement Remote Control User Manual for Magnavox NH402UD and Compatible HDTV Models

Easytry123 Easytry4436

Easytry123 Replacement Remote Control User Manual

For Magnavox NH402UD, 39ME313, 39ME313/F7, 39ME313F7, 39ME313V, 39ME313V/F7, 39ME313VF7, 39ME313V/F7A LCD HDTV Models

1. INTRODUCTION

This manual provides instructions for the Easytry123 replacement remote control, designed for use with specific Magnavox LCD HDTV models. This remote is a direct replacement and does not require programming.

Compatible Magnavox TV Models: NH402UD, 39ME313, 39ME313/F7, 39ME313F7, 39ME313V, 39ME313V/F7, 39ME313VF7, and 39ME313V/F7A.

2. SETUP: BATTERY INSTALLATION

The remote control requires two (2) AAA batteries (not included).

1. **Step 1:** Locate the battery compartment on the back of the remote control.
2. **Step 2:** Press down on the latch and slide the battery cover off.
3. **Step 3:** Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. **Step 4:** Slide the battery cover back into place until it clicks securely.



Image: Back of the remote control with the battery cover removed, illustrating where to insert the AAA batteries.



Image: Back of the remote control with the battery cover closed after installation.

3. OPERATING INSTRUCTIONS

This section outlines the primary functions of the remote control buttons.



Image: Front view of the remote control, displaying all functional buttons.

Basic Functions

- **POWER (Red Button):** Turns the television on or off.
- **SOURCE:** Selects the input source (e.g., HDMI 1, AV, Component).
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes television channels.
- **MUTE:** Silences or restores the television audio.
- **Number Pad (0-9):** Directly enters channel numbers.
- **PREV.CH:** Returns to the previously viewed channel.

Navigation and Menu Functions

- **MODE:** Accesses different operational modes.
- **INFO:** Displays on-screen information about the current program or input.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **Directional Arrows (Up, Down, Left, Right):** Navigates through on-screen menus.
- **OK:** Confirms selections in menus.
- **BACK:** Returns to the previous menu or screen.
- **HOME (House Icon):** Accesses the TV's main smart TV or home menu.

Media Playback Controls

- **Play/Pause, Stop, Fast Forward, Rewind, Skip Forward, Skip Back:** Controls media playback when applicable (e.g., USB media, streaming apps).

Specialized Buttons

- **VUDU:** Direct access button for the Vudu streaming service.
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons often correspond to specific functions within menus or applications, as indicated on the TV screen.

4. TROUBLESHOOTING

Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new AAA batteries if necessary.
- **Line of Sight:** Ensure there is a clear line of sight between the remote control and the TV's infrared sensor. Remove any obstructions.
- **TV Compatibility:** Verify that your television model is listed as compatible with this remote control. This remote is specifically designed for Magnavox NH402UD, 39ME313, 39ME313/F7, 39ME313F7, 39ME313V, 39ME313V/F7, 39ME313VF7, and 39ME313V/F7A models. It is not a universal remote.
- **Functionality Differences:** Note that as a replacement remote, some advanced or specific functions of your original remote may not be fully supported. Basic TV operations should function as expected.

5. SPECIFICATIONS

Feature	Detail
Model Number	Easytry4436
Brand	Easytry123
Compatible Devices	Magnavox LCD HDTVs (NH402UD, 39ME313, 39ME313/F7, 39ME313F7, 39ME313V, 39ME313V/F7, 39ME313VF7, 39ME313V/F7A)
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Special Feature	Replacement Remote, No Programming Required

6. IMPORTANT NOTES

- This is a dedicated replacement remote control, not a universal remote.
- No setup or programming codes are required for operation with compatible models.
- While designed for specific models, some advanced functions present on the original remote may not be available on this replacement unit.
- Batteries are not included and must be purchased separately.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question