

[Manuals.plus](#) /

› [XTREME](#) /

› Pure Silk CPT18001PRW Portable Electric Beauty Trimmer User Manual

XTREME CPT18001PRW

Pure Silk CPT18001PRW Portable Electric Beauty Trimmer User Manual

Model: CPT18001PRW | Brand: XTREME

INTRODUCTION

The Pure Silk Beauty Trimmer is a compact, battery-powered device designed for precise hair removal and skin exfoliation. It is suitable for trimming and shaping eyebrows, removing hair from the upper lip and chin, and general facial hair grooming. Its portable design makes it convenient for travel and everyday use.

Key Features:

- **Shapes:** Precisely shapes and styles eyebrows.
- **Exfoliates:** Gently exfoliates skin for smoother makeup application.
- **Portable:** Easily and comfortably removes hair on upper lip, chin, and eyebrows anytime, anywhere.
- **Battery Powered:** Operates on 1 AAA battery (not included).

SAFETY INFORMATION

Please read all safety instructions before using the Pure Silk Beauty Trimmer to ensure safe operation and prevent injury or damage.

- Use with caution to avoid skin irritation.
- Keep the device away from eyes and water sources.
- Clean the trimmer as needed according to the maintenance instructions.
- Do not attempt to disassemble or repair the device yourself. Contact customer support if service is required.
- Store in a dry place, out of reach of children.

PACKAGE CONTENTS

Upon opening your Pure Silk Beauty Trimmer package, you should find the following items:

- 1 x Pure Silk Beauty Trimmer
- 1 x Protective Cap

- 1 x Eyebrow Guide Comb (for length control)
- 1 x Cleaning Brush
- *Note: 1 AAA battery is required for operation and is not included.*

SETUP

Before first use, install the AAA battery (not included) into the trimmer.

1. Gently twist the bottom part of the trimmer counter-clockwise to open the battery compartment.
2. Insert one fresh AAA battery, ensuring the positive (+) and negative (-) terminals are correctly aligned as indicated inside the compartment.
3. Twist the bottom part clockwise to securely close the battery compartment.



Image: Pure Silk Beauty Trimmer with the bottom cap removed, illustrating the battery insertion point.

OPERATING INSTRUCTIONS

The Pure Silk Beauty Trimmer is designed for easy and effective use on various facial areas.

1. Remove the protective cap from the trimmer head.
2. To turn on the device, slide the power switch located on the side of the trimmer upwards.
3. **For Eyebrows:**
 - For precise shaping, use the trimmer head directly on unwanted hairs, moving it gently against the direction of hair growth.

- To trim eyebrow length, attach the eyebrow guide comb. The comb has two length settings. Slide the comb onto the trimmer head, aligning it with the desired length indicator. Gently comb through your eyebrows, allowing the trimmer to cut hairs to a uniform length.

4. For Upper Lip, Chin, and other Facial Hair:

- Hold the trimmer flat against the skin and move it in small, circular motions or against the direction of hair growth to remove unwanted hair.
 - Ensure skin is clean and dry for best results.
5. After use, slide the power switch downwards to turn off the device.
6. Replace the protective cap to keep the trimmer head clean and protected.





Image: The trimmer head with the guide comb, demonstrating its use for eyebrow trimming.

MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your trimmer.

1. Ensure the trimmer is turned off before cleaning.
2. Remove the trimmer head by gently twisting or pulling it off.
3. Use the provided cleaning brush to remove any trapped hairs from the blade and the inside of the trimmer head.
4. The blades are rinseable. You may rinse the trimmer head under running water to remove stubborn debris. Ensure it is completely dry before reattaching.
5. Do not immerse the main body of the trimmer in water.
6. Reattach the trimmer head and replace the protective cap.

TROUBLESHOOTING

If you encounter any issues with your Pure Silk Beauty Trimmer, please refer to the following common solutions:

- **Trimmer not turning on:** Check if the AAA battery is inserted correctly with the correct polarity. Replace the battery with a fresh one if necessary.
- **Reduced performance or pulling hair:** The blades may be clogged with hair. Clean the trimmer head thoroughly as described in the Maintenance section. Ensure the blades are not damaged.
- **Skin irritation:** Ensure you are using the trimmer gently and on clean, dry skin. Avoid pressing too hard. If irritation persists, discontinue use.

For further assistance, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	CPT18001PRW
Brand	XTREME

Power Source	1 x AAA Battery (not included)
Material	Silk (referring to product line/finish)
Color	Purple With White
Item Weight	2.46 ounces
Package Dimensions	8.19 x 4.02 x 1.57 inches
Manufacturer	Xtreme Digital Lifestyle Accessories

WARRANTY & SUPPORT

For warranty information or customer support, please contact Xtreme Digital Lifestyle Accessories directly. Refer to the product packaging or their official website for contact details.

LEGAL DISCLAIMER

CALIFORNIA WARNING: This product may be subject to Prop 65 rules and regulations. For more information, please visit www.P65Warnings.ca.gov.

© 2023 Xtreme Digital Lifestyle Accessories. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

