



[Manuals.plus](#) /

› [Wonderchef](#) /

› Wonderchef Roland 30 Litre Microwave Oven User Manual

Wonderchef Roland

Wonderchef Roland 30 Litre Microwave Oven User Manual

Model: Roland | Brand: Wonderchef

1. INTRODUCTION

Thank you for choosing the Wonderchef Roland 30 Litre Microwave Oven. This appliance is designed to provide versatile cooking options, including baking, roasting, reheating, thawing, and grilling. Please read this manual thoroughly before operating the microwave oven to ensure safe and efficient use. Keep this manual for future reference.



Figure 1: Wonderchef Roland 30 Litre Microwave Oven

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure proper ventilation around the appliance.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.

- Only use utensils suitable for microwave ovens.
- Always use oven mitts when handling hot items from the microwave.

3. PRODUCT FEATURES

The Wonderchef Roland Microwave Oven is equipped with advanced features for a superior cooking experience:

- **Capacity:** 30 Litres, suitable for various cooking needs.
- **Multi-Stage Cooking:** Offers versatile cooking with grill and convection modes.
- **Stainless Steel Cavity:** Designed for faster cooking and uniform heating, ensuring consistent results.
- **Heavy-duty Magnetron with Express Cooking Technology:** Provides efficient and quick cooking.
- **Safety Protection:** Includes overheating, Micro-therm, and sensor malfunctioning protection for enhanced safety.
- **Easy-to-Use Controls:** Features an intuitive control panel with an LED display for precise operation.
- **Power:** 2200 watts; Operating Voltage: 230 - 240 volts.
- **Included Components:** 1 Microwave Oven, 1 Glass Tray, 1 Baking Tray.

4. SETUP AND INSTALLATION

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check for any damage.
2. **Placement:** Place the oven on a flat, stable surface strong enough to hold its weight. Ensure there is adequate ventilation space: at least 20 cm (8 inches) above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (230-240 volts).
4. **Turntable Installation:** Place the turntable ring inside the oven cavity, then place the glass turntable plate securely on top of the ring.



Figure 2: Stainless Steel Cavity and Turntable

5. OPERATING INSTRUCTIONS

The Wonderchef Roland Microwave Oven offers various cooking functions. Familiarize yourself with the control panel:



Figure 3: Control Panel with LED Display

5.1 Basic Microwave Cooking

1. Place food in a microwave-safe container on the glass tray.
2. Close the oven door.
3. Use the 'Power Level' button to select the desired microwave power.
4. Use the 'Menu / Time' dial to set the cooking time.
5. Press 'Start' to begin cooking.

5.2 Grill Mode

The grill function is ideal for browning and crisping food.

1. Place food on the baking tray (included) or a heat-resistant rack.
2. Press the 'Grill / Micro+Grill' button once for Grill mode.
3. Set the desired grilling time using the 'Menu / Time' dial.
4. Press 'Start'.



Figure 4: Using the Baking Tray for Grilling

5.3 Convection Mode

Convection mode allows for baking and roasting, similar to a conventional oven.

1. Preheat the oven if required by your recipe.
2. Place food in an oven-safe dish.

3. Press the 'Convection' button.
4. Set the desired temperature and cooking time.
5. Press 'Start'.

5.4 Multi-Stage Cooking

This feature allows you to program multiple cooking stages (e.g., defrost, then microwave, then grill) for a single dish.

1. Select the first cooking function (e.g., Defrost).
2. Set its duration or weight.
3. Select the second cooking function (e.g., Microwave).
4. Set its power level and duration.
5. Repeat for additional stages if needed.
6. Press 'Start' to execute the programmed sequence.

5.5 Defrost Function

Use the defrost function to thaw frozen foods quickly and efficiently.

1. Place frozen food in a microwave-safe container.
2. Press the 'Defrost' button (if available, or use 'Clock/Weight' and select defrost by weight/time).
3. Enter the weight of the food or the desired defrost time.
4. Press 'Start'.

5.6 Official Product Video



Video 1: Demonstrates various cooking capabilities of the Wonderchef Roland Microwave, including baking cakes, cooking pizzas, and preparing tikkis without oil. It also highlights the stainless steel cavity, multi-stage cooking, LED display, 30-litre capacity, and express cooking technology.

6. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your microwave oven.

- **Interior Cleaning:** Wipe the interior cavity with a damp cloth after each use. For stubborn stains, use a mild detergent or a microwave-safe cleaner. Do not use abrasive cleaners or scouring pads.
- **Exterior Cleaning:** Clean the exterior surfaces with a soft, damp cloth. Avoid using harsh chemicals.
- **Door and Seals:** Regularly clean the door, door seals, and adjacent parts with a soft cloth to remove any spills or splatters.
- **Glass Tray:** The glass turntable can be removed and washed with warm soapy water or in a dishwasher.
- **Baking Tray:** Clean the baking tray with warm soapy water.

7. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start.	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse or reset circuit breaker.
Food not heating.	Incorrect cooking time/power level set; Door not closed properly.	Adjust cooking time and power level; Ensure door is fully closed.

Problem	Possible Cause	Solution
Sparking inside the oven.	Metal objects in the oven; Food residue on cavity walls.	Remove all metal objects; Clean the oven interior thoroughly.
Turntable not rotating.	Turntable not correctly placed; Obstruction under the turntable.	Ensure the glass tray is correctly seated on the turntable ring; Remove any obstructions.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

- **Brand:** Wonderchef
- **Model Name:** Roland
- **Model Number:** 63152505
- **Capacity:** 30 Litres
- **Color:** Black
- **Installation Type:** Countertop
- **Wattage:** 2200 Watts
- **Operating Voltage:** 230 - 240 Volts
- **Frequency:** 50 Hz
- **Heating Method:** Microwave, Grill, Convection Heat
- **Controller Type:** Button
- **Inner Material:** Stainless Steel
- **Item Weight:** 18000 Grams
- **Global Trade Identification Number (GTIN):** 08904214708924

9. WARRANTY AND SUPPORT

Your Wonderchef Roland Microwave Oven comes with a comprehensive warranty and dedicated customer support.

- **Warranty:** 10 Years on Magnetron.
- **Customer Support:** For any queries, service requests, or assistance, please contact Wonderchef Home Appliance Pvt. Ltd. at 18602660788 or WhatsApp us on 7070595959.

