

- Manuals.plus /
- › Gvirtue /
 - › Gvirtue Replacement Remote Control for Roku Devices: Models 1, 2, 3, LT, HD, XD, XDS, N1, Express, Express+

Gvirtue Gvirtue Replacement Remote Control

Gvirtue Replacement Remote Control for Roku Devices

Instruction Manual for Models 1, 2, 3, LT, HD, XD, XDS, N1, Express, Express+

1. INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Gvirtue Replacement Remote Control. This remote is designed to be a direct infrared (IR) replacement for various Roku streaming devices, offering straightforward functionality without the need for complex programming or pairing.

2. PRODUCT OVERVIEW

The Gvirtue Replacement Remote Control operates using infrared technology, requiring a direct line of sight to your Roku device. It functions immediately upon battery installation, with no additional setup steps required. The remote includes dedicated shortcut buttons for popular streaming services.



Image 2.1: Front view of the Gvirtue Replacement Remote Control.

2.1 Compatibility

This remote control is compatible with the following Roku models:

- Roku 1
- Roku 2 (HD, XD, XS)
- Roku 3
- Roku LT
- Roku HD
- Roku XD

- Roku XDS
- Roku N1
- Roku Express
- Roku Express+



Image 2.2: Visual representation of compatible Roku devices with the Gvirtue remote.

2.2 Incompatibility

This remote control is **not** compatible with the following Roku models or features:

- Roku Ultra
- Roku Stick / Stick+
- Roku Streaming Stick / Streaming Stick+
- Roku Premiere / Premiere+
- Roku Game
- Roku TV (e.g., TCL, Hisense, Sharp, Insignia)
- Devices requiring pairing or RF technology
- Devices with volume control or voice search functionality integrated into the remote

Do not work for

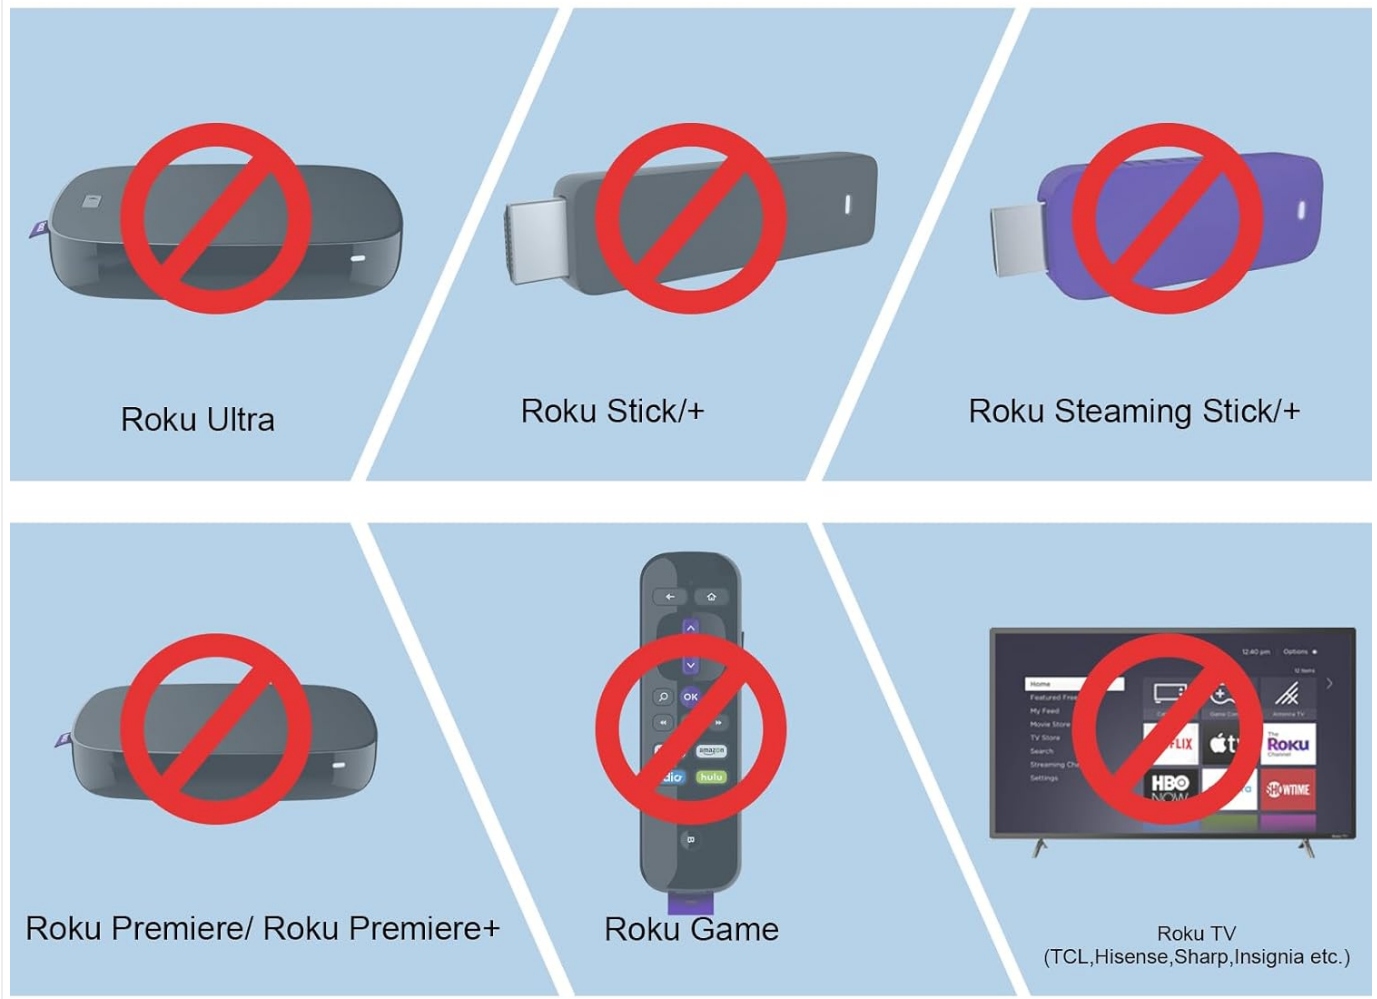


Image 2.3: Devices that are not compatible with this Gvirtue remote control.

3. SETUP

3.1 Battery Installation

The Gvirtue Replacement Remote Control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

2XAAA



Image 3.1: Proper insertion of AAA batteries into the remote control.

Once batteries are installed, the remote is ready for use with compatible Roku devices. No programming or pairing is required.

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

To operate your Roku device with the Gvirtue Replacement Remote Control, ensure there is a clear, unobstructed line of sight between the remote's IR emitter and the Roku device's IR receiver. Point the remote directly at your Roku device when pressing buttons.

4.2 Button Functions

The remote features a standard layout for easy navigation. Refer to the diagram below for button identification and their primary functions:

Function Button



①



BACK: Menu: Goes back to previous menu/screen.
Home screen tile: Moves highlight back to the Home screen option.
Watching Antenna TV or a TV input: Returns to Home screen.
Playing streaming content: Stops playing stream and returns to the previous menu or screen.
Browsing streaming content: Goes to the previous level in the content tree.

②



HOME: Immediately returns to the Home screen.



INSTANT/REPLAY: Select models Streaming programs that support this feature and broadcast TV if Live TV Pause is enabled, jumps back a few seconds with each press and resumes playing.
Broadcast TV if Live TV Pause is disabled, jumps to previous channel.
When using an on-screen keyboard, backspaces in the text you are entering.



OPTIONS: Displays additional options when available.

③



Accesses the “NETFLIX”.



Accesses the “sling”.



Accesses the “YouTube”.



Accesses the “hulu”.

Image 4.1: Detailed diagram of remote control buttons and their functions.

Button	Function
Back (←)	Goes back to the previous menu or screen.
Home (△)	Immediately returns to the Home screen.
Directional Pad (Up, Down, Left, Right)	Navigates through menus and content.
OK	Selects highlighted items or confirms actions.

Button	Function
Instant Replay (↶)	Jumps back a few seconds in streaming content. If Live TV Pause is enabled, jumps back a few seconds and resumes playing. If Live TV Pause is disabled, jumps to the previous channel. Also functions as backspace when using an on-screen keyboard.
Options (*)	Displays additional options when available.
Rewind (⏮)	Rewinds playback.
Play/Pause (⏮)	Plays or pauses content.
Fast Forward (⏭)	Fast forwards playback.

4.3 Shortcut Buttons

The remote includes four dedicated shortcut buttons for quick access to popular streaming applications:

- **Netflix:** Directly launches the Netflix application.
- **Sling:** Directly launches the Sling application.
- **Hulu:** Directly launches the Hulu application.
- **YouTube:** Directly launches the YouTube application.

Support One-Key Access Function



Image 4.2: Remote control demonstrating the use of shortcut buttons for streaming services.

5. IMPORTANT NOTES ON FEATURES

Please be aware that this Gvirtue Replacement Remote Control is a basic IR remote and does not include advanced features found on some original Roku remotes. Specifically, it does not have:

- A headphone jack for private listening.
- A pairing button, as it operates via IR and requires no pairing.
- Volume control functionality for your TV or Roku device.
- Voice search capabilities.

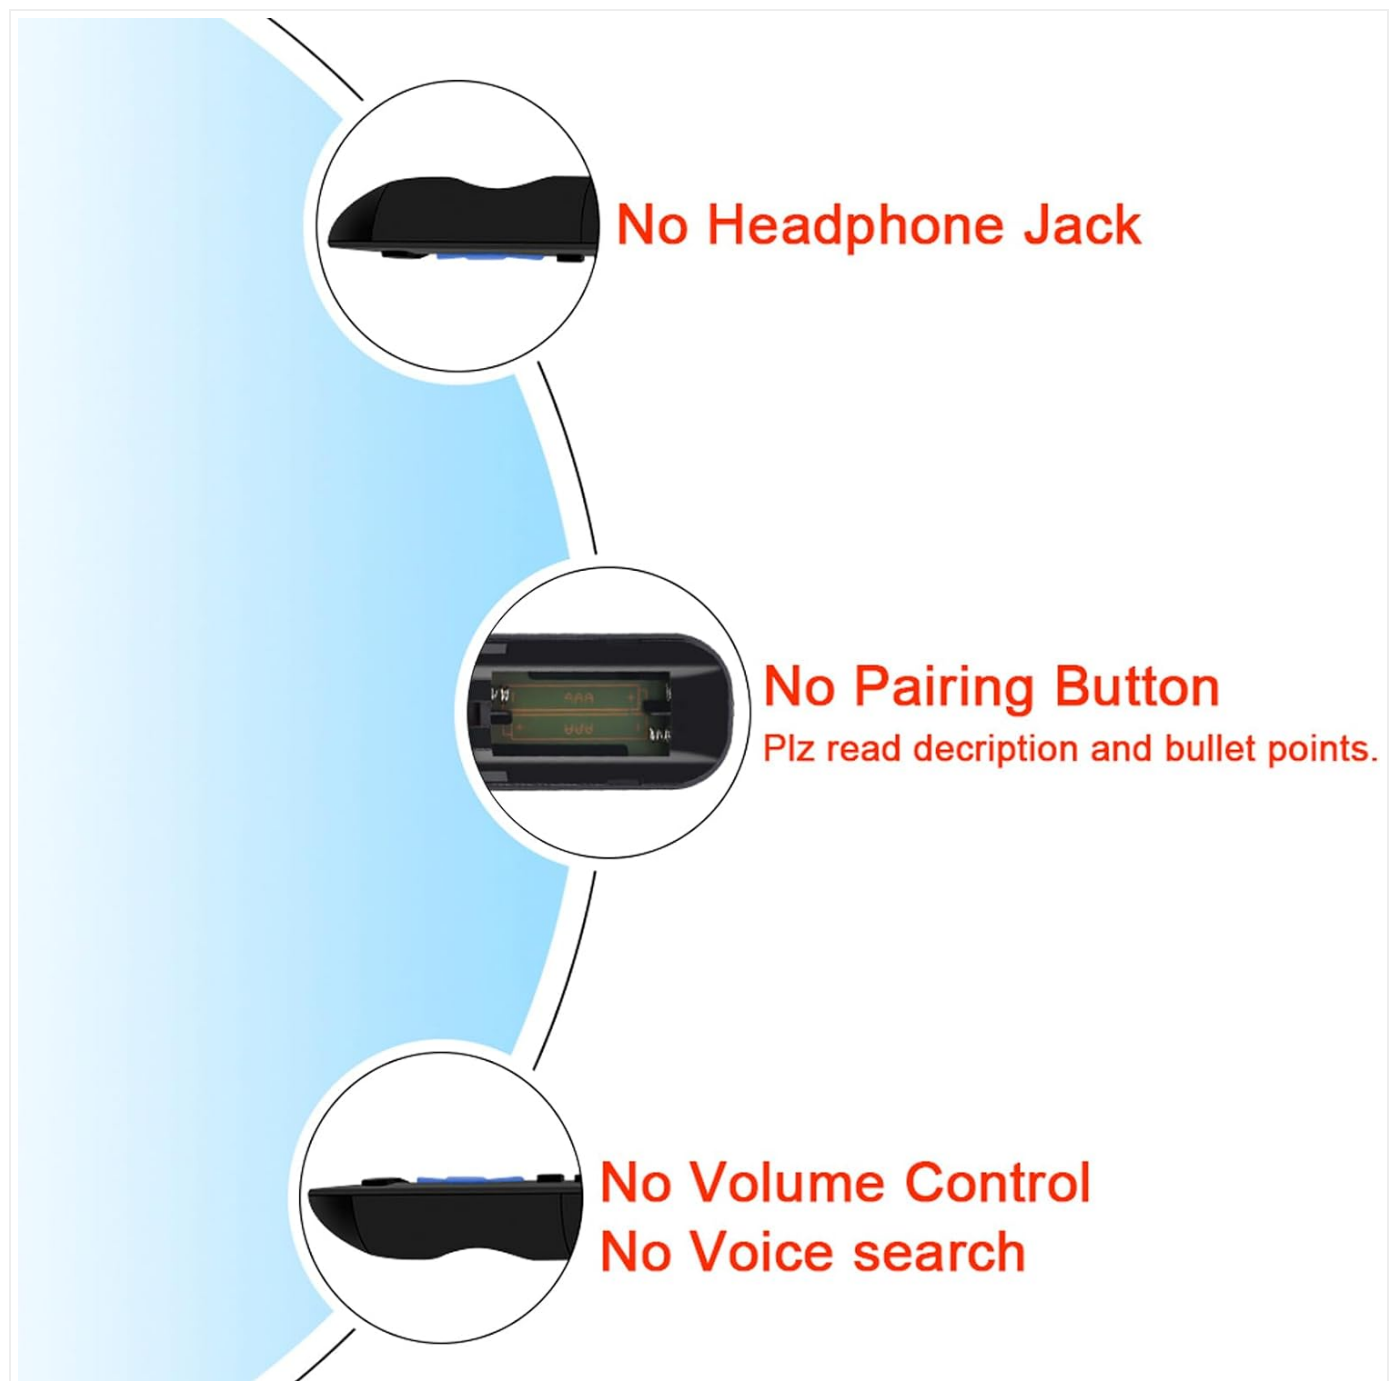


Image 5.1: Features not included with this replacement remote control.

6. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

If you experience issues with your Gvirtue Replacement Remote Control, try the following troubleshooting steps:

- **Remote Not Responding:**

- Ensure batteries are correctly installed with the correct polarity (+/-).
- Replace old batteries with fresh AAA batteries.
- Verify there is a clear line of sight between the remote and your Roku device. Remove any obstructions.
- Ensure you are pointing the remote directly at the Roku device's IR receiver.

- **Specific Buttons Not Working:**

- Check for any physical obstructions or debris around the button.
- If the issue persists after replacing batteries, the remote may be faulty.

- **Roku Device Not Powering On/Off:**

- This remote does not have a dedicated power button for the Roku device. Roku devices typically remain in a low-power state when not in use.

8. SPECIFICATIONS

Feature	Detail
Product Model	Gvirtue Replacement Remote Control (Manual Model: GRoku4-Hulu Manual)
Dimensions (L x W x H)	6 x 1.5 x 0.75 inches (approximately)
Item Weight	1.44 ounces (without batteries)
Power Source	2 x AAA batteries (not included)
Connectivity	Infrared (IR)
Special Feature	Ergonomic design
Max Supported Devices	1 (Roku device)



Image 8.1: Dimensions of the Gvirtue Replacement Remote Control.

9. WARRANTY AND SUPPORT

Gvirtue is committed to customer satisfaction. While specific warranty details are not provided in this manual, if you encounter any issues or are dissatisfied with your purchase, please contact Gvirtue customer support directly. We aim to resolve any problems promptly and appreciate your feedback and suggestions.

For support, please refer to the contact information provided with your purchase or visit the official Gvirtue store page on Amazon: [Gvirtue Amazon Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07KPDX5XN>

More documents and user manuals: <https://manuals.plus/>