

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Nintendo](#) /

› [Nintendo GameCube System Console User Manual](#)

## Nintendo GameCube

# Nintendo GameCube System Console User Manual

Model: GameCube | Brand: Nintendo

## INTRODUCTION

Welcome to the Nintendo GameCube System Console user manual. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your GameCube console. The Nintendo GameCube is a powerful video game console known for its unique design and extensive library of games. This renewed console offers a classic gaming experience.



Image: The Nintendo GameCube System Console in Jet Black. This compact console features a disc tray on top, power and reset buttons, and controller ports on the front.

## SETUP GUIDE

---

Follow these steps to set up your Nintendo GameCube console:

1. **Connect Power:** Insert the power cable into the "AC ADAPTER" port on the back of the console and plug the other end into a standard electrical outlet.
2. **Connect to TV:** Connect the AV cable (red, yellow, white plugs) from the "ANALOG AV OUT" port on the back of the console to the corresponding input ports on your television. Ensure the colors match.
3. **Connect Controller:** Plug the Nintendo GameCube controller into one of the four controller ports located on the front of the console.
4. **Insert Memory Card (Optional):** If you wish to save game progress, insert a Nintendo GameCube Memory Card into one of the two memory card slots on the front of the console.
5. **Insert Game Disc:** Open the disc tray by pressing the "OPEN" button located on the right side of the console. Place a GameCube game disc onto the spindle with the label facing up. Close the disc tray firmly until it clicks.

## OPERATING INSTRUCTIONS

---

Once your GameCube is set up, follow these steps to begin playing:

1. **Power On:** Press the "POWER" button located on the left side of the console. The power indicator light will illuminate.
2. **Select TV Input:** On your television, select the correct video input channel (e.g., AV1, Video, Input) that corresponds to where you connected the GameCube's AV cables.
3. **Start Game:** If a game disc is inserted, the GameCube will typically boot directly into the game. If not, or if you wish to access system settings, the main menu will appear, allowing you to select "Game Play," "Options," "Memory Card," or "Calendar."
4. **Using the Controller:**
  - The **Control Stick** (left analog stick) is for movement.
  - The **C Stick** (right analog stick) is often used for camera control or specific in-game actions.
  - The **D-Pad** (directional pad) is for menu navigation or specific game inputs.
  - **A, B, X, Y Buttons:** Primary action buttons.
  - **L and R Buttons:** Shoulder buttons, often used for blocking, aiming, or special abilities.
  - **Z Button:** A smaller shoulder button for additional actions.
  - **START/PAUSE Button:** Pauses the game or opens in-game menus.
5. **Power Off:** Press the "POWER" button again to turn off the console. Always save your game progress before powering off.

## MAINTENANCE

---

Proper care ensures the longevity of your GameCube console and games:

- **Console Cleaning:** Use a soft, dry cloth to wipe down the exterior of the console. Avoid liquid cleaners directly on the console. Ensure ventilation slots are free from dust.
- **Disc Care:** Handle game discs by the edges. Store them in their cases when not in use. If a disc is dirty, gently wipe it from the center outwards with a soft, lint-free cloth. Do not use abrasive materials.
- **Controller Care:** Keep controllers clean and free of debris. Avoid pulling on the controller cables to prevent damage.

## TROUBLESHOOTING

---

If you encounter issues, try these common solutions:

- **No Power:**
  - Ensure the power cable is securely connected to both the console and the electrical outlet.
  - Test the outlet with another device to confirm it is working.
- **No Video/Audio on TV:**
  - Verify that the AV cables are correctly connected to the console and the TV, matching the color codes (red, yellow, white).
  - Confirm your TV is set to the correct input source (e.g., AV1, Video).
- **Disc Read Error:**
  - Ensure the game disc is clean and free of scratches.
  - Make sure the disc is placed correctly on the spindle with the label facing up.
  - Close the disc tray firmly.
  - Try a different game disc to determine if the issue is with the console or the disc.
- **Controller Not Responding:**

- Check that the controller cable is securely plugged into the console's controller port.
- Try a different controller port or a different controller to isolate the problem.
- **Console Freezes/Crashes:**
  - Press the "RESET" button on the console.
  - If the issue persists, power off the console, wait a few seconds, and then power it back on.

## SPECIFICATIONS

Feature	Detail
Model	Nintendo GameCube
ASIN	B07KPPMP6P
Product Dimensions	12 x 12 x 8 inches
Item Weight	4.78 Pounds
Manufacturer	Nintendo
Processor	485MHz (for faster loading)
Polygon Rendering	6 to 12 million polygons per second
Included Accessories	Console, Power Cable, AV Cable, Nintendo GameCube Controller

## WARRANTY AND SUPPORT

This product is a renewed Nintendo GameCube console. For specific warranty and return information, please refer to the seller's policy on the platform where it was purchased.

- **Return Policy:** Typically, renewed products offer a 90-day refund/replacement policy. Please check your purchase details for exact terms.
- **Technical Support:** For general technical inquiries regarding the Nintendo GameCube, you may consult official Nintendo support resources. For issues specific to your renewed unit, contact the seller directly.

