

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Uten](#) /

> [Uten Smoothie Blender 1.25L Instruction Manual](#)

Uten SBL316ABC(UEA028)

Uten 1.25L Multi-Functional Smoothie Blender Instruction Manual

Model: SBL316ABC(UEA028)

Brand: Uten

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain for future reference.

- Always unplug the blender from the power outlet before cleaning, assembling, disassembling, or when not in use.
- Do not immerse the motor base, cord, or plug in water or any other liquid.
- Keep hands and utensils out of the container while blending to reduce the risk of severe personal injury and/or damage to the blender.
- Never operate the blender with damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid contact with moving parts. Blades are sharp; handle with extreme care.
- Do not use attachments not recommended or sold by the manufacturer.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Ensure the lid is securely locked in place before operating the appliance.
- Do not blend hot liquids as they may cause pressure buildup and result in scalding.
- The appliance is equipped with overheating protection. If the motor stops due to overheating, allow it to cool down for at least 15-20 minutes before restarting.
- This appliance is for household use only. Do not use outdoors.

PRODUCT OVERVIEW

Components

The Uten Multi-Functional Smoothie Blender comes with several components designed for versatile use. Refer to the diagram below for identification.



Image: The Uten 1.25L Multi-Functional Smoothie Blender, showcasing the main unit, large jug, smaller blending cups, and various blade attachments, alongside a prepared smoothie.

Multi-functional Blender

Can quickly make milkshake, soya milk, grinding powder, auxiliary food, mincemeat, fine texture, food nutrients more easily absorbed



Image: A detailed diagram illustrating the various numbered components included with the Uten blender, such as the host, jugs, cups, blades, and lids.

- **1* Host:** The main motor base of the blender.
- **2* 300ml Low Cup:** A smaller cup for individual servings or grinding.
- **3* 500ml High Cup:** A medium-sized cup for blending.
- **4* 600ml Bottle (1* Red, 1* Blue):** Portable bottles for on-the-go use.
- **5* 1250ml Jug:** The large capacity jug for family-sized blending.
- **6* Jug Pusher:** For safely pushing ingredients down in the jug.
- **7* Jug Filter:** For straining pulp from juices.
- **8* 4 Leaf Blade:** Suitable for fruits, vegetables, ice, and wet food.
- **9* 2 Leaf Blade:** Ideal for coffee beans, nuts, and dry food only.
- **10* Coarse Hole Lid:** A lid with coarse holes, possibly for straining.
- **11* Sealed Hole Lid:** A sealed lid for storage or transport.
- **12* Jug Lid:** The lid for the 1250ml jug.
- **13* Instruction Manual:** This document.

Key Features

- **5-in-1 Multi-Functional Design:** Functions as a blender, grinder, juicer, and ice crusher.
- **Powerful Motor:** 380 Watts high-torque power base, revving up to 22,000 RPM for efficient blending.
- **Durable Blades:** Equipped with 304 stainless steel high-quality blades, including a 4-leaf cross blade for wet ingredients and a 2-leaf flat blade for dry grinding.
- **Dual Speed Control & Pulse Function:** Offers two speed settings and a pulse function for precise control over blending consistency.
- **Auto Shut-off Feature:** Protects against overheating, ensuring safety and prolonging appliance life.
- **Generous Capacity:** Includes a 1.25L main jug and additional blending cups/bottles for various needs.
- **Non-slip Base:** Helps the blender stay stable during operation.

SETUP

Follow these steps to set up your Uten Multi-Functional Smoothie Blender for first use:

1. **Unpack and Clean:** Carefully unpack all components. Wash the jug, cups, bottles, blades, and lids with warm soapy water. Rinse thoroughly and dry. The motor base should only be wiped with a damp cloth.
2. **Position the Base:** Place the motor base on a clean, dry, stable, and flat surface. Ensure it is near a power outlet.
3. **Assemble the Container:** Choose the appropriate jug or blending cup for your task. Attach the desired blade assembly (4-leaf for wet blending, 2-leaf for dry grinding) by twisting it onto the bottom of the container until secure.
4. **Add Ingredients:** Place your ingredients into the assembled container. Do not overfill; ensure ingredients do not exceed the maximum fill line. For best results, add liquids first, then soft ingredients, followed by harder ingredients and ice.
5. **Secure Container to Base:** Invert the assembled container (with blade and ingredients) and place it onto the

motor base. Twist clockwise until it locks securely into place. Ensure the container is properly aligned with the safety interlock system.

Fresh Life Starts with a Simple Small Personal Blender

Share the joy of healthy juices together



Image: A visual guide demonstrating the five easy steps to operate the Uten blender, from adding ingredients to selecting speed.

OPERATING INSTRUCTIONS

General Blending

1. Ensure the blender is properly assembled and the container is securely locked onto the motor base.
2. Plug the power cord into a suitable electrical outlet.
3. Select the desired speed setting using the control knob:
 - **'P' (Pulse)**: For short bursts of power, ideal for chopping or when ingredients get stuck. Release the knob to return to '0'.
 - **'1' (Low Speed)**: Suitable for softer ingredients, mixing, and light blending.
 - **'2' (High Speed)**: For harder ingredients, crushing ice, and achieving smoother consistencies.
4. Begin blending. For optimal results, start with a lower speed and gradually increase if needed.
5. Do not operate the blender continuously for more than 1 minute at a time. Allow the motor to rest for at least 2 minutes between cycles to prevent overheating.
6. Once blending is complete, turn the control knob to '0' (Off) and unplug the appliance from the power outlet.
7. Carefully remove the container from the motor base and detach the blade assembly.



PULSE

For chunk food or when something gets stuck,function for self-cleaning



SPEED 1

For fruit,vegetable and other softer food



SPEED 2

For beans,carrots,meat and other harder food

Image: The Uten blender's control knob, illustrating the 'P' (Pulse), '1' (Speed 1), and '2' (Speed 2) settings with examples of food types suitable for each.

Wet and Dry Blending

Your Uten blender is equipped with two types of blade assemblies for different blending needs:

- **4-Leaf Blade:** Use this blade for wet ingredients such as fruits, vegetables, ice, and liquids to make smoothies, juices, and purees.
- **2-Leaf Blade:** This blade is specifically designed for dry ingredients like coffee beans, nuts, spices, and grains. Do not use it for wet blending.



Image: A visual comparison of the 4-leaf blade for wet ingredients (fruits, vegetables, ice) and the 2-leaf blade for dry ingredients (coffee beans, nuts).

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your blender.

1. **Unplug First:** Always ensure the blender is unplugged from the power outlet before cleaning.
2. **Separate Components:** Disassemble all removable parts: jug, cups, bottles, blades, and lids.
3. **Wash Removable Parts:** The jug, cups, bottles, blades, and lids are dishwasher safe. Alternatively, wash them by hand with warm soapy water. Use a brush to clean the blades carefully due to their sharpness. Rinse thoroughly.
4. **Clean Motor Base:** Wipe the motor base with a damp cloth. Do NOT immerse the motor base in water or any other liquid.
5. **Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing the blender.
6. **Storage:** Store the blender in a dry place, away from direct sunlight and heat sources.

This would make a great gift for family and friends!



Image: Visual demonstration of cleaning the blender, showing parts being hand-washed and other parts placed in a dishwasher, highlighting that bottles and blades are dishwasher safe.

TROUBLESHOOTING

If you encounter any issues with your Uten blender, refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; container not properly locked; power outage.	Ensure the power cord is securely plugged into a working outlet. Twist the container clockwise until it clicks and locks into the motor base. Check your household's power supply.
Motor stops during operation.	Overheating protection activated; too much load; ingredients stuck.	Unplug the blender and let it cool down for 15-20 minutes. Reduce the amount of ingredients. Add more liquid. Use the pulse function or a jug pusher to dislodge ingredients.
Ingredients are not blending smoothly.	Insufficient liquid; too many solid ingredients; incorrect speed setting.	Add more liquid. Reduce the amount of solid ingredients. Use the '2' (High Speed) setting for tougher ingredients or ice. Use the pulse function to break down larger pieces.
Loud noise or strange odor.	Overload; foreign object in blades; motor issue.	Immediately turn off and unplug the blender. Remove ingredients and check for any foreign objects. If the issue persists after reducing load and checking, contact customer support.
Leakage from the bottom of the container.	Blade assembly not tightened; seal damaged.	Ensure the blade assembly is securely twisted onto the container. Check the rubber gasket/seal for damage or improper placement. Replace if necessary.

SPECIFICATIONS

Detailed technical specifications for the Uten 1.25L Multi-Functional Smoothie Blender:

Feature	Specification
Brand	Uten
Model Number	SBL316ABC(UEA028)
Colour	Silver-1.25l-knob
Product Dimensions	13 x 13 x 35 cm
Item Weight	2.2 kg
Capacity	1.25 litres
Voltage	220V
Power	380 Watts
Motor Speed	Up to 22,000 RPM
Number of Speeds	2 (plus Pulse function)
Blade Material	304 Stainless Steel
Special Features	Multifunctional, Ice Crush function, Overheating Protection

WARRANTY AND SUPPORT

Your Uten Multi-Functional Smoothie Blender is covered by a standard manufacturer's warranty, protecting against defects in materials and workmanship under normal household use.

- **Warranty Period:** Please refer to your purchase receipt or the product packaging for specific warranty duration.
- **Claiming Warranty:** In the unlikely event of a defect, please retain your proof of purchase. Contact the retailer from whom you purchased the product or the Uten customer support team for assistance.
- **Customer Support:** For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please visit the official Uten website or contact their customer service department. Contact details are typically available on the product packaging or the brand's official online presence.
- **Online Resources:** Additional support, FAQs, and product information may be available on the Uten brand store page on Amazon or the manufacturer's website.

