

[Manuals.plus](#) /

› [Teknogame](#) /

› Teknogame Wired N64 Controller Instruction Manual

Teknogame 4305

Teknogame Wired N64 Controller Instruction Manual

Model: 4305

1. INTRODUCTION

Thank you for purchasing the Teknogame Wired N64 Controller. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new controller. Please read this manual thoroughly before use to ensure optimal performance and longevity of your product.

2. PACKAGE CONTENTS

- 1 x Teknogame Wired N64 Controller
- 1 x Instruction Manual (this document)



Image: Teknogame Wired N64 Controller in its retail packaging.

3. PRODUCT OVERVIEW

The Teknogame Wired N64 Controller is designed for use with the Nintendo 64 console, offering a classic gaming experience with modern ergonomic enhancements and rumble capability.



Image: Front view of the Teknogame Wired N64 Controller, showing the D-pad, Analog Stick, A/B/C buttons, Start button, and Z-trigger.

Controller Components:

- **Analog Stick:** For precise 3D movement.
- **D-Pad (Directional Pad):** For directional input in 2D games or menu navigation.
- **A Button:** Primary action button (typically green).
- **B Button:** Secondary action button (typically blue).
- **C Buttons (Yellow):** Four directional buttons for camera control or specific in-game actions.
- **Start Button:** Pauses games or confirms selections.
- **Z-Trigger:** Located on the underside, typically used for targeting or crouching.
- **L/R Shoulder Buttons:** Located on the top left and right, for various in-game functions.
- **Controller Port Connector:** Connects to the Nintendo 64 console.

4. SETUP

1. Ensure your Nintendo 64 console is powered off.
2. Locate an available controller port on the front of your Nintendo 64 console.
3. Align the connector of the Teknogame Wired N64 Controller with the controller port. The connector is keyed to fit in only one orientation.
4. Gently push the connector firmly into the port until it clicks into place.
5. Power on your Nintendo 64 console. The controller is now ready for use.

5. OPERATING INSTRUCTIONS

Once connected, the Teknogame Wired N64 Controller functions identically to the original Nintendo 64 controller, allowing you to play all compatible N64 games.

Key Features:

- **Precision Analog Controller:** Provides smooth and accurate 360-degree movement for immersive gameplay.
- **Rumble Feature:** The controller supports rumble feedback when used with games that utilize the N64 Rumble Pak feature. Ensure a compatible Rumble Pak (sold separately) is inserted into the controller's expansion port for vibration effects.
- **Ergonomic Design:** Designed for comfortable extended play sessions.

Refer to your specific game's instruction manual for detailed control schemes and button functions.

6. MAINTENANCE

Cleaning:

- To clean the controller, use a soft, slightly damp cloth.
- Do not use harsh chemicals, abrasive cleaners, or excessive moisture, as this may damage the controller.
- Ensure the controller is completely dry before storing or using again.

Storage:

- Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid placing heavy objects on the controller or tangling the cable, which could cause damage.

7. TROUBLESHOOTING

Controller Not Responding:

- **Check Connection:** Ensure the controller's connector is fully and securely inserted into the Nintendo 64 console's controller port.
- **Try Another Port:** If available, try connecting the controller to a different controller port on the console.
- **Restart Console:** Power off and then power on your Nintendo 64 console.

Buttons or Analog Stick Not Working Correctly:

- **Inspect for Debris:** Check if any dust or debris is lodged around the buttons or analog stick. Gently try to remove it.

- **Test in Different Games:** Verify if the issue persists across multiple games to rule out a game-specific problem.

If you continue to experience issues, please refer to the Warranty and Support section for further assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	Teknogame
Model Number	4305
Product Dimensions	9.84 x 7.09 x 2.76 inches
Item Weight	9.9 ounces
Compatible Devices	Nintendo 64
Controller Type	Gamepad
Special Feature	Rumble, Ergonomic

9. WARRANTY AND SUPPORT

Teknogame products are manufactured to high quality standards. This product is covered by a limited warranty against defects in materials and workmanship under normal use. For specific warranty terms, duration, and to obtain support, please refer to the warranty information provided with your product packaging or visit the official Teknogame website. For technical assistance or customer service inquiries, please contact Teknogame support through the channels listed on our official website.

© 2024 Teknogame. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question