

Lenovo ZA440163US

Lenovo Tab P10 10.1-inch Android Tablet

USER MANUAL

1. Introduction

This manual provides essential information for the proper use and maintenance of your Lenovo Tab P10 10.1-inch Android Tablet. The Lenovo Tab P10 features a 10.1-inch display and is designed for portability and multimedia consumption. It offers immersive sound and a clear display for various applications.

2. What's in the Box

Verify that all items are present in the product packaging:

- Lenovo Tab P10
- USB Type-C Cable
- Quick-Start Guide
- Warranty Information
- Safety-Guide
- Lenovo Smart Dock
- Smart Dock DC Adapter

3. Device Overview

Familiarize yourself with the physical components of your Lenovo Tab P10.



Figure 3.1: Front view of the Lenovo Tab P10, showing the display, front camera, and home screen interface.



Figure 3.2: Back view of the Lenovo Tab P10, highlighting the design and rear camera placement.



Figure 3.3: Side view of the tablet, illustrating the USB Type-C charging port and headphone jack.



Figure 3.4: Side view of the tablet, showing the power button and volume control buttons.

4. Setup

4.1. Charging the Tablet

Before first use, fully charge your tablet. Connect the USB Type-C cable to the tablet's charging port and the other end to the provided power adapter. Plug the adapter into a wall outlet. The battery indicator on the screen will show charging status.

4.2. Powering On/Off

- **To Power On:** Press and hold the Power button (refer to Figure 3.4) until the Lenovo logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select 'Power off'.
- **To Restart:** From the power options menu, select 'Restart'.

4.3. Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process. This includes selecting your language, connecting to a Wi-Fi network, setting up your Google account, and configuring basic security settings.

5. Operating Instructions

5.1. Touch Screen Navigation

The tablet's display is a multi-touch screen. Use the following gestures:

- **Tap:** Select an item or activate a button.
- **Tap and Hold:** Access contextual menus or move icons.
- **Swipe:** Scroll through lists or switch between home screens.
- **Pinch-to-Zoom:** Zoom in or out on images and web pages.

5.2. Wi-Fi Connectivity

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle **Wi-Fi On**.
3. Select your desired network from the list.
4. Enter the password if prompted, then tap **Connect**.

5.3. Applications

Access applications from the home screen or the app drawer. Download new applications from the Google Play Store.

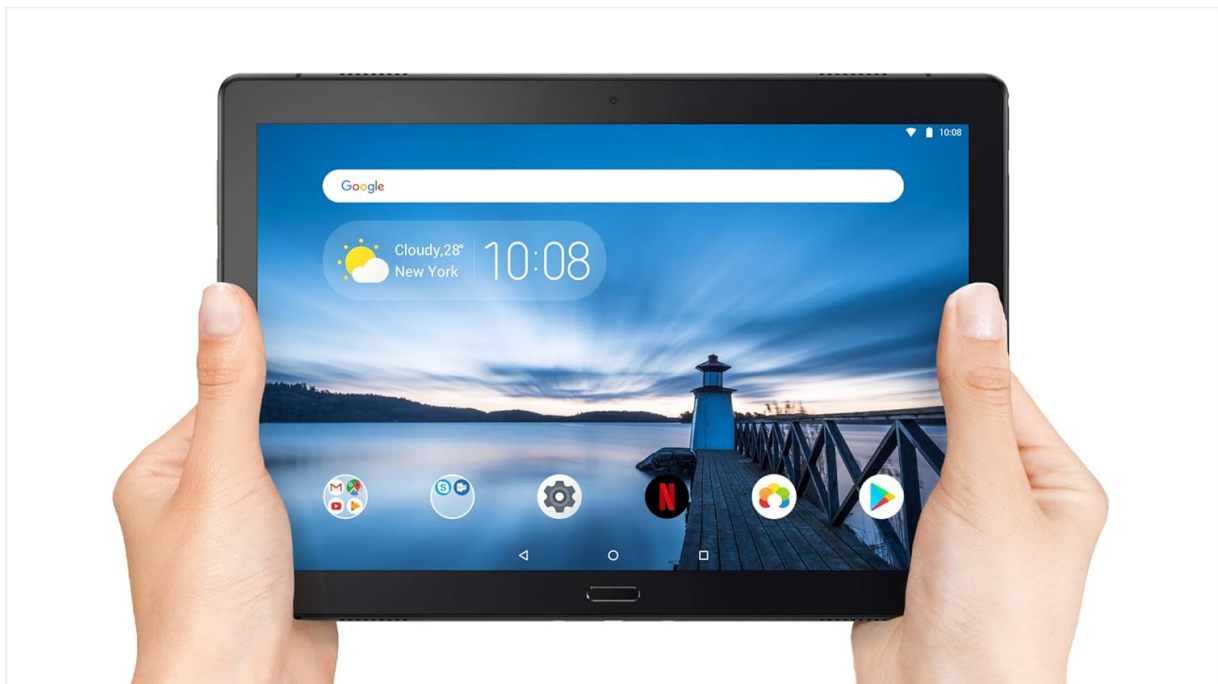


Figure 5.1: Using the tablet for general navigation and app access.

6. Maintenance

6.1. Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid harsh chemicals or abrasive materials.

6.2. Software Updates

Regularly check for and install software updates to ensure optimal performance and security. Go to **Settings > System > System update** to check for available updates.

6.3. Battery Care

To prolong battery life, avoid exposing the tablet to extreme temperatures. It is recommended to keep the battery charge between 20% and 80% for long-term health.

7. Troubleshooting

Problem	Solution
Tablet does not power on	Ensure the battery is charged. Connect the tablet to its charger for at least 30 minutes, then try powering on again. If unresponsive, perform a forced restart by holding the Power button for 10-15 seconds.
Wi-Fi connection issues	Check if Wi-Fi is enabled in Settings. Restart your Wi-Fi router. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
Applications are crashing or freezing	Close and reopen the application. Clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache). Update the app from the Google Play Store. If the issue persists, uninstall and reinstall the app.
Slow performance	Close unused applications. Clear cache and temporary files. Restart the tablet. Consider performing a factory reset as a last resort (back up your data first).

8. Specifications

Feature	Detail
Model Name	Lenovo Tab P10
Item Model Number	ZA440163US
Operating System	Android O
Processor	1.8 GHz Snapdragon (Qualcomm, 8 Processors)
RAM	4 GB
Storage	64 GB Hybrid Drive (Flash Memory Size: 64 GB, Memory Storage Capacity: 32 GB)
Screen Size	10.1 Inches
Screen Resolution	1920 x 1200 Pixels
Wireless Type	802.11n
USB Ports	1 (USB 2.0)

Feature	Detail
Color	Slate black
Item Weight	15.5 ounces
Product Dimensions (LxWxH)	9.53 x 0.27 x 6.57 inches
Power Source	Battery Powered (1 Lithium Polymer battery included)

9. Warranty and Support

For warranty information, please refer to the 'Warranty' document included in your product packaging. For technical support, visit the official Lenovo support website or contact their customer service. Keep your purchase receipt and product serial number handy for any support inquiries.

You can find additional support and resources on the [Lenovo Store on Amazon](#).