

- Manuals.plus /
- > [Redi-Remote](#) /
 - > Redi-Remote Replacement Remote Control User Manual

Redi-Remote JLE55SP4000, JLE55SP4000B, SP55MC, SP50MC, SL42B-C, SL42BC, SL47B-C, SL47BC, 0980-0306-0020, 098003060020, 0980-0306-005

Redi-Remote Replacement Remote Control User Manual

For JVC Models: JLE55SP4000, JLE55SP4000B, SP55MC, SP50MC, SL42B-C, SL42BC, SL47B-C, SL47BC

1. INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed specifically for various JVC television models. This remote is a custom replacement and is not an original JVC product. It is engineered to perform all essential functions for the compatible JVC units without requiring any programming.

Please note that this remote does not feature a QWERTY keyboard and cannot be programmed to control auxiliary devices.

2. PRODUCT OVERVIEW



Figure 2.1: Front view of the Redi-Remote replacement remote control, showing the main navigation, volume, channel, and numeric

keypad buttons. The lower section is covered by a sliding panel.

The Redi-Remote is a compact and functional replacement remote. Its design includes a sliding cover that conceals additional, model-specific functions located on the lower half of the remote.

- **No Programming Required:** Ready to use out of the box with compatible JVC models.
- **Dedicated Functions:** Performs every function for the specific JVC unit it is designed to control.
- **Compact Size:** Measures approximately 7.5 inches (19 cm) in length, 2.25 inches (5.7 cm) in width, and 0.75 inches (1.9 cm) in thickness.
- **No QWERTY Keyboard:** This remote does not include a QWERTY keyboard.
- **No Auxiliary Device Control:** Cannot be programmed to control other devices like soundbars or DVD players.

3. SETUP

3.1 Battery Installation

The Redi-Remote requires 4 AAA batteries for operation. Batteries are not included with the remote.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert 4 AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Important: Always use fresh batteries. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period.

4. OPERATING INSTRUCTIONS

4.1 Basic Functions

The upper section of the remote provides access to common television functions:

- **PWR (Power):** Turns the TV on or off.
- **TV/VIDEO:** Switches between TV and video input modes.
- **CH+ / CH-:** Changes channels up or down.
- **VOL+ / VOL-:** Adjusts volume up or down.
- **MUTE:** Mutes or unmutes the TV sound.
- **Numeric Keypad (0-9, 100, ENT):** Directly enters channel numbers.
- **MENU:** Accesses the TV's main menu.
- **DISP (Display):** Displays on-screen information.
- **RECALL:** Returns to the previous channel.
- **SLEEP:** Activates the sleep timer function.

4.2 Advanced Functions (Sliding Cover)

The lower half of the remote contains additional, model-specific functions. To access these buttons, gently slide the bottom cover downwards.







Figure 4.1: The Redi-Remote with its lower cover slid down, exposing the advanced function buttons including multimedia controls, navigation arrows, and color-coded buttons.

Once the cover is slid down, you will find buttons for:

- **Multimedia Controls:** Play, Pause, Fast Forward, Rewind, Stop.
- **Navigation Arrows (Up, Down, Left, Right) and OK:**For navigating menus and confirming selections.
- **INPUT:** Cycles through available input sources.
- **INFO:** Displays program information.
- **BACK / EXIT / LAST:**Navigation and exit functions.
- **FAV CH (Favorite Channel):**Accesses favorite channels.
- **WIDE:** Adjusts screen aspect ratio.
- **AUDIO ONLY:** Switches to audio-only mode.
- **NETFLIX / 3D / ICE APPS:**Dedicated buttons for specific smart TV functions (availability depends on TV model).
- **Color Buttons (RED, GREEN, YELLOW, BLUE):**Used for specific functions within menus or smart TV applications.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with proper polarity.
 - Replace old batteries with new ones.
 - Make sure there are no obstructions between the remote and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV.
- **Some buttons not working:**
 - Verify that the lower sliding cover is fully open if you are trying to use advanced functions.
 - Ensure your TV model is listed as compatible with this remote.
 - Some smart TV functions (e.g., NETFLIX, 3D) may only work if your specific JVC TV model supports them.
- **Remote controls other devices:**
 - This remote is designed only for the specified JVC TV models and cannot be programmed for other devices. If it is affecting other devices, ensure it is not accidentally pointing at them or that they are not responding to general IR signals.

6. SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Compatible Devices	JVC Television models: JLE55SP4000, JLE55SP4000B, SP55MC, SP50MC, SL42B-C, SL42BC, SL47B-C, SL47BC, 0980-0306-0020, 098003060020, 0980-0306-0050, 098003060050

Connectivity Technology	Infrared (IR)
Max Number of Supported Devices	1 (JVC TV)
Special Feature	No Programming Required
Product Dimensions	7 x 3 x 1 inches (approx. 17.8 x 7.6 x 2.5 cm)
Item Weight	5 ounces (approx. 142 grams)
Batteries Required	4 AAA batteries (not included)

7. MAINTENANCE

To ensure the longevity and proper functioning of your Redi-Remote:

- Keep the remote clean by wiping it with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- Do not expose the remote to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping the remote or subjecting it to strong impacts.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

8. SUPPORT

For any concerns or issues with your Redi-Remote after purchase, please contact the seller directly for assistance. The seller is committed to ensuring customer satisfaction.
Seller: [RemotesPro](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07KQLVYSG>

More documents and user manuals: <https://manuals.plus/>