

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [furReal](#) /

› [furReal Cubby, the Curious Bear Interactive Toy Instruction Manual](#)

**furReal E4591EP5**

# **furReal Cubby, the Curious Bear Interactive Toy Instruction Manual**

Model: E4591EP5

## **1. INTRODUCTION**

Welcome to the world of furReal Cubby, the Curious Bear! Cubby is an interactive plush toy designed to be a delightful companion for children. With over 100 combinations of sounds and movements, Cubby offers engaging play experiences throughout the day and a comforting presence at night.

### **What's Included:**

- 1 x furReal Cubby, the Curious Bear interactive plush
- 1 x Honey Bottle accessory
- 1 x Comb accessory



Image 1.1: Cubby, the Curious Bear with its accessories.

This image shows the furReal Cubby, the Curious Bear, a brown plush toy with animated eyes, nose, and mouth. It is sitting upright with its arms raised slightly. Next to it are a small orange honey bottle with green handles and a small green comb, both accessories for interactive play.

## 2. SAFETY INFORMATION

**WARNING: Not recommended for children under 3 years due to small parts. Recommended for ages 4 and up.**

### Battery Safety:

- Always use fresh batteries of the specified type.
- Do not mix old and new batteries, or different types of batteries.
- Insert batteries with correct polarity (+ and -).
- Remove exhausted batteries promptly.
- Remove batteries if the toy will not be used for an extended period.
- Do not recharge non-rechargeable batteries.
- Keep batteries away from children.

## 3. SETUP

### Battery Installation:

Cubby requires 4 x AA alkaline batteries (not included).

1. Locate the battery compartment on Cubby's back or bottom.
2. Using a Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 4 x AA alkaline batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

### **Powering On:**

Locate the ON/OFF switch, usually near the battery compartment. Slide the switch to the 'ON' position to activate Cubby.

## **4. OPERATING INSTRUCTIONS**

Cubby is designed to be highly interactive. It responds to touch, sound, and the included accessories.

### **Day Mode Interactions:**

In Day Mode, Cubby is awake and ready to play. It can move its head, eyes, ears, muzzle, mouth, and arms, and makes various fun sounds.

- **Touch its nose:** Cubby may sneeze or make other playful sounds.
- **Rub its tummy:** Cubby might giggle or make happy sounds.
- **Press its hand:** Cubby can play peek-a-boo.
- **Feed with the Honey Bottle:** Place the honey bottle in Cubby's mouth, and it will make sucking sounds.
- **Brush its fur with the Comb:** Cubby enjoys being groomed and will react with contented sounds.
- **Speak to Cubby:** It may respond with babbles or movements.



Image 4.1: Child interacting with Cubby, the Curious Bear.

This image shows a young child leaning in to interact with the furReal Cubby, the Curious Bear. Cubby is sitting on a white table, appearing to respond to the child's presence. The honey bottle and comb accessories are visible on the table next to Cubby.

### **Night Mode:**

Cubby features a special Night Mode to help children settle down. To activate Night Mode, locate the switch (often combined with the ON/OFF switch or a separate mode switch) and set it to the 'Night' or 'Sleep' position.

- In Night Mode, Cubby will close its eyes.
- It will emit gentle sleeping sounds or play one of four soft, calming melodies for approximately 5 minutes.
- This mode is designed to provide comfort and assist with bedtime routines.

## **5. MAINTENANCE**

### **Cleaning:**

To clean Cubby, gently wipe the surface with a damp cloth. Do not immerse Cubby in water or use harsh cleaning agents, as this may damage the electronic components.

### **Storage:**

When storing Cubby for an extended period, ensure the power switch is in the 'OFF' position and remove the batteries to prevent leakage and damage.

## 6. TROUBLESHOOTING

- **Cubby is not responding:**
  - Check if the power switch is in the 'ON' position.
  - Ensure batteries are correctly installed and not depleted. Replace with fresh batteries if necessary.
- **Sounds are distorted or movements are slow:**
  - This usually indicates low battery power. Replace all batteries with fresh ones.
- **Cubby is not reacting to accessories:**
  - Ensure the accessories are correctly positioned in Cubby's mouth or near its sensors.

## 7. SPECIFICATIONS

<b>Model Number</b>	E4591EP5
<b>Dimensions (L x W x H)</b>	21.59 x 50.8 x 44.45 cm
<b>Weight</b>	1.42 kg
<b>Recommended Age</b>	4 years and up
<b>Batteries Required</b>	4 x AA Alkaline Batteries (not included)
<b>Main Material</b>	Cotton
<b>Educational Value</b>	Develop social and emotional skills through interactive play

## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official furReal website. Keep your purchase receipt as proof of purchase.