Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- tectake /
- > tectake Aluminum Sun Lounger Instruction Manual

tectake 2er Set Alu Sonnenliege Liegestuhl Grau (B07KRD7WHG)

tectake Aluminum Sun Lounger Instruction Manual

Model: 2er Set Alu Sonnenliege Liegestuhl Grau (B07KRD7WHG)

Brand: tectake

Introduction

Thank you for choosing the tectake Aluminum Sun Lounger. This manual provides important information regarding the safe and proper use, assembly, maintenance, and care of your new sun loungers. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INSTRUCTIONS

- Always ensure the lounger is placed on a stable, level surface before use to prevent tipping.
- Do not exceed the maximum weight capacity of 120 kg (264 lbs).
- · Keep fingers and hands clear of moving parts, especially during folding and unfolding, to avoid pinching.
- Do not allow children to play on or around the lounger unsupervised.
- Regularly inspect the lounger for any signs of wear, damage, or loose parts. Do not use if damaged.
- Avoid prolonged exposure to extreme weather conditions (heavy rain, strong winds, direct intense sunlight) to prolong product life.
- When adjusting the backrest or footrest, ensure the mechanism locks securely into place.

PACKAGE CONTENTS

Please check that all items are present and in good condition:

• 2 x tectake Aluminum Sun Loungers

SETUP AND INITIAL USE

Your tectake Aluminum Sun Loungers are delivered pre-assembled and ready for immediate use. No complex assembly is required.

Unfolding the Lounger:

- 1. Carefully remove the lounger from its packaging.
- 2. Place the folded lounger on a flat, stable surface.
- 3. Gently pull the frame apart until the lounger fully extends and locks into its open position. Ensure all legs are firmly on the ground.



Image: Two tectake aluminum sun loungers, unfolded and ready for use. A smaller inset image shows the loungers in their compact,

OPERATING INSTRUCTIONS

Adjusting the Backrest and Footrest:

The sun lounger features a 5-position adjustable backrest and a movable footrest for optimal comfort.

- 1. To adjust the backrest, gently lift the armrests and move the backrest to your desired angle. The mechanism will click into place at each of the five available positions.
- 2. The footrest can be moved independently to provide additional leg support or folded away when not needed.

PLATZ NEHMEN

& durchatmen



Image: A visual representation of the sun lounger's backrest being adjusted through its five different reclining positions, highlighting the flexibility for user comfort.

Folding the Lounger for Storage:

For compact storage and easy transport, the lounger can be guickly folded.

- 1. Ensure the backrest is in its most upright position.
- 2. Gently push the front and back legs towards each other until the lounger collapses into its folded state.
- 3. Secure any locking mechanisms if present (not explicitly mentioned but good practice).

tectake

Produktinformationen

ABMESSUNGEN

Totalmaße

59 x 146,5 x 117,5 cm

Maße geklappt

59 x 16 x 107,5 cm

Sitzfläche

41 x 45 cm

Sitzhöhe

48 cm

Höhe der Armlehnen

68 cm

Höhe der Rückenlehne

77.5 cm

Alle Maße sind ca.-Angaben

TECHNISCHE DATEN

Belastbarkeit 120 kg Gewicht ca. 4 kg Material Aluminium, Stahl, Polypropylen, Textilene, Polyurethan

LIEFERUMFANG

2 Stühle Bedienungsanleitung



Image: The tectake sun lounger shown in its fully folded, compact form, ideal for space-saving storage or transport.

Maintenance and Care

- Cleaning: Wipe down the aluminum frame and Textilene fabric with a damp cloth and mild soap. Rinse thoroughly with clean water and allow to air dry completely before folding or storing. Do not use abrasive cleaners or harsh chemicals.
- **Storage:** When not in use, especially during off-season or inclement weather, store the folded loungers in a dry, protected area to prevent damage from moisture, extreme temperatures, or UV exposure.

- **Inspection:** Periodically check all screws, bolts, and moving parts to ensure they are secure. Tighten any loose fasteners. Inspect the fabric for tears or excessive wear.
- Headrest: The headrest is removable for easy cleaning or adjustment.

ABSOLUT WIND- & wetterfest

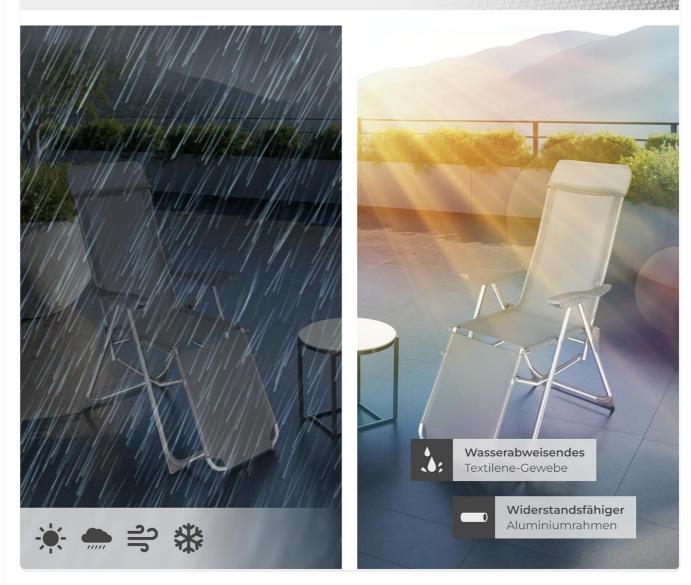


Image: A close-up view of the removable headrest, highlighting its design for added comfort and ease of maintenance.



Image: A detailed view of the anti-slip plastic caps on the lounger's feet, ensuring stability and protecting surfaces.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lounger feels unstable or wobbly.	Not fully unfolded; uneven surface; loose fasteners.	Ensure the lounger is fully extended and all legs are locked. Move to a flat, stable surface. Check and tighten all screws and bolts.
Backrest/footrest mechanism is stiff or not locking.	Dirt or debris in the mechanism; lack of lubrication; mechanism misalignment.	Clean the mechanism area. Apply a small amount of silicone-based lubricant if necessary. Ensure the backrest is lifted slightly before attempting to adjust.

Problem	Possible Cause	Solution
Fabric appears stretched or damaged.	Overload; prolonged exposure to harsh elements; sharp objects.	Ensure weight capacity is not exceeded. Store indoors when not in use. Avoid contact with sharp objects. If severely damaged, discontinue use.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	tectake
Color	Grey
Overall Dimensions (unfolded)	Approx. 146.5 cm (L) x 59 cm (W) x 117.5 cm (H)
Folded Dimensions	Approx. 59 cm (W) x 16 cm (D) x 107.5 cm (H)
Seat Height	Approx. 48 cm
Backrest Height	Approx. 77.5 cm
Armrest Height	Approx. 68 cm
Weight Capacity	120 kg (264 lbs)
Product Weight	Approx. 4.1 kg per chair
Materials	Aluminum frame, Polypropylene, Textilene, Polyurethane
Features	5-position adjustable backrest, movable footrest, removable headrest, foldable, lightweight, weather-resistant, anti-slip feet.



Image: A comprehensive diagram illustrating the key dimensions and technical data of the tectake sun lounger, including overall size, folded size, seat height, and weight capacity.

WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to your purchase documentation or contact tectake customer service directly. Contact details can typically be found on the seller's website or your order confirmation.

For further assistance, please visit the official tectake store:tectake Store on Amazon

Related Documents - 2er Set Alu Sonnenliege Liegestuhl Grau (B07KRD7WHG)



TecTake 402756 Home Gym Assembly and Exercise Guide

Instruction manual for the TecTake 402756 home gym, covering assembly, safety precautions, and exercise guidance. Includes preparation tips and warm-up/cool-down routines.



TecTake 400777 Semi-Automatic Washing Machine User Manual and Instructions

This user manual provides comprehensive instructions for the TecTake 400777 semi-automatic washing machine, covering installation, operation, safety guidelines, and maintenance. Learn how to effectively wash and spin your clothes with this efficient appliance.



 
Roller Blind Installation Manual

Comprehensive instruction manual for the installation of a roller blind, including parts list, assembly steps, and contact information for tectake.




Assembly Instructions for TecTake Wardrobe (Models 402485, 402940)

Comprehensive assembly instructions for TecTake wardrobe models 402485 and 402940, detailing parts list and step-by-step assembly guidance in multiple languages.



tectake Roskilde 6-Person Camping Tent Assembly Instructions

 Assembly guide for the tectake Roskilde 6-person camping tent, including parts list and step-by-step instructions. Model FRN230414013-V1.



Assembly Instructions for TecTake Tent (Models 404816-404820)

Step-by-step assembly guide for TecTake tents, including parts list and assembly diagrams. Covers models 404816, 404817, 404818, 404819, and 404820.