

Smoby 7600840205

Smoby 7600840205 Adventure Toy Car Instruction Manual

Model: 7600840205 | Brand: Smoby

1. INTRODUCTION

Thank you for choosing the Smoby 7600840205 Adventure Toy Car. This versatile play vehicle is designed to provide long-lasting fun for children aged 18 months and older, both indoors and outdoors. It combines the excitement of a toy car with a slide and a hidden sandpit, all constructed from high-quality, UV-stable plastic for durability.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Failure to follow these instructions may result in injury.

- **Age Recommendation:** Suitable for children from 18 months.
- **Maximum Weight:** The product is designed to support a maximum weight of 50 kg.
- **Adult Supervision:** Always ensure children are supervised by an adult while playing with this product.
- **Assembly:** Adult assembly is required. Ensure all parts are correctly and securely fastened before use.
- **Placement:** Place the toy car on a flat, stable surface away from hazards such as stairs, pools, or roads.
- **Slide Safety:** The slide features non-slip steps and an ergonomically shaped ladder with wide handles for safety. Ensure children use these features correctly.
- **Maintenance:** Regularly inspect the product for any damage or loose parts. Do not use if damaged.
- **Material:** Made from UV-stable plastic, resistant to weather and fading.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact

customer support.

- Toy car body components
- Steering wheel with horn and rotating key
- Slide components (1.50 m length)
- Sandpit container
- Assembly hardware (screws, caps, etc.)
- Instruction manual

4. SETUP AND ASSEMBLY

Adult assembly is required. Please follow the included graphical instructions carefully. A basic overview of the assembly process is provided below.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Assemble Car Body:** Connect the main car body sections according to the diagrams, ensuring all locking mechanisms or screws are securely fastened.
3. **Install Steering Wheel:** Attach the steering wheel to the designated area in the car's cockpit. Ensure the horn and rotating key functions are operational.
4. **Attach Slide:** Securely connect the slide to the rear section of the toy car. Verify that the non-slip steps and handholds are firmly in place.
5. **Insert Sandpit:** Place the sandpit container into the compartment located under the car's hood.
6. **Final Check:** Before first use, double-check all connections and ensure the product is stable and safe for play.



Figure 1: Fully assembled Smoby Adventure Toy Car, showcasing the car body and attached slide.

5. OPERATING INSTRUCTIONS

The Smoby Adventure Toy Car offers multiple play functions:

5.1 Car Play

- Two children can sit comfortably behind the steering wheel, simulating a real car.
- The steering wheel includes a functional horn and a rotating car key for an immersive driving experience.
- Children can enter the car from either the driver's or passenger's side.



Figure 2: Detail of the steering wheel, showing the horn button and rotating key for interactive play.

5.2 Slide Play

- The 1.50 m long slide provides a fun exit from the car.
- Ensure children use the non-slip steps and wide handholds when climbing to the slide.
- For warm weather, the slide can be converted into a water slide. Attach a standard garden hose (not included) to the connection point at the bottom of the slide.



Figure 3: The connection point for a garden hose to enable the water slide function.



Figure 4: Water spraying from the slide, indicating the water slide feature in use.

5.3 Sandpit Play

- Lift the hood of the car to reveal a hidden sandpit.
- Children can enjoy playing with sand or other small toys in this area.



Figure 5: The car's hood lifted to show the integrated sandpit, complete with sand and small toys.

6. MAINTENANCE

- **Cleaning:** The sandpit container can be easily removed for hygienic cleaning. Wipe down all plastic surfaces with a damp cloth and mild soap. Avoid abrasive cleaners.
- **Inspection:** Regularly check all parts for wear, damage, or loose connections. Tighten any loose screws.
- **Storage:** While the UV-stable plastic is resistant to weather, storing the product indoors or covering it during prolonged periods of harsh weather can extend its lifespan.
- **Water Slide:** After using the water slide feature, ensure the hose is disconnected and any remaining water is drained to prevent algae buildup.

7. TROUBLESHOOTING

- **Problem:** Parts do not fit during assembly.
Solution: Double-check the instruction manual diagrams. Ensure you are using the correct parts for each step and that they are oriented correctly. Do not force parts together.
- **Problem:** Product feels unstable after assembly.
Solution: Re-check all screw connections and locking mechanisms. Ensure the product is placed on a completely flat and level surface.
- **Problem:** Water slide feature is not working.
Solution: Ensure the garden hose is properly connected and secured to the designated port. Check for kinks in the hose or blockages in the water flow.
- **Problem:** Steering wheel horn or key not functioning.
Solution: Check for any obstructions. These are mechanical features and do not require batteries.

8. SPECIFICATIONS

Feature	Detail
Brand	Smoby
Model Number	7600840205
Product Dimensions (L x W x H)	233 x 68 x 91 cm
Item Weight	18 kg
Material	High-quality, UV-stable Plastic
Color	Multicolored
Age Recommendation	From 18 months
Maximum Weight Recommendation	50 kg
Slide Length	1.50 m
Assembly Required	Yes (Adult Assembly)
Country of Origin	France

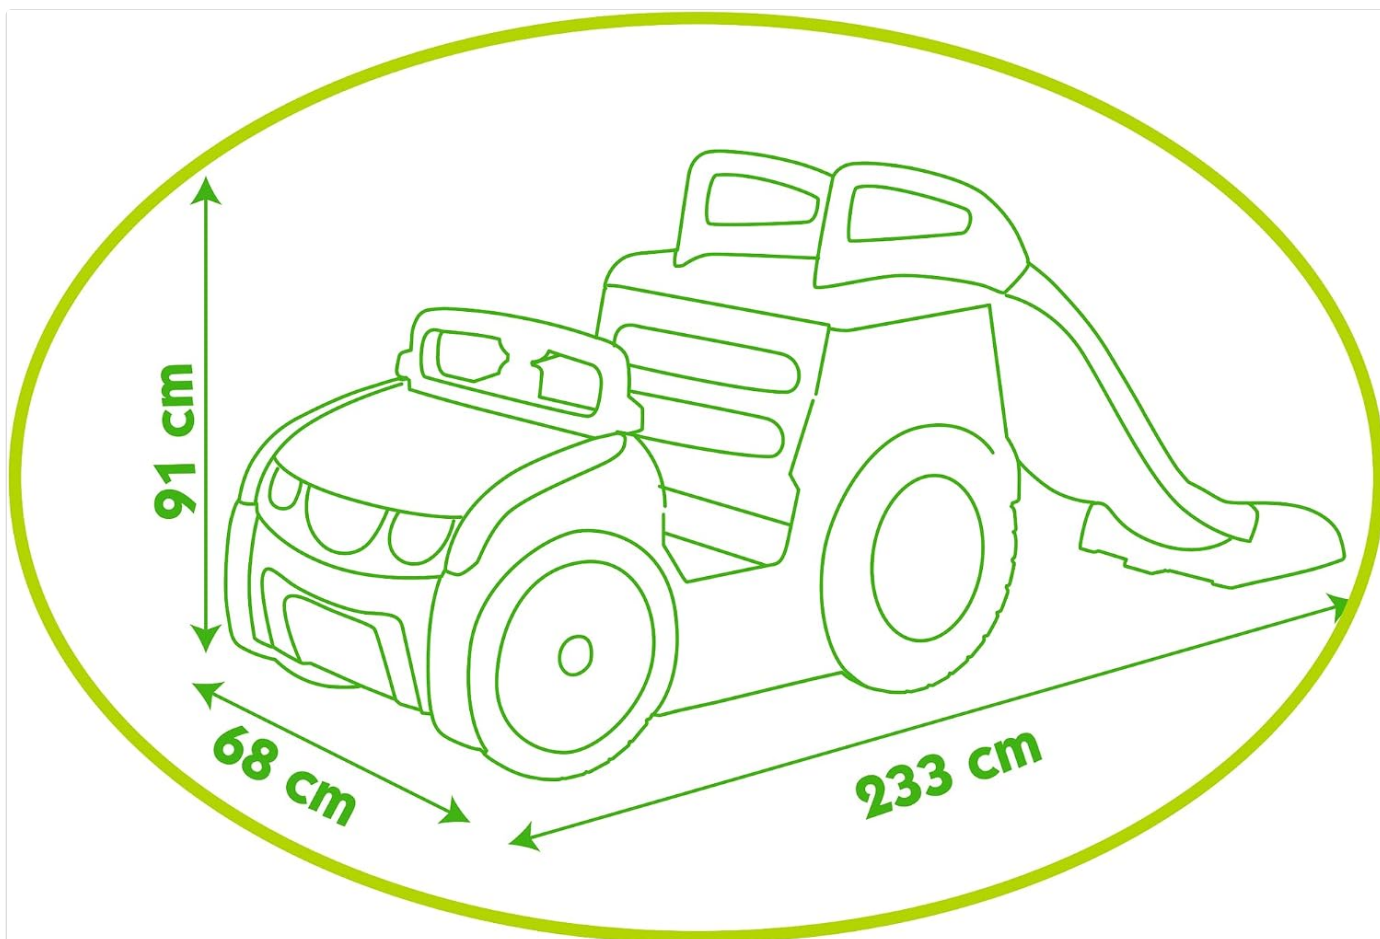


Figure 6: Dimensional diagram of the Smoby Adventure Toy Car (Length: 233 cm, Width: 68 cm, Height: 91 cm).

9. WARRANTY INFORMATION

Smoby products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Smoby website. Typically, warranty covers manufacturing defects under normal use conditions.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing/damaged part, please contact Smoby customer service. Contact information can usually be found on the product packaging or the official Smoby website.

Online Support: Visit the official Smoby website for FAQs and support contact details.

Retailer Support: For purchase-related inquiries, please contact the retailer where you purchased the product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question