

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [FINTIE](#) /

› [FINTIE Type Cover Wireless Bluetooth Keyboard for Microsoft Surface Pro 7/7 Plus/6/5/4/3 - User Manual](#)

FINTIE 18ac4b1b-5138-4af8-980a-135ea68b11f4

FINTIE Type Cover Wireless Bluetooth Keyboard User Manual

For Microsoft Surface Pro 7/7 Plus, 6, 5th Gen, 4, and 3

INTRODUCTION

This manual provides detailed instructions for the FINTIE Type Cover Wireless Bluetooth Keyboard. It is designed to enhance your Microsoft Surface Pro experience with comfortable typing and versatile functionality. Please read this manual carefully before using the product.



Image: FINTIE Type Cover Wireless Bluetooth Keyboard attached to a Microsoft Surface Pro tablet, showcasing its integrated design.

COMPATIBILITY

The FINTIE Type Cover Wireless Bluetooth Keyboard is compatible with the following Microsoft Surface Pro models:

- Microsoft Surface Pro 7+ (2021)
- Microsoft Surface Pro 7 (2019)
- Microsoft Surface Pro 6 (2018)
- Microsoft Surface Pro 5th Gen (2017)
- Microsoft Surface Pro 4
- Microsoft Surface Pro 3

Note: This keyboard is not compatible with the Surface 3 or any other devices not listed above.

PACKAGE CONTENTS

Please ensure all items are present in the package:

- 1 x FINTIE Backlit Bluetooth Keyboard
- 1 x USB Charging Cable
- 1 x User Manual (this document)

SETUP

1. Charging the Keyboard

Before initial use, fully charge the keyboard using the provided USB charging cable. Connect the small end of the USB cable to the keyboard's charging port and the larger end to a USB power source (e.g., computer, USB wall adapter).

- A full charge provides approximately 200 hours of usage without backlight or 5 hours with continuous backlight.
- Standby time can last up to 90 days on a full charge.

2. Powering On/Off

- To power on: Press and hold the power button for 1.5 seconds.
- To power off: Press and hold the power button for 3 seconds.

3. Bluetooth Pairing

Follow these steps to connect your keyboard to your Microsoft Surface Pro:

1. Ensure the keyboard is charged and powered on.
2. Press the **Fn + Esc (Bluetooth icon)** keys simultaneously on the keyboard to enter pairing mode. The Bluetooth indicator light will flash.
3. On your Microsoft Surface Pro, go to **Settings > Devices > Bluetooth & other devices**.
4. Turn on Bluetooth.
5. Select **Add Bluetooth or other device > Bluetooth**.
6. Locate and select the keyboard device (e.g., "Bluetooth Keyboard") from the list of available devices.
7. Follow any on-screen prompts to complete the pairing process. The Bluetooth indicator light on the keyboard will stop flashing once successfully paired.

BLUETOOTH WIRELESS CONNECTION

In-built advanced bluetooth chip guarantees fast, no-delay and stable connection. Attach or detach to connect your Surface Pro is both available, choose as you like.



Note: The valid connection distance is within **33 feet/10m**.

Image: Illustration of the FINTIE keyboard's Bluetooth wireless connection, demonstrating its use both attached to and detached from a Surface Pro tablet. The valid connection distance is up to 33 feet (10 meters).

OPERATING INSTRUCTIONS

1. Backlight Control

The keyboard features a 7-color LED backlight with adjustable brightness levels.

- To turn on the backlight: Press the **(Light icon)** key once.
- To increase brightness: Press the **(Light icon)** key a second time.
- To turn off the backlight: Press the **(Light icon)** key a third time.
- To change backlight colors: Press **(Light icon) + Up Arrow** or **(Light icon) + Down Arrow** keys. There are 7 optional colors.

Note: The backlight will not function until the keyboard is successfully paired with your device. The backlight will automatically turn off when the battery level is below 20% to conserve power.

For Surface Pro 6 / Surface Pro (5th Gen) / Surface Pro 4 / Surface Pro 3



Image: The FINTIE keyboard displaying its 7-color LED backlight feature, with examples of Blue, Yellow, Aquamarine, White, Green, Purple, and Red illumination.

2. Using the Trackpad

The integrated two-button trackpad allows for precise navigation and control of your Surface Pro without needing to touch the screen. It functions similarly to a traditional mouse.

SCISSOR SWITCHS

Scissor-style construction yields excellent resilience and bears more than 3 million clicks.



RESPONSIVE TRACKPAD

Conveniently using like a mouse, navigate and control your tablet precisely.

Image: A detailed view of the FINTIE keyboard, highlighting the responsive trackpad and the scissor-switch mechanism beneath the keys, designed for comfortable and durable typing.

3. Magnetic Attachment and Dual-Angle Adjustment

The keyboard attaches magnetically to your Surface Pro, providing a secure connection. It also allows for two different typing angles to suit your preference and comfort.

DUAL-ANGLE ADJUSTMENT

Attach to provide two different typing angles to meet your different needs.



Image: Diagram illustrating the dual-angle adjustment feature of the FINTIE keyboard, enabled by a powerful magnetic attachment strip, offering two distinct typing positions.

MAINTENANCE

1. Cleaning

To clean the keyboard, gently wipe the surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the finish or internal components.

2. Battery Care

- Charge the keyboard regularly, especially if it will be stored for an extended period, to maintain battery health.
- Avoid exposing the keyboard to extreme temperatures, which can affect battery performance and lifespan.

TROUBLESHOOTING

Keyboard Not Responding

- Ensure the keyboard is powered on and fully charged.
- Verify that Bluetooth is enabled on your Surface Pro and the keyboard is paired. If not, re-pair the device as described in the "Bluetooth Pairing" section.
- If the Bluetooth connection drops after waking from sleep, wait a few moments for the connection to re-establish or try toggling Bluetooth off and on on your Surface Pro.
- Restart both your Surface Pro and the keyboard.

Backlight Not Working

- Confirm the keyboard is successfully paired with your Surface Pro. The backlight will not activate until pairing is complete.
- Check the battery level. The backlight automatically turns off when the battery is below 20%. Charge the keyboard if necessary.

Trackpad Issues (e.g., Double Clicking)

- If the trackpad registers double clicks unexpectedly, try tapping lightly instead of pressing firmly for single clicks.
- Ensure your fingers are clean and dry when using the trackpad.

SPECIFICATIONS

Model Number	18ac4b1b-5138-4af8-980a-135ea68b11f4
Manufacturer	FINTIE
Product Dimensions	11.61" L x 8.5" W x 0.31" H (29.5 cm L x 21.6 cm W x 0.8 cm H)
Item Weight	1.1 pounds (0.5 kg)
Batteries	1 Lithium Polymer battery (included)
Connectivity Technology	Bluetooth 5.1
Keyboard Type	Wireless
Special Feature	Lightweight, Backlit (7-Color RGB)
Color	Black
Compatible Devices	Microsoft Surface Pro 7 Plus, 7, 6, 5, 4, 3



Image: A top-down view of the FINTIE keyboard with its dimensions labeled: 11.61 inches in length, 8.50 inches in width, and 0.31 inches in height.

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in this manual. For warranty details, technical support, or further assistance, please refer to the official FINTIE website or contact FINTIE customer service directly.

You can typically find contact information and support resources on the manufacturer's website: www.fintie.com