

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic Comb Attachment WER203K7398 Instruction Manual](#)

Panasonic WER203K7398

Panasonic Comb Attachment WER203K7398 Instruction Manual

Model: WER203K7398

INTRODUCTION

This manual provides essential instructions for the proper use and maintenance of your Panasonic Comb Attachment, model WER203K7398. This attachment is designed for use with specific Panasonic trimmer models, including ER-203, ER-2031, ER203K804, and ER2051. Please read these instructions thoroughly before use to ensure optimal performance and longevity of the product.



Image showing the Panasonic Comb Attachment WER203K7398, a black plastic attachment with a silver metal comb head, designed for precise trimming.

SETUP

Before attaching the comb, ensure your trimmer is turned off and disconnected from any power source. The attachment should be clean and free of debris.

- 1. Align the Attachment:** Carefully align the comb attachment with the trimmer head. The attachment is designed to fit securely onto the designated slot of compatible Panasonic trimmers.
- 2. Secure the Attachment:** Gently push the comb attachment onto the trimmer head until it clicks into place. Ensure it is firmly seated and does not wobble. Do not force the attachment, as this may cause damage.
- 3. Verify Installation:** Lightly tug on the attachment to confirm it is securely fastened before turning on the trimmer.

OPERATING INSTRUCTIONS

Once the comb attachment is securely installed, you can proceed with trimming. Always ensure your skin is clean and dry before use.

- 1. Power On:** Turn on your Panasonic trimmer.
- 2. Positioning:** Hold the trimmer with the comb attachment flat against the skin or at the desired angle for trimming.
- 3. Trimming:** Move the trimmer slowly and steadily against the direction of hair growth for an even trim. Avoid pressing too hard, as this can cause irritation or an uneven cut.
- 4. Cleaning During Use:** If hair accumulates in the comb, turn off the trimmer and gently tap or brush out the excess hair.

Your browser does not support the video tag.

Video demonstrating the installation and features of the Panasonic Comb Attachment, showing how it attaches to a compatible trimmer and its water-resistant design.

MAINTENANCE

Regular cleaning ensures hygiene and extends the life of your comb attachment.

- 1. Remove Attachment:** Turn off the trimmer and detach the comb attachment.
- 2. Rinse:** Rinse the comb attachment under running water to remove hair clippings and debris. The attachment is water-resistant.
- 3. Dry:** Allow the attachment to air dry completely before reattaching it to the trimmer or storing it. Ensure no moisture remains in crevices.
- 4. Storage:** Store the comb attachment in a clean, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- Attachment does not fit:** Ensure you are using the correct comb attachment (WER203K7398) for your specific Panasonic trimmer model (ER-203, ER-2031, ER203K804, ER2051). Do not force it.
- Uneven trimming:** Check if the attachment is securely fastened. Ensure the trimmer blades are clean and free of hair. Move the trimmer slowly and consistently.
- Reduced trimming performance:** Clean the attachment and trimmer blades thoroughly. If the issue persists, the trimmer blades may require sharpening or replacement (refer to your trimmer's manual).

SPECIFICATIONS

- Model:** WER203K7398
- Compatibility:** Panasonic Trimmer models ER-203, ER-2031, ER203K804, ER2051
- Material:** Durable plastic and metal
- Dimensions:** Approximately 8.5 x 3.5 x 5 cm
- Weight:** Approximately 0.03 Kilograms
- Origin:** Made in Japan

WARRANTY AND SUPPORT

This Panasonic product is manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your original trimmer purchase or visit the official Panasonic website. For technical support or further assistance, please contact Panasonic customer service.

You can find more information and support resources on the [Panasonic Store on Amazon](#).

