

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [iSonic](#) /
- › [iSonic D3800A-UK Ultrasonic Cleaner User Manual](#)

iSonic D3800A-UK

iSonic D3800A-UK Ultrasonic Cleaner User Manual

Model: D3800A-UK | Brand: iSonic

PRODUCT OVERVIEW

The iSonic D3800A-UK is an ultrasonic cleaner designed for effectively cleaning jewelry, eyeglasses, and watches. It utilizes ultrasonic waves to remove dirt and grime from hard-to-reach areas, restoring their original luster and clarity.



This image shows the iSonic D3800A-UK ultrasonic cleaner, a compact white device with a digital display and control buttons, accompanied by its UK standard three-pin plug.

IMPORTANT SAFETY INFORMATION

- This product is designed for **220V** power supply with a **UK plug**. It is **NOT** suitable for use in North America (USA, Canada) or regions with 110V power outlets.
- Do not immerse the main unit in water.
- Ensure the unit is unplugged before filling or emptying the tank.
- Do not operate the cleaner without liquid in the tank.
- Keep out of reach of children.
- For items like watches, ensure they are water-resistant before cleaning. Non-water-resistant watches should only have their bands cleaned.
- Avoid cleaning items with loose stones, scratches, or damage that could worsen during ultrasonic cleaning.

WHAT'S IN THE BOX

Your iSonic D3800A-UK Ultrasonic Cleaner package includes:

- iSonic D3800A-UK Ultrasonic Cleaner Unit
- Plastic Cleaning Basket
- Watch Stand
- Sample size of iSonic Jewelry/Eyewear Cleaning Solution Concentrate (CSGJ01)



This image displays the iSonic D3800A-UK ultrasonic cleaner alongside its accessories: a plastic cleaning basket, a watch stand, and a small bottle of cleaning solution concentrate.

SETUP

1. Place the ultrasonic cleaner on a stable, flat, and dry surface.
2. Open the lid and fill the stainless steel tank with water. For optimal cleaning, use tap water and a few drops of iSonic cleaning solution concentrate. Do not exceed the MAX fill line.
3. Close the lid.
4. Connect the UK plug to a compatible 220V power outlet.



This image shows a pair of eyeglasses submerged in water within the stainless steel tank of the iSonic D3800A-UK ultrasonic cleaner, ready for cleaning.

OPERATING INSTRUCTIONS

1. After setup, press the "ON" button to power on the unit. The digital display will show the default cleaning time

(e.g., 180 seconds).

2. Press the **"SET"** button repeatedly to cycle through the available cleaning time settings: 180, 280, 380, 480, and 90 seconds. Select the desired cleaning duration.
3. Place the items to be cleaned into the plastic basket. For watches, use the provided watch stand. Gently lower the basket into the tank, ensuring items are fully submerged.
4. Press the **"ON"** button again to start the cleaning cycle. The timer will count down.
5. The unit will automatically shut off when the cycle is complete.
6. To stop the cleaning cycle prematurely, press the **"OFF"** button.
7. Carefully remove the basket from the tank. Rinse the cleaned items under running water and dry them with a soft cloth.

Note: For heavily soiled items, multiple cleaning cycles or a fresh solution may be required.

MAINTENANCE AND CARE

- After each use, unplug the unit and empty the water from the tank.
- Wipe the stainless steel tank with a soft cloth to remove any residue. Do not use abrasive cleaners.
- Clean the exterior of the unit with a damp cloth. Do not use harsh chemicals.
- Store the cleaner in a cool, dry place when not in use.
- Do not leave water in the tank for extended periods to prevent mineral buildup.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; Power outlet issue; Unit malfunction.	Ensure the UK plug is securely inserted into a 220V power outlet. Test the outlet with another device. If the issue persists, contact customer support.
Cleaning results are poor.	Insufficient cleaning time; Incorrect solution concentration; Items too dirty; Tank overfilled.	Increase cleaning time. Add more cleaning solution concentrate. Pre-rinse heavily soiled items. Ensure water level is below MAX line.
Unit stops during cycle.	Cycle completed; Overheating protection activated.	Check the display to see if the timer reached zero. Allow the unit to cool down for 10-15 minutes before restarting if it feels warm.

SPECIFICATIONS

Model: D3800A-UK

Brand: iSonic

Power Supply: 220V, 50Hz

Power Consumption: 35W

Plug Type: UK Standard 3-pin plug

Tank Capacity: 0.6 Liters (1.3 US Pints)

Tank Material: Polished Stainless Steel

Tank Dimensions (Oval): 15.5 cm x 9.5 cm x 5.0 cm (6.1" x 3.7" x 2.0")

Unit Dimensions: 21 cm x 14.5 cm x 14 cm (8.3" x 5.7" x 5.5")

Weight: Approximately 1.36 kg (3 Pounds)

Digital Timer Settings: 90, 180, 280, 380, 480 seconds

Included Accessories: Plastic basket, Watch stand



This image provides a detailed view of the UK standard three-pin plug, indicating the specific power connection type for the iSonic D3800A-UK ultrasonic cleaner.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official iSonic website or contact your authorized dealer.

Authorized Dealers: Only Amazon and Joy4Less are authorized dealers for iSonic products. Purchases from unauthorized dealers may void the warranty.

Visit the iSonic Store: [iSonic Official Store on Amazon](#)