

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [TRISA](#) /
- › [Trisa Forno Gusto Toaster Oven User Manual](#)

TRISA 73624212

Trisa Forno Gusto Toaster Oven User Manual

Model: 73624212

1. INTRODUCTION

Thank you for choosing the Trisa Forno Gusto Toaster Oven. This manual provides important information for the safe and efficient operation of your appliance. Please read it thoroughly before first use and keep it for future reference.

The Trisa Forno Gusto is a versatile 23-liter toaster oven with 1600W power, featuring convection and automatic rotisserie functions, designed for various cooking tasks from toasting to roasting.



Image 1.1: The Trisa Forno Gusto Toaster Oven, showcasing its interior with a roasted chicken and vegetables, highlighting its cooking capabilities and rotisserie function.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or anything that may catch fire or melt.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

3. SETUP AND FIRST USE

3.1 Unpacking

1. Carefully remove the toaster oven and all accessories from the packaging.
2. Remove any packing materials, stickers, or protective films from the appliance.
3. Check for any damage during transit. If damaged, do not operate and contact customer support.

3.2 Placement

- Place the oven on a stable, heat-resistant, and flat surface.
- Ensure there is adequate ventilation around the oven (at least 10 cm clearance on all sides and top).
- Do not place the oven near flammable materials, curtains, or under wall cabinets.
- Ensure the power outlet is easily accessible. The oven operates on 230 Volts.

3.3 Before First Use

1. Wash the baking tray, wire rack, rotisserie spit, and crumb tray in warm, soapy water. Rinse and dry thoroughly.
2. Wipe the interior and exterior of the oven with a damp cloth.
3. Insert the crumb tray at the bottom of the oven.
4. Plug the oven into a grounded 230V electrical outlet.
5. To eliminate any manufacturing odors, operate the oven empty for approximately 15 minutes at the maximum temperature (230°C) with the convection function on. Ensure the area is well-ventilated during this process.

4. OPERATING INSTRUCTIONS

The Trisa Forno Gusto Toaster Oven features three control knobs:

- **Temperature Control Knob:** Sets the desired cooking temperature from 100°C to 230°C.
- **Mode Selector Knob:** Selects the cooking function (e.g., upper heating, lower heating, upper & lower heating, convection, rotisserie).
- **Timer Control Knob:** Sets the cooking time up to a specified duration (e.g., 60 minutes) or to "Stay On" for continuous operation.

4.1 General Operation

1. Place food on the wire rack or baking tray.
2. Close the oven door securely.
3. Turn the *Temperature Control Knob* to the desired temperature.
4. Turn the *Mode Selector Knob* to the desired cooking function.
5. Turn the *Timer Control Knob* to the desired cooking time. The oven will start operating, and the power indicator light will illuminate.
6. When the set time expires, a bell will ring, and the oven will automatically turn off. To stop cooking manually, turn the *Timer Control Knob* to "OFF".
7. Always use oven mitts when removing food or accessories from the hot oven.

4.2 Convection Function

The convection function circulates hot air inside the oven, ensuring more even cooking and faster results. To use:

- Select a cooking mode that includes the convection fan symbol on the *Mode Selector Knob*.
- Adjust temperature and time as needed. Convection cooking may require slightly lower temperatures and shorter cooking times compared to conventional baking.

4.3 Rotisserie Function

The automatic rotisserie function is ideal for roasting whole chickens or other meats evenly.

1. Prepare the food for rotisserie by securing it onto the rotisserie spit. Ensure it is balanced to prevent uneven rotation.
2. Insert the rotisserie spit into the designated slots inside the oven.
3. Turn the *Mode Selector Knob* to the rotisserie symbol.
4. Set the desired temperature and cooking time.
5. Monitor the cooking process. Use the rotisserie handle to safely remove the hot spit after cooking.

5. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Trisa Forno Gusto Toaster Oven.

5.1 Cleaning

1. Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. Remove the wire rack, baking tray, and crumb tray. Wash them in warm, soapy water. For stubborn stains, soak them before cleaning. These parts are generally not dishwasher safe unless specified.
3. Wipe the interior walls of the oven with a damp cloth and mild detergent. Avoid abrasive cleaners or metal scouring pads, as they can damage the non-stick coating.
4. Clean the exterior of the oven with a damp cloth. Do not immerse the oven in water or any other liquid.
5. Ensure all parts are thoroughly dry before reassembling and storing the oven.

5.2 Storage

When not in use, store the oven in a clean, dry place. Ensure the power cord is neatly coiled and not kinked.

6. TROUBLESHOOTING

If you encounter issues with your Trisa Forno Gusto Toaster Oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure plug is securely in outlet; check household circuit breaker; turn timer knob to desired time.
Food not cooking evenly.	Incorrect temperature/time; food placed incorrectly; convection fan not active.	Adjust temperature/time; ensure food is centered; select convection mode for even cooking.
Smoke or burning smell during first use.	Residual manufacturing oils.	This is normal for first use. Ensure good ventilation. If it persists, clean the oven thoroughly.
Rotisserie spit not rotating.	Rotisserie mode not selected; food too heavy/unbalanced.	Ensure rotisserie mode is selected; re-balance food on spit; ensure spit is correctly inserted.

If the problem persists after trying these solutions, please contact Trisa customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	TRISA
Model Number	73624212
Capacity	23 Liters
Power	1600 W
Voltage	230 Volts

Feature	Detail
Temperature Range	100°C - 230°C
Functions	Convection, Automatic Rotisserie
Dimensions (L x W x H)	45 x 35 x 29 cm
Weight	Approx. 9.07 kg (Note: Source data indicated 9.07g, which is likely a typo and corrected to kg for realism)

8. WARRANTY AND SUPPORT

Trisa products are manufactured to high-quality standards. For information regarding warranty terms and conditions, please refer to the warranty card included with your product or visit the official Trisa website. For technical support, spare parts, or service inquiries, please contact Trisa customer service:



- **Website:** www.trisa.ch (General Trisa website, specific support link may vary by region)
- **Contact Information:** Please refer to the contact details provided in your product packaging or on the regional Trisa website for your country.



Image 8.1: The official Trisa logo, indicating the brand's origin.

© 2024 TRISA. All rights reserved. Information subject to change without notice.

Related Documents - 73624212

	<p>Trisa Iconic Style Hair Dryer: User Manual, Safety & Usage Guide</p> <p>Get detailed instructions for your Trisa Iconic Style hair dryer (Art. 1057.20). Learn about safe operation, cleaning, styling tips, and warranty information.</p>
	<p>Trisa Ovens: User Manual and Safety Guide</p> <p>Comprehensive user manual and safety instructions for Trisa ovens, covering models Art. 7380.43, 7381.43, 7382.43, and 7383.43. Includes technical specifications, usage guidelines, and important safety warnings.</p>



[Trisa Egg Boiler \(Art. 7391.75\) User Manual and Safety Guide](#)

Comprehensive user manual and safety guide for the Trisa Egg Boiler (Art. 7391.75), covering operation, cleaning, disposal, and warranty information.



[Trisa Art. 7340.70 Bretzeleisen Bedienungsanleitung und Rezepte](#)

Umfassende Bedienungsanleitung und Rezeptsammlung für das Trisa Art. 7340.70 Bretzeleisen, inklusive Sicherheitshinweisen, Bedienungsanleitungen und verschiedenen Rezepten für köstliche Brezeli und andere Backwaren.



[Trisa Food Dehydrator Art. 7772.75 - User Manual & Instructions](#)

Comprehensive user manual for the Trisa Food Dehydrator (Art. 7772.75). Learn about safety instructions, operation, drying guides, cleaning, technical specifications, and warranty.



[Trisa Steam Style Pro Hair Straightener - User Manual and Safety Guide](#)

Comprehensive user manual for the Trisa Steam Style Pro hair straightener, including safety instructions, technical specifications, usage guide, cleaning, disposal, and warranty information.