

[manuals.plus](#) /› [Disney](#) /› [Disney Frozen 2 Magic in Motion Elsa Doll Instruction Manual](#)

Disney Disney Frozen 2 Feature

Disney Frozen 2 Magic in Motion Elsa Doll Instruction Manual

Model: Disney Frozen 2 Feature

INTRODUCTION

The Disney Frozen 2 Magic in Motion Elsa Doll is designed to bring the magic of Frozen 2 to life. This doll features synchronized mouth and head movements, sings "Show Yourself" from the movie, and displays an enchanting light show through her dress. This manual provides essential information for the proper setup, operation, and care of your Elsa doll.

IMPORTANT SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small Parts. Not suitable for children under 3 years due to small parts that could be swallowed. Adult supervision is recommended during play, especially for younger children. Always ensure battery compartment is securely closed. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Remove batteries if the product is not used for an extended period.

WHAT'S INCLUDED

Your Disney Frozen 2 Magic in Motion Elsa Doll package includes:

- 1 Elsa Doll
- 1 Doll Dress
- 1 Pair of Doll Shoes
- 3 AAA Batteries (pre-installed for "Try Me" mode)



Figure 1: Front view of the Disney Frozen 2 Magic in Motion Elsa Doll packaging.

SETUP INSTRUCTIONS

1. Unboxing the Doll

1. Carefully remove the doll from its packaging. You may need scissors to cut any plastic ties or tape securing the doll.
2. Ensure all components listed in the "What's Included" section are present.



Figure 2: Back view of the packaging, showing feature details and mode switch location.

2. Battery Installation and Mode Selection

The doll comes with 3 AAA batteries pre-installed in "Try Me" mode. For full functionality, it is recommended to switch to "ON" mode or replace batteries if performance is low.

1. Locate the battery compartment on the doll's back, typically under the dress.
2. Using a small Phillips head screwdriver, open the battery compartment cover.
3. Inside the compartment, you will find a switch. Move the switch from "Try Me" to the "ON" position.
4. If replacing batteries, insert 3 new AAA batteries, ensuring correct polarity (+/-).
5. Securely close the battery compartment cover with the screw.

OPERATING INSTRUCTIONS

Activating Elsa's Features

Once the doll is in "ON" mode, press the button located on Elsa's chest (often disguised as a necklace or part of her dress design) to activate her singing and light show.

- Elsa will sing a portion of "Show Yourself" from Disney's Frozen 2.
- Her head and mouth will move in synchronization with the music.
- A captivating light show will illuminate through her dress.



Figure 3: Child interacting with the singing Elsa doll.



Figure 4: Close-up of Elsa's moving mouth feature.





Figure 5: Elsa doll's dress displaying the captivating light show.

MAINTENANCE AND CARE

Cleaning the Doll

- To clean the doll's surface, gently wipe with a damp cloth. Do not immerse the doll in water, as this can damage electronic components.
- Avoid using harsh chemicals or abrasive cleaners.

Hair Care

- Elsa's hair can be gently combed and styled. Use a wide-tooth comb or doll brush to prevent tangling.
- Avoid excessive pulling or harsh brushing to maintain the hair's quality.



Figure 6: Elsa doll's long blonde hair, suitable for gentle styling.

Battery Replacement

- When the doll's performance diminishes (e.g., singing is faint, lights are dim, movements are slow), it's time to replace the batteries.

- Follow the battery installation steps outlined in the "Setup Instructions" section.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Doll does not sing or light up.	Batteries are low or depleted. Battery polarity is incorrect. Switch is in "Try Me" or "OFF" position.	Replace with new AAA batteries. Ensure batteries are inserted with correct +/- orientation. Move the switch in the battery compartment to the "ON" position.
Doll's movements are sluggish or sound is distorted.	Batteries are low.	Replace with new AAA batteries.
Hair is tangled.	Regular play and handling.	Gently comb with a wide-tooth comb or doll brush, starting from the ends and working upwards.

PRODUCT SPECIFICATIONS

- Model:** Disney Frozen 2 Feature
- Brand:** Disney (Manufactured by Jakks)
- Product Dimensions:** Approximately 12 x 4.75 x 15 inches (Length x Width x Height)
- Item Weight:** Approximately 1.81 pounds
- Batteries:** 3 x AAA batteries (included)
- Recommended Age:** 36 months - 6 years



Figure 7: Product dimensions of the Elsa doll.

WARRANTY INFORMATION

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the documentation included with

your purchase or contact the manufacturer directly. Proof of purchase may be required.

CUSTOMER SUPPORT

For further assistance, questions, or to report any issues with your Disney Frozen 2 Magic in Motion Elsa Doll, please contact the manufacturer, Jakks Pacific, through their official website or customer service channels. Please have your product model number (Disney Frozen 2 Feature) and proof of purchase available when contacting support.

Related Documents - Disney Frozen 2 Feature

	<p><u>Frozen II: Forest Spirit Board Game Rules and Instructions</u> Official rules and instructions for the Frozen II: Forest Spirit board game. Learn how to set up, play, and win this magical adventure game based on the Disney movie.</p>
	<p><u>6V Frozen 2 Quad Ride On - User Manual and Safety Guidelines</u> This document provides essential safety guidelines, vehicle care instructions, battery information, and assembly steps for the Disney Frozen 6V Quad Ride On toy, model KL-40052.</p>
	<p><u>Setting Up a Disney MagicMobile Pass for iPhone, Apple Watch, and Android Devices</u> Learn how to set up and use your Disney MagicMobile Pass on iPhone, Apple Watch, and Android smartphones with Google Wallet for seamless access to theme parks, Lightning Lane entrances, and more.</p>
	<p><u>Disney Frozen Bluetooth Wireless Stereo Headphones Instruction Manual</u> This manual provides instructions for using the Disney Frozen Bluetooth Wireless Stereo Headphones, including charging, pairing, controls, and troubleshooting.</p>
	<p><u>Disney Frozen Bluetooth Wireless Stereo Headphones Instruction Manual</u> Instruction manual for Disney Frozen Bluetooth Wireless Stereo Headphones, covering features, package contents, specifications, parts identification, charging, power on/off, Bluetooth pairing, controls, troubleshooting, safety precautions, cleaning, and disposal.</p>
	<p><u>Disney's Animal Kingdom Guide for Guests with Disabilities</u> A comprehensive guide for guests with disabilities visiting Disney's Animal Kingdom Theme Park, detailing accessibility services, amenities, attractions, dining, and park policies to ensure a safe and enjoyable experience.</p>

[\[pdf\]](#) Frequently Asked Questions Catalog



ToyCatalog 2019 final 119781 MicroShots Blaster Assorted SKU 6331368 \$9.99 each Nerf Fortnite SP-L Elite Dart 6331358 \$19 Sleepy Hat 6361133 files bbystatic d55306f183b76a1c0de9bf70d138ca31 file by path BestBuy US Gallery |||

BestBuy.com/Toys Code: 19-20-15 Pinkfong Baby Shark Puppet Assorted SKU: 6360431 19.99 each -1 ... SKUs: 6361145, 6361147 24.99 each SKUs: 6363854, 6363851 69.99 each Disney Frozen 2 Characters **Disney Frozen 2 Feature Elsa Doll Assorted** SKU: 6359501 14.99 each SKU: 6361146 34.99 10 1 Ter...

lang:en **score:13** filesize: 4.37 M page_count: 18 document date: 2019-11-08