

[Manuals.plus](#) /

› [Karcher](#) /

› Karcher MC 6445 Compact Stereo System User Manual

Karcher MC 6445

Karcher MC 6445 Compact Stereo System User Manual

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Karcher MC 6445 Compact Stereo System. Please read this manual thoroughly before using the device and retain it for future reference. Proper use ensures optimal performance and extends the product's lifespan.

Safety Information

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation; do not block any ventilation openings.
- Place the unit on a stable, flat surface.
- Only use attachments/accessories specified by the manufacturer.
- Disconnect the power plug during lightning storms or when unused for long periods.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Karcher MC 6445 Main Unit
- Stereo Speakers (2 units)
- Remote Control
- Wire Antenna (FM)
- Power Cord
- User Manual (this document)

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Karcher MC 6445 Compact Stereo System.

Main Unit and Speakers



Image: Front view of the Karcher MC 6445 Compact Stereo System, showing the central unit with an LED display, volume knob, and control buttons, flanked by two black stereo speakers.



Image: Angled view of the Karcher MC 6445 Compact Stereo System, highlighting the sleek black finish and the arrangement of the main unit and speakers.

Remote Control



Image: The remote control for the Karcher MC 6445, featuring buttons for power, source selection, CD functions, FM tuning, volume, and equalizer settings.

4. SETUP

4.1 Speaker Connection

1. Connect the speaker wires from the left speaker to the LEFT speaker terminals on the main unit.
2. Connect the speaker wires from the right speaker to the RIGHT speaker terminals on the main unit.
3. Ensure correct polarity (positive to positive, negative to negative) for optimal sound quality.

4.2 FM Antenna Connection

Connect the supplied wire antenna to the FM antenna input on the rear of the main unit. Extend the antenna for better reception.

4.3 Power Connection

Plug the power cord into the AC IN socket on the rear of the main unit, then plug the other end into a standard wall outlet (AC 230V ~ 50Hz).

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the **POWER** button on the front panel or remote control to turn the unit on or off.

5.2 Source Selection

Press the **SOURCE** button on the front panel or remote control repeatedly to cycle through available input sources: CD, FM, USB, LINE IN.

5.3 CD Playback

1. Select the **CD** source.
2. Open the CD tray and place a CD (CD, CD-R/-RW, MP3-CD) with the label side facing up.
3. Close the CD tray. The unit will read the disc and begin playback automatically.
4. Use **PLAY/PAUSE**, **STOP**, **SKIP FORWARD/BACKWARD** buttons for control.
5. Press **REPEAT** for single track or all track repeat.
6. Press **RANDOM** for shuffled playback.
7. Use **PROG** to program a custom playback sequence.

5.4 FM Radio Operation

1. Select the **FM** source.
2. Press **AUTO** on the remote control to automatically scan and store up to 30 available stations.
3. Use **TUN+/-** buttons to manually tune to a station or navigate through presets.

5.5 USB Playback

1. Select the **USB** source.
2. Insert a USB flash drive containing MP3 files into the USB port.
3. The unit will automatically detect and begin playing MP3 files.
4. Use playback controls similar to CD mode.

5.6 LINE IN (AUX)

1. Select the **LINE IN** source.
2. Connect an external audio device (e.g., smartphone, tablet, MP3 player) to the LINE IN (3.5mm) port on the front panel using an audio cable (not supplied).
3. Audio from the external device will now play through the stereo system. Control playback from the external device.

5.7 Volume and Equalizer

- Adjust the volume using the **VOLUME** knob on the main unit or the **VOL+/-** buttons on the remote control.
- Press the **EQ** button on the remote control to cycle through preset equalizer modes (e.g., Rock, Pop, Classic, Flat).

6. REMOTE CONTROL FUNCTIONS

The remote control provides convenient access to all functions of your Karcher MC 6445. Ensure the remote control

is pointed towards the main unit's sensor.

- **POWER:** Turns the unit on/off.
- **SOURCE:** Selects input source (CD, USB, FM, LINE IN).
- **CD/USB Playback Controls:** Play/Pause, Stop, Skip Forward/Backward, Folder Up/Down, Repeat, Random, Program.
- **FM Radio Controls:** FM, Auto Scan, TUN+/- (manual tuning/preset navigation), 10+/- (jump 10 presets).
- **VOL+/-:** Adjusts volume.
- **MUTE:** Mutes/unmutes audio.
- **EQ:** Selects equalizer presets.

7. MAINTENANCE

7.1 Cleaning

- Always unplug the unit from the power outlet before cleaning.
- Use a soft, dry cloth to clean the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- For the CD lens, use a specialized CD lens cleaner disc.

7.2 Storage

If the unit will not be used for an extended period, unplug it from the power outlet and store it in a cool, dry place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Before contacting support, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet faulty	Ensure power cord is securely plugged in; Try a different outlet
No sound	Volume too low; Mute activated; Speakers not connected; Incorrect source selected	Increase volume; Deactivate mute; Check speaker connections; Select correct source
CD not playing	CD inserted incorrectly; Disc scratched/dirty; Disc format not supported	Insert CD correctly; Clean or replace disc; Ensure disc is CD, CD-R/-RW, or MP3-CD
Poor FM reception	Antenna not extended; Weak signal	Extend and adjust the wire antenna; Try repositioning the unit
USB not recognized	USB drive not formatted correctly; Incompatible file types; Drive too large	Ensure USB is FAT32 format; Only MP3 files are supported; Try a different USB drive
Remote control not working	Batteries depleted; Obstruction between remote and unit	Replace batteries; Remove any obstructions; Point remote directly at the unit's sensor

9. SPECIFICATIONS

- **Model:** MC 6445
- **Power Source:** AC 230V ~ 50Hz
- **Output Power:** 2 x 15 Watts RMS
- **CD Compatibility:** CD, CD-R/-RW, MP3-CD
- **Radio Tuner:** FM (with 30 station presets)
- **Connectivity:** USB (for MP3 playback), Line-In (3.5 mm)
- **Dimensions (Main Unit):** 18 x 12.1 x 23.8 cm (W x H x D)
- **Dimensions (Speaker):** 12.6 x 21.3 x 15 cm (W x H x D)
- **Weight:** Approximately 3.48 kg
- **Special Features:** Remote control, Audio equalizer, LED display

10. WARRANTY AND SUPPORT

Karcher products are designed for reliability and performance. This product comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Karcher website.

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact Karcher customer support. Contact details can typically be found on the Karcher website or in your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07KW12Q7W>

More documents and user manuals: <https://manuals.plus/>