

Manuals.plus /

- › Disney Princess /
- › Disney Princess Style Collection Cash Register Manual - Model 202411

## Disney Princess 202411

# Disney Princess Style Collection Cash Register Shop 'N Play Market Set

MODEL: 202411

## Introduction

This manual provides instructions for the Disney Princess Style Collection Cash Register Shop 'N Play Market Set. This interactive toy is designed to enhance imaginative play with features such as realistic sounds, phrases, and a working calculator. It includes various play pieces to simulate a shopping experience.



Image: The Disney Princess Style Collection Cash Register set, including the pink cash register, a shopping basket, play

money, a credit card, and various play food items.

## Important Safety Information

**WARNING: CHOKING HAZARD** – Small parts. Not suitable for children under 3 years due to small parts which could be swallowed.

- Always supervise children during play.
- Keep batteries out of reach of small children.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

## What's in the Box

The Disney Princess Style Collection Cash Register Shop 'N Play Market Set includes the following components:

- 1 x Cash Register with drawer for storage
- 1 x Water-Activated Stylus
- 12 x Pieces of Play Money
- 1 x Play Credit Card
- 1 x Shopping Basket
- 5 x Chip Art Food Containers



Image: A top-down view of all included items: the pink cash register, play money, coins, a credit card, a shopping basket, and various play food boxes.

## Setup

### Battery Installation

1. Locate the battery compartment on the underside of the cash register.
2. Using a Phillips head screwdriver (not included), unscrew the battery compartment cover.
3. Insert 2 x AAA batteries (included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

### Initial Assembly

The cash register comes pre-assembled. Ensure the stylus is securely attached to its holder on the side of the register.



Image: The back of the pink cash register, highlighting the battery compartment and the stylus holder.

## Operating Instructions

### Power On/Off

Press the power button (usually located on the side or front) to turn the cash register on. It will emit a welcoming sound or phrase. To turn off, press the power button again or it may automatically power off after a period of inactivity.

### Using the Calculator

- Use the numbered buttons (0-9) to input prices.
- Press the '+' or '-' buttons for basic arithmetic operations.

- Press the 'TOTAL' button to display the final sum.
- Press 'C' to clear the current entry.

### Interactive Item Buttons

The cash register features several picture buttons representing different items (e.g., cupcakes, apples, dresses). Pressing these buttons will trigger unique sounds and phrases related to the item, enhancing imaginative play.

### Cash Drawer Operation

To open the cash drawer, press the crown-shaped button located on the front of the register base. The drawer will spring open, allowing access to the play money and coins. Push the drawer firmly to close it.



Image: The pink cash register with its drawer open, revealing compartments for play money and coins. A shopping basket with play food is next to it.

### Credit Card Swipe Feature

Insert the play credit card into the slot on the side of the cash register and swipe it through. The register will play a sound indicating a successful transaction.

### Water-Activated Signature Pad

To use the signature pad, dip the tip of the included stylus in water. Then, use the wet stylus to "sign" on the designated pad area on the register. The water will temporarily reveal a signature, which fades as it dries.

### Maintenance

- Wipe the cash register and accessories with a soft, damp cloth. Do not immerse in water.

- Avoid using harsh chemicals or abrasive cleaners.
- Store the toy in a cool, dry place away from direct sunlight when not in use.
- Remove batteries if the toy will not be used for an extended period to prevent leakage.

## Troubleshooting

---

### No Power or Sound

- Ensure batteries are correctly installed with the proper polarity.
- Replace old batteries with new ones.
- Check if the power button is pressed firmly.

### Cash Drawer Not Opening

- Check for any obstructions preventing the drawer from opening.
- Ensure the crown button is pressed completely.

## Specifications

---

<b>Product Dimensions</b>	16 x 4.5 x 11 inches
<b>Item Weight</b>	2.05 pounds
<b>Model Number</b>	202411
<b>Recommended Age</b>	36 months - 6 years
<b>Batteries Required</b>	2 x AAA (included)
<b>Manufacturer</b>	Jakks Pacific Inc.

## Warranty and Support

---

For warranty information or customer support, please contact Jakks Pacific Inc. directly. Refer to the product packaging or their official website for the most current contact details and warranty policies.