

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Disney Princess](#) /
- › [Disney Princess Style Collection Laptop User Manual](#)

Disney Princess 216761

Disney Princess Style Collection Laptop User Manual

Model: 216761
Brand: Disney Princess

INTRODUCTION

The Disney Princess Style Collection Laptop is an interactive electronic learning toy designed for imaginative play. It features multiple play modes, sounds, and music to provide an engaging experience for young users. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new laptop.



Image: The Disney Princess Style Collection Laptop in its closed position, showcasing its compact and stylish design.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small Parts.

This product contains small parts and is not suitable for children under 3 years of age. Adult supervision is recommended during play. Ensure all components are used as intended to prevent accidental ingestion or injury.

WHAT'S IN THE BOX

Carefully unpack all contents and ensure you have the following items:

- 1 x Disney Princess Style Collection Laptop
- 2 x Double-Sided Desktop Screens (4 unique screens total)
- 1 x Pair of Play Ear Buds with Case
- 1 x Sticker Sheet for Customization



Image: All included items for the Disney Princess Style Collection Laptop, ready for assembly and play.

SETUP

Battery Installation

The Disney Princess Style Collection Laptop requires 3 LR44 button cell alkaline batteries (included). To install or replace batteries:

1. Locate the battery compartment on the underside of the laptop.
2. Using a small Phillips head screwdriver (not included), loosen the screw and open the battery compartment cover.
3. Insert 3 LR44 button cell batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and tighten the screw securely.

Inserting Desktop Screens

The laptop comes with two double-sided desktop screens that slide into the screen slot to change the display. Choose your desired screen and gently slide it into the top slot of the laptop's screen area until it is securely in place.



Image: Demonstrating the insertion of a double-sided screen card into the laptop's display slot.

Customization

Use the included sticker sheet to personalize your Disney Princess Style Collection Laptop. Apply stickers to the laptop's surface as desired.



Image: A child enjoying the laptop, with the included stickers and play earbuds, highlighting the customization feature.

OPERATING INSTRUCTIONS

The Disney Princess Style Collection Laptop offers 5 modes of play with over 15 phrases, sounds, and music. To begin, open the laptop and press the power button located on the top right of the keyboard area.

Play Modes

The laptop features five distinct play modes, corresponding to the icons on the F-keys and the double-sided screen cards:

- **Free Play Mode:** Each key on the keyboard independently clicks, providing a realistic typing experience.
- **Music Mode:** Press the music icon (F5) to play various musical tunes and sound effects.
- **Shopping Mode:** Engage in pretend shopping scenarios by pressing the shopping cart icon (F7).
- **Email Mode:** Simulate sending and receiving emails with phrases and sounds by pressing the envelope icon (F4).
- **Video Chat Mode:** Experience pretend video calls with Disney Princesses by pressing the video camera icon (F6).



Image: A child engaged in play with the laptop and earbuds, showcasing the interactive features.



Image: The laptop in action, illustrating the music mode with visual sound effects.

Play Ear Buds

The included play ear buds are for pretend play and do not produce actual sound. They are designed to enhance the role-playing experience.

MAINTENANCE

- **Cleaning:** Wipe the laptop and accessories with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the laptop in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage. Dispose of old batteries responsibly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Laptop does not turn on or has no sound.	Batteries are low, dead, or incorrectly installed.	Replace batteries with new LR44 button cells, ensuring correct polarity.
Sound is distorted or too quiet.	Low batteries.	Replace batteries.
Screen cards do not stay in place.	Incorrect insertion or damage to the card/slot.	Ensure the card is fully inserted into the designated slot. Check for any obstructions or damage.

SPECIFICATIONS

Product Dimensions: 9 x 3 x 9.25 inches

Item Weight: 11.3 ounces

Model Number: 216761

Manufacturer Recommended Age: 36 months - 6 years

Batteries: 3 x LR44 button cell alkaline batteries (included)

Manufacturer: Jakks Pacific Inc.

Release Date: June 30, 2021

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official Disney Princess website. Keep your purchase receipt as proof of purchase.