

BEEM 7204 3008C

BEEM Samovar 7204 3008C Instruction Manual

Model: 7204 3008C | Brand: BEEM

1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the BEEM Samovar 7204 3008C. This instruction manual provides important information for the safe and efficient operation, maintenance, and care of your new appliance. Please read this manual thoroughly before first use and keep it for future reference.

Important Safety Instructions:

- Always ensure the appliance is placed on a stable, heat-resistant surface.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Always ensure the water level is between the MIN and MAX marks to prevent dry boiling or overfilling.
- Use only original BEEM accessories and spare parts.

2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your BEEM Samovar 7204 3008C:





Figure 2.1: The BEEM Samovar 7204 3008C with its teapot placed on top, showcasing its polished stainless steel finish.

This image displays the complete samovar unit, including the main water boiler and the smaller teapot designed to sit on top. The unit features a polished stainless steel exterior, side handles, and a dispensing tap.



Figure 2.2: All components of the BEEM Samovar 7204 3008C, including the main boiler, teapot, lid, tea infuser, drip tray, and tap assembly.

This image shows the samovar disassembled into its main parts: the large water boiler, the smaller teapot, the lid for the boiler, the removable tea infuser, the drip tray, and the tap assembly. This view helps in understanding how to clean and assemble the unit.

Key Components:

- **Main Water Boiler (8 Liters):** Constructed from high-quality 18-10 stainless steel with a mirror-polished exterior and a polished interior.
- **Teapot (1.5 Liters):** Designed to sit on top of the main boiler, keeping tea warm.
- **Removable Tea Infuser:** For brewing loose leaf tea directly in the teapot.
- **Water/Limescale Particle Filter:** Removable, made of stainless steel, located inside the main boiler.
- **Dispensing Tap:** For drawing hot water or tea concentrate. Features stable insulated metal fittings with high-quality

porcelain inserts.

- **Temperature Control Knob:** Located on the base for adjusting heating.
- **On/Off Button:** Integrated into the container.
- **Hidden Heating Elements:** Two heating elements (2000W and 500W) for rapid boiling and continuous warming.
- **Drip Tray:** Collects any drips from the tap.

3. SETUP AND FIRST USE

3.1 Unpacking and Initial Cleaning:

1. Carefully remove all packaging materials and inspect the samovar for any damage.
2. Before first use, clean all removable parts (teapot, infuser, lid, drip tray, tap assembly) with warm soapy water. Rinse thoroughly and dry.
3. Wipe the interior and exterior of the main water boiler with a damp cloth. Do not immerse the main unit in water.

3.2 Assembly:

1. Place the main water boiler on a stable, level, and heat-resistant surface.
2. Ensure the dispensing tap is securely attached.
3. Place the drip tray underneath the tap.
4. Position the lid on the main water boiler.
5. Place the teapot on top of the lid. If using the tea infuser, insert it into the teapot.

3.3 First Operation (Cleaning Cycle):

1. Fill the main water boiler with clean water up to the MAX mark. Do not add tea or other liquids during this cycle.
2. Plug the power cord into a grounded electrical outlet.
3. Turn the temperature control knob to the maximum setting (boil). The indicator light will illuminate.
4. Allow the water to boil for approximately 15-20 minutes.
5. Carefully dispense all the hot water through the tap into a sink.
6. Unplug the samovar and let it cool completely.
7. Repeat this process once more to ensure thorough cleaning and removal of any manufacturing residues.

4. OPERATING INSTRUCTIONS

4.1 Preparing Tea:

1. Ensure the samovar is clean and properly assembled.
2. Fill the main water boiler with fresh, cold water. Observe the MIN and MAX fill lines.
3. Place your desired amount of loose leaf tea into the removable tea infuser.
4. Insert the infuser into the teapot and place the teapot on top of the samovar lid.
5. Plug the samovar into a grounded outlet.
6. Turn the temperature control knob to the maximum setting to bring the water to a boil (approximately 98°C). The 2000W heating element will activate for rapid boiling.

7. Once the water boils, the samovar will automatically switch to the 500W warming element to maintain the temperature.
8. Pour some hot water from the main boiler into the teapot to brew your tea concentrate. Adjust the brewing time according to your preference.

4.2 Dispensing Hot Water or Tea:

1. To dispense hot water, place a cup or mug under the tap and push the tap lever down. Release the lever to stop the flow.
2. To serve tea, first pour a small amount of tea concentrate from the teapot into your cup. Then, dilute it to your desired strength with hot water from the main samovar tap.

4.3 After Use:

1. When you are finished using the samovar, turn the temperature control knob to the "OFF" position and unplug the appliance from the wall outlet.
2. Allow the samovar to cool completely before cleaning.

5. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your BEEM Samovar.

5.1 Daily Cleaning:

1. Always unplug the samovar and allow it to cool completely before cleaning.
2. Empty any remaining water from the main boiler and tea from the teapot.
3. Remove the teapot, infuser, lid, and drip tray. These parts are dishwasher safe.
4. Clean the interior of the main boiler with a soft brush or sponge and warm soapy water. Rinse thoroughly.
5. Wipe the exterior of the samovar with a damp cloth and then dry with a soft, clean cloth to maintain its mirror finish.
6. Ensure all parts are completely dry before reassembling or storing.

5.2 Descaling:

Depending on the hardness of your water, limescale deposits may build up over time. Regular descaling is recommended to maintain efficiency.

1. Mix a descaling solution according to the manufacturer's instructions (e.g., citric acid solution or commercial descaler).
2. Pour the solution into the main water boiler up to the MAX mark.
3. Turn on the samovar and allow the solution to heat up, but do not boil. Let it sit for 30-60 minutes, or as recommended by the descaler product.
4. Carefully drain the solution through the tap.
5. Rinse the boiler thoroughly several times with fresh water, boiling and draining clean water at least twice to remove any descaler residue.
6. Remove and clean the stainless steel water/limescale particle filter as needed.

6. TROUBLESHOOTING

If you encounter issues with your BEEM Samovar, please consult the following table before contacting customer service.

Problem	Possible Cause	Solution
Samovar does not heat up.	Not plugged in; power switch off; faulty outlet.	Check power cord connection; ensure temperature knob is turned on; test outlet with another appliance.
Water takes too long to boil.	Limescale buildup; low power setting; large volume of water.	Descalc the samovar (see Section 5.2); ensure temperature knob is set to maximum for boiling; boiling large volumes naturally takes longer.
Water leaks from the tap.	Tap not fully closed; tap assembly loose or damaged.	Ensure tap lever is fully released; check if the tap assembly is securely tightened. If damage is suspected, contact customer support.
Tea infuser or teapot does not fit correctly.	Incorrect placement; not original parts.	Ensure the teapot is placed centrally on the samovar lid. Use only original BEEM accessories.

7. TECHNICAL SPECIFICATIONS

- Brand:** BEEM
- Model Number:** 7204 3008C
- Material:** 18-10 Stainless Steel
- Color:** Stainless Steel
- Main Water Boiler Capacity:** 8 Liters
- Teapot Capacity:** 1.5 Liters
- Power:** 2500 W (2000 W for boiling, 500 W for warming)
- Dimensions (L x W x H):** 35.3 x 37.5 x 58.9 cm (approximately 13.9 x 14.8 x 23.2 inches)
- Item Weight:** 5 Kilograms (approximately 11 lbs)
- Automatic Shut-off:** Yes
- Dishwasher Safe Parts:** Teapot, infuser, lid, drip tray (main unit is not)
- Country of Origin:** Germany

8. WARRANTY INFORMATION

This BEEM Samovar is covered by the manufacturer's warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

For warranty service or claims, please contact the retailer where the product was purchased or the BEEM customer service department directly.

9. CUSTOMER SUPPORT

If you have any questions, require technical assistance, or need to order spare parts, please contact BEEM customer support. Contact details can typically be found on the BEEM official website or on the product packaging.

When contacting support, please have your model number (7204 3008C) and purchase date readily available.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question